
DESIRE

DESIRE RD

PISTOL CROSSBOW MANUAL

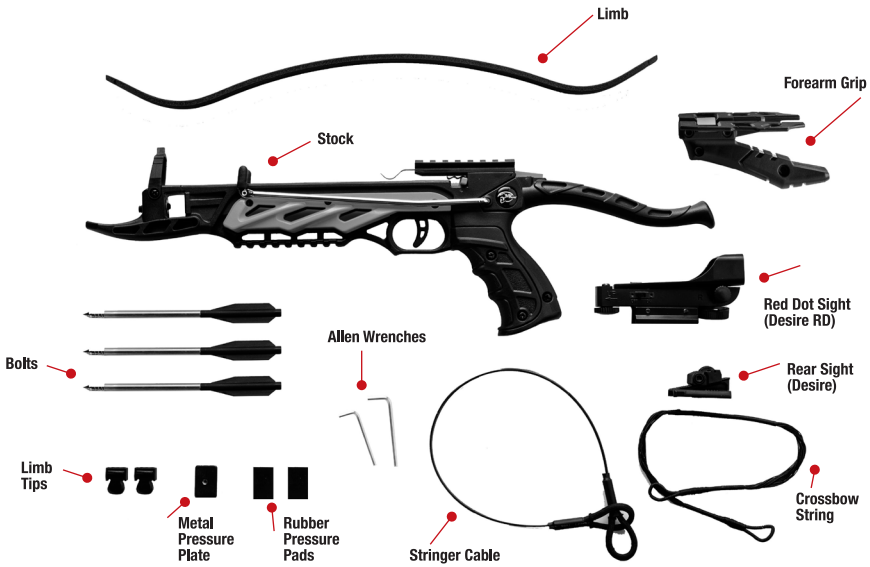

⚠ WARNING

ALWAYS be sure of your target and beyond.
Misuse or careless handling of this product can cause serious injury or even death.
This is not a toy. It is a high poundage crossbow capable of shooting projectiles over 200 yards. It is intended for use by persons 18 years of age or older.
Discontinue use if the crossbow becomes damaged.
It is highly recommended to use eye protection while using this product.
Keep your fingers clear of the travel path of strings and or cables.
NEVER transport your crossbow cocked.
NEVER leave your crossbow cocked for longer than 12 hrs.
NEVER dry-fire your crossbow. This can damage the crossbow and will void your warranty

⚠ CAUTION

- **Please read and follow all instructions carefully.**
- **It is recommended that a Qualified Archery Pro Shop set up the crossbow.**
- **The crossbow should be used in accordance with all applicable laws.**
- **It is recommended to lube the rail every 10 to 15 shots.**
- **Replace strings and or cables every year, or at the first sign of wear or fraying.**

BEAR X CROSSBOWS WARRANTY STATEMENT

All Bear X Crossbows are backed by a limited lifetime warranty to the original owner covering defects in material and workmanship. This warranty applies to limbs, risers, and cams. This warranty consists of the following programs:
Limbs: 100% covered at no charge for the first 5 years, 50% of replacement cost after.
Riser/Rail: Lifetime Warranty
Cams: Lifetime Warranty
Stock: Lifetime Warranty

ORIGINAL OWNER

Warranty applies only to the original owner/purchaser from a Bear Archery authorized dealer and is not transferable. Proof of purchase required.

ITEMS NOT COVERED

Damage to strings, cables, bearings, paint, and/or film dipped finished resulting from normal wear and tear are not covered in this warranty

DAMAGE NOT COVERED

Damage caused by abuse, mishandling, dry firing, alteration or modification made to original products are not covered under this warranty. The use of any bow press other than those approved by Bear Archery will void this warranty. Additionally, shooting of arrows less than 360 grains will void this warranty. Refer to the arrow Specification Page. Warranty coverage is at Bear Archery's sole discretion.

BOW WARRANTY REGISTRATION

For this warranty to be in effect, the on-line warranty registration process must be completed at beararchery.com and submitted within 30 days of purchase.
In the event a bow requires warranty service, please contact the Bear Archery customer service department at 800-694-9494 for a return authorization (RA) number and return shipping instructions. For full warranty details, please log on to beararchery.com for further information.
For Patent information go to beararchery.com/legal-notices

CONTACT DATA

Toll Free Number 800-694-9494
Fax Number 812-467-1245
Web: www.beararchery.com

Assembly



1. Insert limb into stock to the white line. Place one rubber pressure pad between bow and limb, place other rubber pressure pad on the front of the limb, then place metal pressure pad between rubber pad and limb retaining screw. Do not over tighten.



2. Insert plastic limb tip tight to both sides on the limb.



3. Remove the 2 screws from the forearm grip. Then slide the forearm grip on to the rail under the crossbow. Secure the forearm grip to the crossbow using the 2 screws.


Stringing Instructions




1. Attach the crossbow string around one limb tip.




2. Pull crossbow string tight across rail towards opposite limb tip.

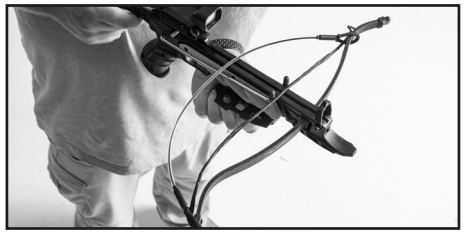

3. Attach stringer cable around the limb on the opposite side.

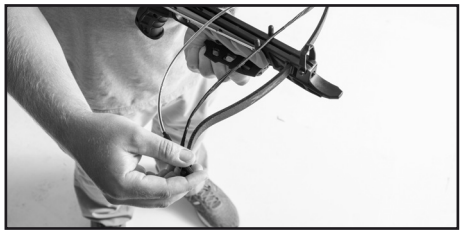

4. Attach stringer cable around the limb tip you attached the bow string to.

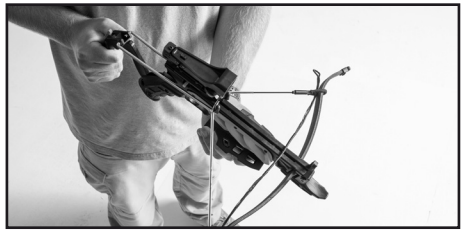

5. Cock crossbow with stringer cable.



6. Thread crossbow string thought stringer cable loop and attach to limb tip.



7. Point crossbow in a safe direction and move safety to fire and pull trigger to release stringer.



8. Remove stringer cable from crossbow.

Cocking



While holding the crossbow with the left hand pull the cocking mechanism down to cock the crossbow. The safety latch will automatically engage. Return cocking mechanism to original position. The crossbow is now ready to accept the bolt.

Loading



Place bolt on track as shown. Make sure bolt is fully back against the trigger mechanism. DO NOT AIM AT ANYONE.

Shooting



To Shoot: Slide the operating switch from SAFE to FIRE position

⚠CAUTION

Drape the middle of the rope over the groove in the stock located behind the trigger mmechanism/scope.

⚠WARNING

Do not attempt to cock your crossbow by hand. This may cause injury to your hands and potentially cause the bow to be less accurate