
Esnowlee

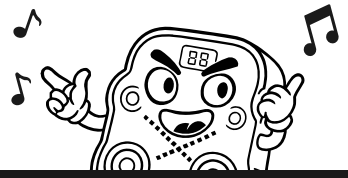

Multilingual User Manual

Music Boxing Machine

Model: CD8819

Scan to watch the how-to video

English · Deutsch · Français · Español · Italiano

Music Boxing Machine


EN

Product Manual (CD8819)

Please read this manual and all precautions before use.


Installation Instructions

1. Cut the Velcro to the right length and peel off the backing.
2. Stick one piece to the back of the punching target and the other to the wall at your preferred height.
3. Press both sides together firmly to secure.

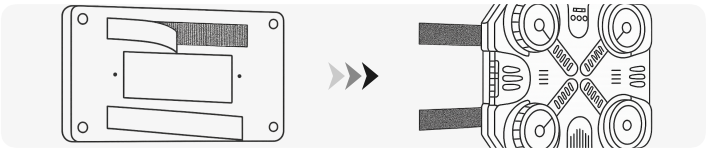

Tip: For painted walls, press firmly and let it sit overnight for better adhesion.
Note: Removing the Velcro may slightly peel the paint.

Function diagram

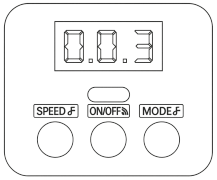

SPEED
Speed-Level Switch / Volume Down Key

ON/OFF
Switch System Mode (Bluetooth ↔ Music) / Turn On Key

MODE
Switch Game Mode (Boxing ↔ Rhythm) / Volume Up Key

Function Operation Description

Key	Short Press	Long Press
SPEED	Adjust Speed / Level	Volume –
ON/OFF	Toggle Bluetooth ↔ Music	ON/OFF
MODE	Toggle Boxing ↔ Rhythm	Volume +

Game Mode Overview

Mode	Music Mode	Bluetooth Mode
Boxing	Tap SPEED to set 1–5 Auto reset in 3 min	6 speeds Lights sync to music
Rhythm	6 levels Pass if score ≥ 70%	1 auto level Tap SPEED to restart score

Tips: Auto level: Lights flash with the beat

Bluetooth Name: quanji3

Charging instructions: Charge via USB (Do not use during charging)

⚠ Precautions

1. **Rest** for 30 minutes after meals **before use**.
2. **Avoid use** if feeling **unwell**.
3. **Do not wash** - clean only with a **dry cloth**.
4. **Recharge** when battery is **low** to **prevent damage**.
5. **Stop use immediately** if you feel **unwell** during operation.
6. **Wear boxing gloves** for optimal use.
7. **Do not disassemble**.

Music Boxing Machine


DE

Produktanleitung (CD8819)

Bitte lesen Sie dieses Handbuch und alle Sicherheitshinweise vor der Verwendung.


Installationsanleitung

1. Schneiden Sie den Klettverschluss auf die passende Länge zu und entfernen Sie die Schutzfolie.
2. Bringen Sie ein Klettbandstück auf der Rückseite des Geräts und das andere an der Wand an.
3. Drücken Sie beide Seiten fest zusammen, um sie zu fixieren.

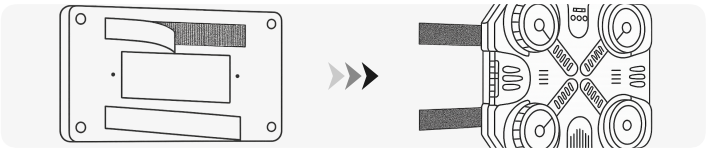

Tipp: Über Nacht andrücken – das sorgt für besseren Halt.
Hinweis: Beim Entfernen des Klettbands kann sich die Farbe leicht ablösen.

Funktionsübersicht

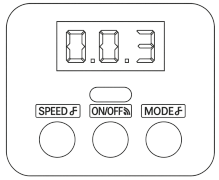

SPEED
Tempo wählen / Leiser

ON/OFF
Modus wechseln (Bluetooth ↔ Musik) / Ein/Aus

MODE
Spielmodus wechseln (Boxen ↔ Rhythmus) / Lauter

Funktionsbeschreibung

Taste	Kurzer Tastendruck	Langer Tastendruck
SPEED	Tempo / Stufe ändern	Leiser (–)
ON/OFF	Bluetooth ↔ Musik umschalten	Ein / Aus
MODE	Boxen ↔ Rhythmus wechseln	Lauter (+)

Spielmodus-Übersicht

Modus	Musikmodus	Bluetooth-Modus
Boxen	Taste SPEED drücken für Stufe 1–5 Automatischer Reset nach 3 Min	6 Geschwindigkeiten Lichter im Takt der Musik
Rhythmus	6 Stufen Bestanden ab 70 %	1 automatische Stufe Tippe SPEED zum Zurücksetzen

Tipp: Automatik-Stufe: Lichter blinken im Takt der Musik

Bluetooth Name: quanji3

Ladehinweis: Per USB laden (nicht während des Ladevorgangs verwenden)

⚠ Vorsichtsmaßnahmen

1. **Ruhen Sie sich** 30 Minuten nach dem Essen aus, **bevor Sie das Gerät verwenden**.
2. **Verwenden Sie das Gerät nicht**, wenn Sie sich **unwohl fühlen**.
3. **Nicht waschen** – nur mit einem **trockenen Tuch** reinigen.
4. **Laden Sie den Akku auf**, wenn der Ladezustand **niedrig** ist, um **Schäden zu vermeiden**.
5. **Beenden Sie die Nutzung sofort**, wenn Sie sich **während des Betriebs unwohl fühlen**.
6. **Tragen Sie Boxhandschuhe** für eine **optimale Nutzung**.
7. **Gerät nicht zerlegen**.