INALSA

Garment Steamer

Handy Steam

Instruction Manual
Cum
Warranty Card

Dear Customer,

Congratulations on the purchase of your **INALSA Garment Steamer!** This has been designed to include many superior features that permit you the fullest expression of your steaming skill. You are now on the threshold of a whole new world of steaming pleasure.


At INALSA, we have a reputation of selling innovative, high quality appliances such as Food Processors, Mixer Grinders, Juicer Mixer Grinders, Cooking Ranges, Garment Steamers, Cooktops, Microwave Ovens, Oven Toaster Grillers, Hand Blenders, Electric Kettles, Rice Cookers, and Electric Chimneys. Your newly acquired **INALSA Garment Steamer** bears the same distinctive hallmark of excellence.

It is all the result of vigorous quality consciousness in INALSA's design and development where uncompromising standards are maintained and rigid quality control measures are exercised on raw materials, components and finally, the finished product.

Your **INALSA Garment Steamer** has a lot of thoughtful features built in to make your garment steaming convenient. Please read these instructions carefully, so that you may get the best out of the power packed features in your **INALSA Garment Steamer**.

Welcome to the INALSA world of garment steaming pleasure!

Parts Identification:
Handy Steam

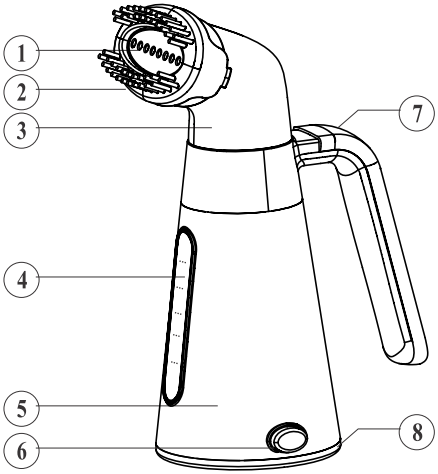

Part No.	Parts Name
1.	Steam Nozzle
2.	Fabric Brush
3.	Spray Head
4.	Water Level Window
5.	Main Body / Water Tank
6.	Power Switch
7.	Handle
8.	Bottom

Technical Specification*

Product	Garment Steamer
Model	Handy Steam
Wattage	600 W
Voltage	230V, AC, 50Hz.
Steam Rate	15 gm/min
Tank Capacity	120 ml
Cord Plug	3 pin moulded plug with PVC cord

* Due to continuous improvements in product, specifications are subject to change without prior notice.

Do's & Don'ts:

1. Do not eject the steam directly towards people or animal, or scald may be caused.
2. Only use the detachable accessories when there is no steam and they are cooled down to avoid scalds.
3. Conduct the installation in accordance with the instructions. Do not dismantle without authorization.
4. The liquid or steam must not be directed towards equipment containing electrical components, such as the interior of ovens.
5. Do not operate the machine unless you read this manual thoroughly. The machine can only be used indoors.
6. The machine can only be used for the purposes described in this manual. Utilization for other purposes is prohibited.
7. The water for the machine shall be domestic potable water to avoid contaminating the textiles. Purified water is recommended.
8. Thoroughly stretch the power cords before use. Avoid sharing the same power supply with other high-power electric appliances. Do not use wiring board in order to prevent fires arising from the wiring board overloaded.
9. Do not fill hot water in the tank, or the tank would deform. Fill water before operation and observe the water level from time to time. Add water to proper volume in case it is below the designed water level.
10. Do not directly put the machine under water tap to fill water.
11. Do not fill solutions such as detergent into the tank.
12. Do not leave the machine operating without attention.
13. The machine shall not be operated by these people (including children): the physically, tactilely or mentally disabled or those who lack of experience and knowledge, unless they are supervised or guided by someone who is responsible for their safety in respect of the application of the machine.
14. Children shall be monitored to be prevented from playing with the machine.
15. During operation, keep the ironing head away from people, animal or domestic electric appliance.
16. During operation, do not touch the steam jet outlet and steam conduit of the ironing head or drag the power cords.
17. Do not drag the steam conduit by force or to move the machine, or the steam conduit may be damaged or steam may leak.
18. To avoid scald by steam, after operation, turn off the power supply, pull out the plug and, when the machine is cooled down, pour out the remnant water, and then have the machine packed and stored. However, let the machine air dried before packing and storage. Do not pull put the plug by dragging the power cord.


19. Use dry soft cloth and neutral detergent to clean the machine surface and do not use solvents such as gasoline, alcohol, banana oil, etc. Prevent liquids penetrating into the machine.
20. Do not soak the machine, power cord or plug in water or other solutions. Do not keep the machine in places which are damp, exposed or of corrosive gases.
21. Keep the machine away from flammable or explosive objects.
21. Turn off the power supply and pull out the plug before discharging water from or filling water in the tank. Avoid water leakage. Do not open or take down the tank in use.
22. If find any damage on the accessories especially the safe protection and power cord, stop using the machine and inform our professional personnel of service center for repair. Do not repair at your own discretion.
23. Before cleaning or repairing the machine, turn off the power supply, pull out the plug, release the pressure inside the heating element of the base and let the machine cool down.

Safety Instructions:


 Plug the power plug in thoroughly to avoid electric shock, as well as open circuit, short circuit, smoking and flammation caused by over-heat of plug.	 Use the socket with rated voltage of 220V-250V separately from other electric appliances, otherwise, fire may occur due to heat.
 No watering: danger of short circuit and electric shock.	 Do not pull or plug the plug with wet hand in respect of electric shock.
 Do not use broken or loose socket in respect of electric shock, short circuit and flammation.	 Keep away from the steam hole to avoid burn.
 Do not intend to refit, remove or repair the product in respect of fire, electric shock or other injuries.	 Keep it away from the children or others unable to operate.
 Do not insert the metal needle into heat dissipation hole or clearance in respect of injury caused by electric shock.	 Remove the dust on power plug at regular intervals, otherwise, fire accident may occur due to poor insulation.
 Do not put the product in water or damp environment or close to other heat sources, and do not put the inner boiler on the naked fire.	 Do not touch the hot part, especially the surface of steam jet of ironing brush during or after the operation.
 Hold the plug rather than haul the power cord to pull out the power plug.	 Do use the attached power cord which shall not be used for other equipment.
 Do not operate on the unstable platform or cushions which could not receive heat in respect of injury or fire caused by fallen ironing brush.	 If not in use, pull the power plug out of the socket to avoid electric shock, creepage and fire arising from damages and insulation ageing.
 Wash the ironing brush after totally cooling down to avoid scald.	 Do not put it close to wall or furniture in case the steam leads to color change or distortion of which. Keep it over 30cm away from the wall and furniture.

How to Use:

1. Unpack the unit and stretch the power cord.
2. Make the symbol "▼" on nozzle matches with symbol "🔒", and then hand pressed nozzle clockwise rotate 90 degrees to the symbol and nozzle is installed.Assembling the brush directly onto nozzle if necessary.

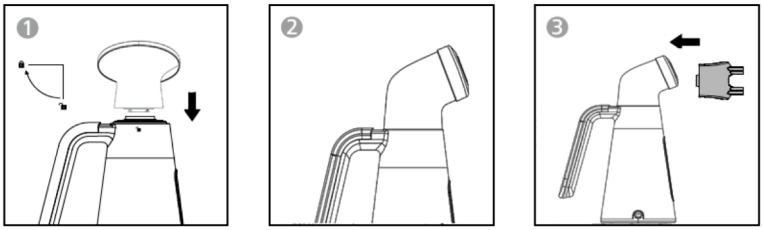

3. Plug in the machine for preheating.

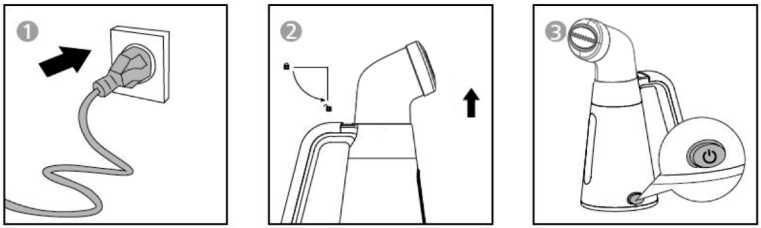

Notice: Do not overload the water tank and keep the water not exceed MAX line
Attention: It is normal that there will be a bit little condensate water dripping during using.

⚠ **When the ironing head shake or move from side to side, water bead may be appeared on ironing head holes (Danger of scalding).**

How to Clean:

In order to keep the best performance of steam ironing, it is necessary to wipe off the impurities inside the water tank regularly. Therefore, it is suggested that you cleaning the water tank one time per month at least.

Steps of Maintenance:

1. Please empty the water tank when finish using to avoid the incrustation.Then you have to rinse the water tank to remove anything that remains.
2. Turn off the power switch and pull out the plug. After cooling for over an hour you may start cleaning and maintenance.When you start to remove the incrustation, please make sure water level is above the MIN mark and put the product near the sewage outlet. Please open the nozzle and shake the machine to let the remaining water out.And then close the nozzle.

Notice: Pls make sure the remaining water is already cool before start of maintenance.

Safety Protections:

1. **Thermostat:**

   The thermostat would keep the temperature at a rated value by means of the control current when the tank is short of water.

2. **Hot fuse**


   In case the thermostat damages or fails, the hot fuse of protective device gives protection by cutting off the power supply of machine body when the machine reaches a certain temperature.

Trouble Shooting Chart:

Fault	Cause	Solution
The machine does not work or the indicator light of switch is not lighted	Power-off or fusion of fuse	Check and confirm
	The socket is not connected or plugged in properly	Connect to the power supply and ensure the plug is plugged in thoroughly
	Unfavorable connection of socket	Check whether the power socket is normal or not
	The power switch is not turned on	Turn on the power switch
The indicator light is on but there is no steam	The water in water tank does not reach the designed water level	Fill water promptly
Water spray out from the ironing head	The water tank is overloaded	Release some water from the tank till the water level below MAX level

If the problems above are still not solved, inform the professionals and do not dismantle the machine without authorization.

Circuit Diagram

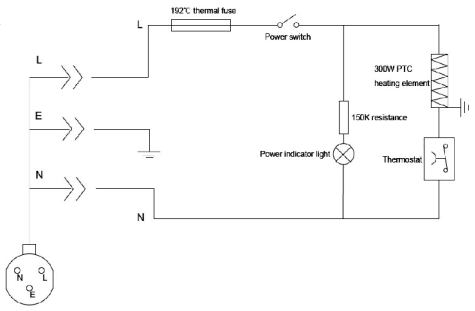

WARRANTY

The **"Inalsa Garment Steamer"** is fully warranted against any manufacturing defect for a period of **TWO** years from the date of purchase. Should any defect develop in the Garment Steamer during the warranty period, **Tuareg Marketing Private Limited** undertakes to get the Garment Steam eror any part thereof, repaired at any of its Authorised Service Center.

The above warranty shall be subject to the following terms and conditions:-

1. Any defective product or part thereof will be repaired within the above stated warranty period on receipt of the same with this card duly filled in and stamped by dealer from whom the product was purchased along with the purchase bill/ invoice, provided the product is brought to our nearest service center freight paid and packed securely.

2. In the event of repairs/ replacement of any part of product, this warranty will thereafter continue and remain in force only for the unexpired period of warranty.

3. This warranty is valid only when:-

   - The product is purchased from the company's authorized dealer and accompanied by this warranty card / cash memo.

   - The product has been serviced by the Inalsa's authorized service personnel.

   - The product has been used and maintained in accordance with the instruction manual.

4. The warranty does not apply to :-

   - Normal wear and tear of the product

   - Damage due to chipping, peeling, plating and denting.

   - Damages arising due to running of the appliances on the alternate sources of power such as Inverter, generator or any such auxiliary power supply aid resulting in variation/ fluctuating voltage

   - Breakage or damage to components made of ABS, SAN, Bakelite, Glass and such plastic/rubber parts, cord, bulbs and surface coating.

   - Damages resulting from accidents, mishandling or negligence on the part of the customer

   - Product if used for the commercial purposes.

   - Product, the serial number of which has been removed obliterated or altered on the specification plate.

5. The warranty is in lieu of all other warranty, expressed or implied and does not cover indirect or consequential damages/ loss.

WARRANTY CARD

Product : Garment Steamer

Model : Handy Steam

Serial No .....

Date of purchase.....

Bill/ Cash Memo no.....

Purchaser's name…….....…….....…….....

Address…….....…….....…….....

.....

.....

Dealer's stamp and Signature

Scan and Download
Inalsa Connect App
to Register your Warranty

E-mail- customercare@inalsa.co.in

Customer Care Number (Timing: 9:30 to 5:30) (Mon - Sat)

9773982065

INALSA

TUAREG MARKETING PVT. LTD.
154, Bhalswa, Delhi- 110033