
TRIFUNS

USER MANUAL

Automatic Pet Feeder

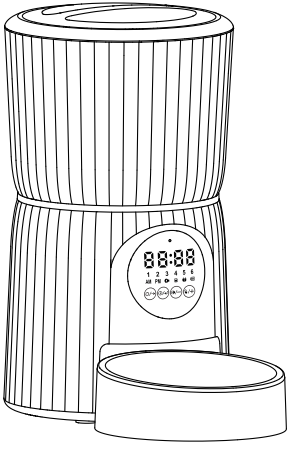

Model: P01

Please read this manual before using the product and keep it for future reference.

DIRECTORY

SAFETY GUIDELINES ---------- 01
PRODUCT OVERVIEW ---------- 03
BUTTONS AND DISPLAY OVERVIEW ---------- 04
HOW TO USE ---------- 06
CLEAN AND CARE ---------- 12
TROUBLESHOOTING ---------- 13
NOTICE ---------- 13
WARRANTY ---------- 15
SPECIFICATIONS ---------- 15

SAFETY GUIDELINES
! WARNING

-Dispose of all packaging materials properly. Some items may be packed in plastic bags; these bags could cause suffocation; keep away from children and pets.
-Do NOT allow small children to play with, in or around the pet feeder.
-To reduce the risk of injury, please keep close supervision when an appliance is used near children.
-Do NOT use the feeder with pets not able to reach the food tray or with any physical disability.
-Do NOT immerse the base part in water at any time as it may damage electronic components like the control panel.
-Do NOT place any foreign object in the pet feeder.
-Do NOT use outdoors. Check operation frequently to be sure the unit is dispensing properly.
-Do NOT use wet, canned or moist food.
-Do NOT disassemble the unit other than as instructed in this User Guide.
-Do NOT use the feeder for anything other than its intended use. Only use attachments recommended or sold by the manufacturer. The use of attachments not recommended or sold by the manufacturer may cause an unsafe condition. Do not modify the pet feeder.
-Do not operate any appliance if the unit is malfunctioning or has been damaged. Do not attempt repairs on the pet feeder yourself. Contact our customer service immediately for further instructions.
-Always unplug when not in use and before cleaning.
-Never pull on the electrical power cord to remove the plug from the wall outlet.
-If the plug of this device gets wet, turn off electricity to that wall outlet. Do not attempt to unplug.


-Examine the feeder after installation. Do not plug in if there is water on the power cord or plug.
-To avoid tripping, always position power cord out of the way of foot traffic.


CAUTION

-Do NOT allow pets to chew on or swallow any parts. If you are concerned about the power cord, purchase a cord conduit (a hard-plastic protector) at any hardware store to protect the power cord.
-If an extension cord is necessary, one unit with a propel rating should be used.
-Do NOT install or store the pet feeder where it will be exposed to weather or temperatures below 4℃ / 40℉.
-Use alkaline D batteries to power. Do NOT use rechargeable batteries.
-Check the batteries regularly. Before leaving for extended time, always replace batteries with new ones.
-Do NOT lift the pet feeder by lid, food tank, or food tray. Lift and carry it using both hands and the base while keeping the unit in an upright position.
-Suitable for dry food ONLY with kibble size ranging from 2-15mm /0.07-0.6in in diameter. Larger kibble may get stuck at the food outlet.
-Do not put your fingers into the food outlet or let your fingers touch the rotor.
-Read and observe all important notices listed on the pet feeder and in the packaging.


PRODUCT OVERVIEW

1.Lid
2.Desiccant Box
3.Transparent Food Tank
4.Tank Base
5.Rotor
6.LCD Display
7.Button
8.Food Outlet
9.Feeder Base
10.Stainless Steel Bowl
11.Bowl Tray
12.Type-C Power Jack
13.On/Off Switch
14.Battery Compartment
15.Compartment Lid

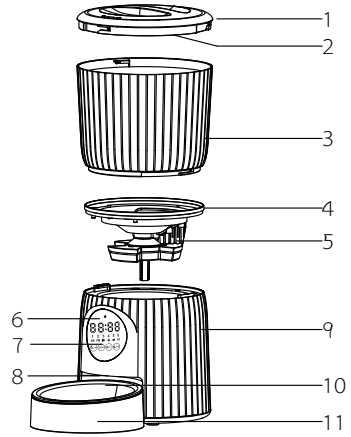


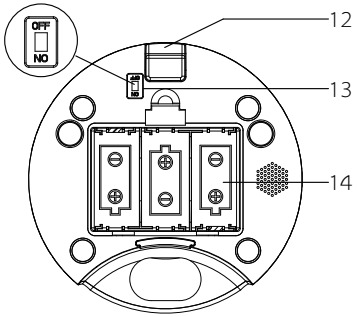

Bottom View

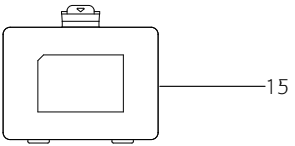

BUTTONS AND DISPLAY OVERVIEW
Display

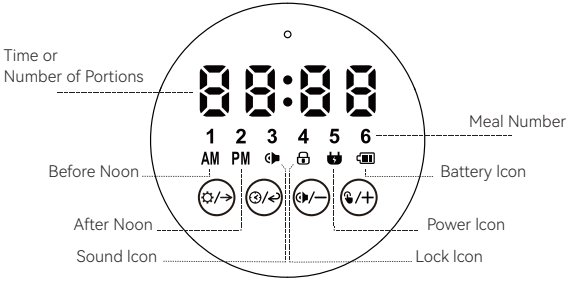

Icon	Meaning
12:00	Current Time / Feeding Time.
SF 00	Slow feeding mode. The interval time per portion can be set from 0-10 mins.
F - 00	Set the portion of each meal. Up to 50 portions.
12345	Number of meals Light On: Feeding Light Flashing: Setting Light Off: No Feeding
	Light On: Sound On Light Off: Sound Off
	Light On: Buttons Locked Light Off: Buttons Unlocked
	Light On: Plugged In Light Off: Unplugged
	Light On: Batteries Installed Red Light Flashing: Low Battery Light Off: No batteries


Button	Function	Status	Operation Description
	Setting	Unlocked	Long press 2s to set feeding parameters. Long press to exit setting mode.
	Next Step	Setting	Short press to next step
	Time Setting	Unlocked	Long press 2s to set current time, Long press to exit setting mode. Short press to set hour and minute.
	Return	Setting	Short press to return to previous step
	Sound	Unlocked	Long press 2s to turn on/off the sound
	Decrease	Setting	Short press -- Decrease value Long press -- Decrease the value quickly
	Manual Feeding	Unlocked	Short press -- Manual feeding
	Increase	Setting	Short press--Increase value Long press --Increase the value quickly
	Reset	Unlocked	Press and hold both buttons for 6s to reset the feeder to factory settings.
	Lock/ Unlock		Press and hold both buttons for 2s to lock/unlock. *All buttons will be locked automatically after 2 mins without operating!

HOW TO USE

Assembly and Prepare for Setting


1. Unbox and take out the food bowl and bowl tray.
2. Install the food tank.

Twist the food tank clockwise to install on the tank base. Switch the lock on the back of base. Up for Lock, Down for Unlock

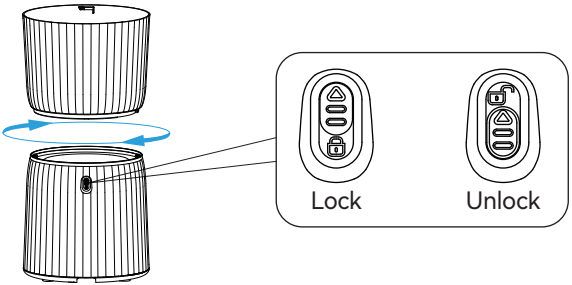


3. Add enough dry pet food.


Recommended kibble size: 2-15mm/0.07-0.6inch in diameter. Do not use canned, wet, or moist food.

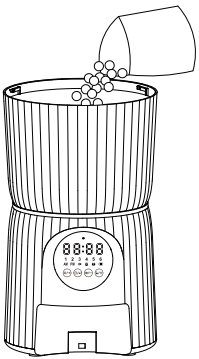

4. Put the lid back on.
To snap into place, turn the lid clockwise from the right rotating sign to the left rotating sign.

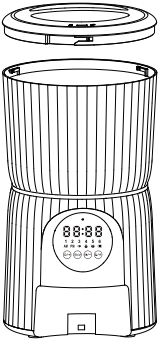


5. Install the Food Bowl
Attach the bowl to the designated notches underneath the feeder base.

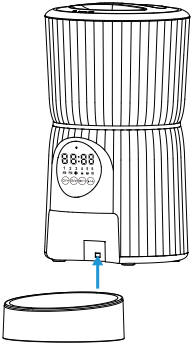

Connect Power

The feeder supports dual power modes.

Using the power adapter and Type-C power cable: Plug 5V power adapter into a wall outlet, turn on the switch.
Using battery power: Install three D alkaline batteries into the battery compartment, turn on the switch.

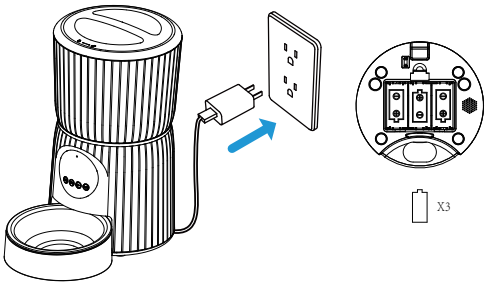


Power Mode	Icon	Display
Cable		Always On Note: Display automatically turn off during 10:00PM to 7:00AM
Battery		Display automatically turn off after 2 mins without operation
Cable & Battery		Always On Note: Display automatically turn off during 10:00PM to 7:00AM

Notes


-The battery icon will flashing red light when batteries is low
-When the power adapter, power cable, and batteries are used at the same time, the feeder will only draw power via the power cable.
-If the feeder doesn't turn on, check if the On/Off Switch on the bottom is at"On" position.

Time settings


1.Long Press the ⏻/↩ button to enter time settings and the hour digit flashes




2.Press ☀/+ 🔊/– button to set the hour and short press ⏻/↩ button to confirm.



3.Press ☀/+ 🔊/– button to set the minute and short press ⏻/↩ button to confirm

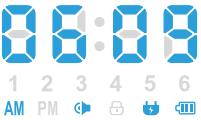

4.Long Press the ⏻/↩ button to confirm and exit time setting mode.




Meal settings

1. Slow feed:

After setting up the time, long press the ☼/→ button to enter slow feeding settings.



Short press ☼/+ ◑/− to set interval time per portion from 0 to 10 mins.




Short press ☼/→ button to save and move to next step.


Note: If you don't need slow feed mode, just press the ☼/→ button to skip the slow feed mode and enters the feeding setting mode.

2.Set the first meal time

1) After the Slow Feed mode is set, the feeder enters feeding setting mode. The icon 1 will flash. Indicating it's ready for setting the first meal.



2) Short press the ☼/→ button to set the feeding time of the first meal. The hour digits will flash. Short press the ☼/+ ◑/− button to set the hour.

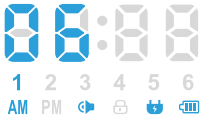


3) Short press the ☼/→ button to save hour and move to minutes setting. The minute digits will flash. Press 👆/+ ◐/– button to set the minute. (Long press 👆/+ ◐/– button to adjust quickly). Short press the ☼/→ button to save and move to next step

3. Set the portion of the first meal

Once the first meal time is set and saved, the feeder enters portion setting mode. The screen will display F-XX, standing for portions.

1) Press 👆/+ ◐/– button to set the Portions (Max 50), Long press to adjust quickly; Short press ☼/→ button to save and enter the second meal setting.
Note: 1 portion≈10g≈1/10 cup

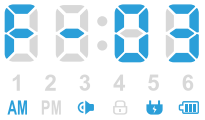


4. Set the following meals


After setting up Meal 1, the feeder automatically goes to the second meal setting. The meal number "2" flashes.

Repeat the steps above to set meals 2 and automatically goes to meal 3, up to 6 meals per day.
If you want to set fewer than 6 meals, long press ☼/→ button to save and exit.


CLEAN AND CARE

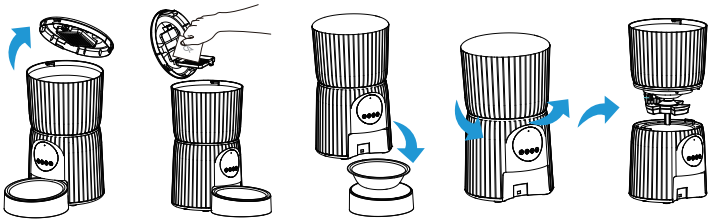

1. Open the lid and take out the desiccant
2. Twist anticlockwise to remove the tank base
3. Remove the feeding bowl and empty the grain in the hopper.

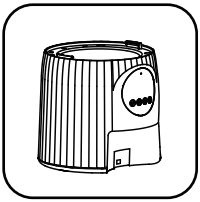

Clean other parts with a dry cloth.

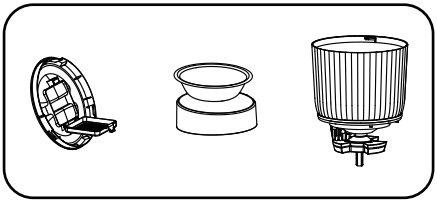

The washable parts are as follows:
lid, stainless steel bowl, bowl tray, food tank, tank base, rotor

Note:
Disconnect power before cleaning.
Do not clean the feeder in a dishwasher. Only the stainless-steel bowl is dishwasher safe.
It's recommended to clean the feeder regularly for the health of pets.

TROUBLESHOOTING

The answers to these questions should help you solve most problems you may have with the pet feeder. If they do not, please contact our Customer Care Center via: service@trifunspet.com

Question	Solution
The screen shows E-01	E-01 appears on the screen to indicate that the food outlet is blocked. Please clean the food outlet in time.
The screen shows E-02	E-02 appears on the screen to indicate abnormal feeding of the feeder. Please check whether there are foreign objects in the hopper or the food is too large.
Press the button but doesn't work	The feeder is locked. Press and hold both ⏲/→ and 🍖/+ for 2s to unlock the feeder.
How to cancel a meal	Change the feeding portion to F-00, the number of this meal will not be shown on the screen.
How to change a meal pre-set	In unlocked status, long press ⏲/→ to enter meal setting, skip slow food setting. When digit "1" starts flashing, press 🍖/+ 🔔/− to choose the number of meals you want to change. Long press ⏲/→ to save setting.
LED screen is off	If powered by batteries only, the display screen will turn off after 2 mins without operation, and touch any button the display will turn on.
The food amount is not the same as the set	The food amount per portion varies according to the size of the food please test the food amount per portion several times manually before setting.

NOTICE

FCC statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1) this device may not cause harmful interference, and

2) this device must accept any interference received including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

This device and its antenna(s) must not be co-located or operated in conjunction with any other antenna or transmitter.

Radio frequency exposure statement
To maintain compliance with the FCC's RF Exposure Guidelines, this equipment should be installed and operated with a minimum distance of 20cm from your body.

WARRANTY

12 month warranty
Lifetime support
For guidance on product use and warranty extension, please contact our brand after-sales staff via email: service@trifunspet.com
If any questions related to orders, please contact the seller through the shopping platform

SPECIFICATIONS

Model	P01
Capacity	4L
Power	DC 5V power adapter with Type-C cable; 3 * alkaline D batteries (Not included)
Dimensions	276*199*199 mm / 10.9*7.8*7.8 in
Net Weight	1.8 kg / 4 lbs
Portion	50 portions Max; 1/10 cup per portion
Meals	6 meals per day

TRiFUNS

Automatic Pet Feeder
Model: P01

Manufacturer: Shenzhenshi Bang Xi Wang Electronic Technology Co., Ltd
Address: A-10C, Yuehai Building, Chuangye Road Community, Yuehai Street, Nanshan District, Shenzhen Guangdong, CHINA

: service@trifunspet.com
: @trifuns
: @trifunspet

Made in China

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.