MYCHILD®

On Board

Instruction Manual



INSTRUCTIONS: Please read carefully and keep for future reference. Your child's safety may be affected if you do not follow these instructions. Safety of your child is your responsibility.

This stroller board is intended for children from 2 years age up to 20 kg.

V2

Safety instructions

Warning! Intended for use with children from 2 years old up to 20kg (44lb).
Warning! Never leave your child unattended.
Warning! Your child must step off the board before you attempt to:
- Go up or down steps, kerbs, stairs or escalators,
- Manoeuvre backwards,
- Go round sharp turns,
- Use the board on rough or uneven ground,
- Go onto soft surfaces e.g. snow, deep mud, soft sand, long grass.

WARNING! An adult must hold the pushchair handles tightly with both hands at all times.
Warning! Make sure your child is standing with both feet on the board before pushing the pushchair.
Warning! Check all connectors, arms and the wheels of the stroller board as well as the pushchair before using it, and ensure that all connectors and locking mechanisms are tightened prior to use.
Warning! Do not use this stroller board if any parts are broken or missing or worn.
Warning! Never let children play with the stroller board. When not in use, store away from children's access.
Warning! Always disconnect your stroller board before folding your pushchair. In some pushchair models you may need to disassemble the connectors as well.
Warning! This product is only intended for one passenger.
WARNING! The board is only designed to be used if there is a child in the pushchair.
WARNING! The board must never be attached to the brakes, to any non-loadbearing elements, or to any moving part of the pushchair.

Care and maintenance

Regularly inspect all locking devices and connectors before using the stroller board.
If you have any difficulty with the wheels, ensure that dirt is not the cause.
Use a silicone based lubricant for the wheels.
Sponge clean with warm water and mild detergant.
Always allow to dry or use a cloth to dry before using or storing.

Your 3 year warranty

Whilst we make and test our products to the highest standards of durability there's always a small chance of a hiccup! Our promise is to repair, replace or refund a MyChild product that has an identified manufacturing defect from the date of purchase for a full 3 years thereafter at no extra cost.

However, you must register within 28 days of the date of purchase to receive the full 3 years guarantee!

To receive your full guarantee you can register your product by:
visiting www.mychild.co.uk/warranty.html and complete the warranty form,
or by telephone on 0161 335 2508.

Welcome

Thank you for purchasing the MyChild On Board.
Please read the instructions and warnings carefully before use to ensure safe and satisfactory operation of this product.

Your child's safety is your responsibility. If you have a query with this product or require replacement parts, please contact the MyChild Helpline on 0161 335 2508.

Lay out the parts on a soft level surface and compare to the part/fixings checklist below. Do not discard any packaging until you are sure that you have all the parts.

WARNING! Assembly by an adult. Keep away from children until fully assembled. Keep children clear during assembly as pack contains small parts which may present a choking hazard.


Parts checklist

Contained in your carton are:


№	Part	Qty
1	Board	1
2	Arms (left and right)	2
3	Connectors (left and right)	2
4	Wheels	2
5	Wheel housing washers*	2
6	Tubing adapters (for square tubing)	2
7	Storage strap	1

*Washers may be pre-fitted, loose (in the box) or in the sealed plastic bag with the storage strap.




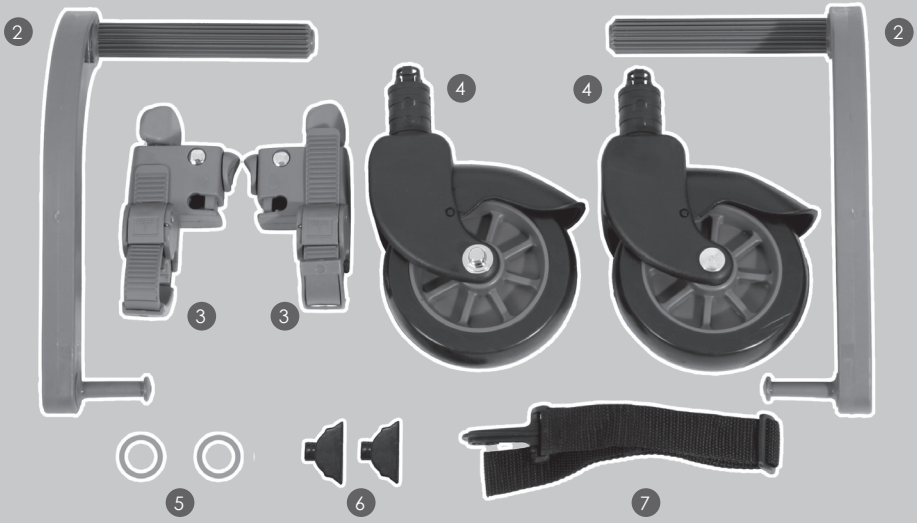

Assembly - *Wheels*

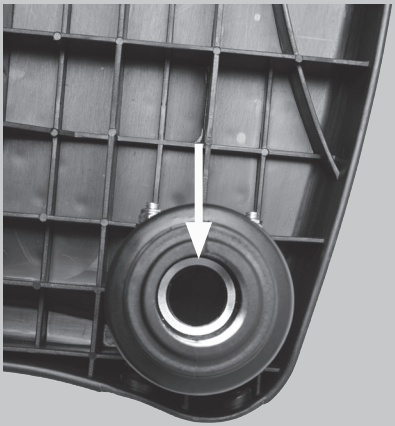


1. Place the On Board platform upside down on a sturdy surface.
IMPORTANT: If the washers are loose in the box, or in the bag with the storage strap, place them into the wheel housing as shown in the picture.

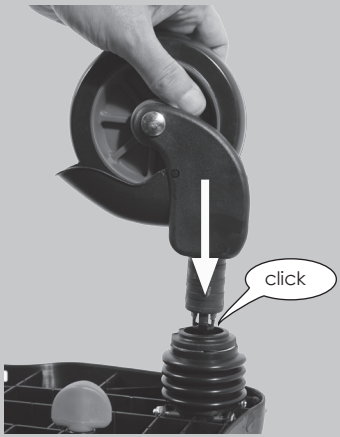


2. Align the wheels to the wheel housing and push the wheels firmly into the housing unit until you hear a "click".

Assembly - *Support arms*

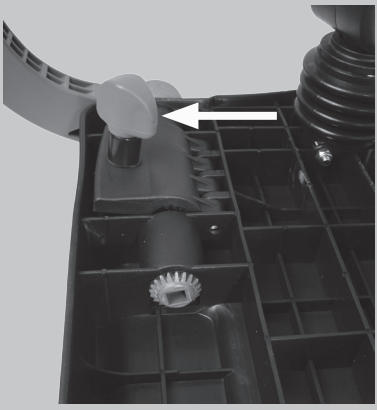


3. Loosen the screws so that the arms can be easily inserted and adjusted.

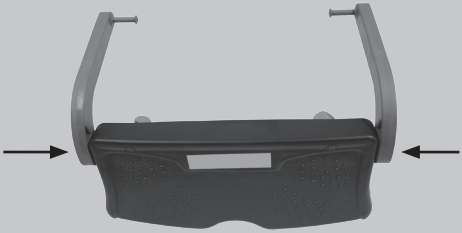


4. Push the support arms in, but DO NOT tighten the screws yet.

Assembly - *Readying the connectors for fitting (cont)*


5. Connector parts:
(A) Tube protector.
(B) Block
(C) Body
(D) Quick release slider
(E) Strap
(F) Adjuster button
(G) Safety knob
(H) Tubing adapter (for square tubing)

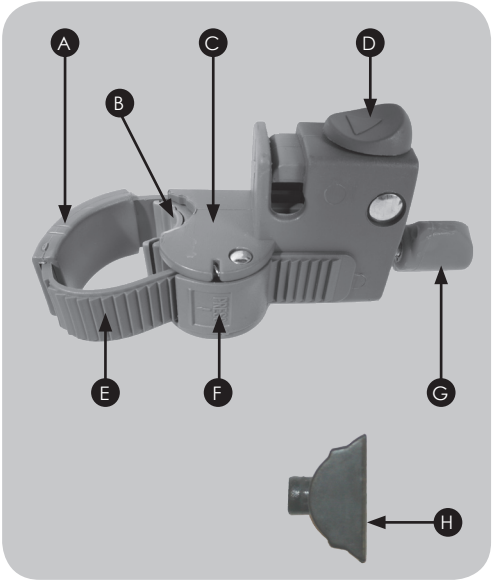

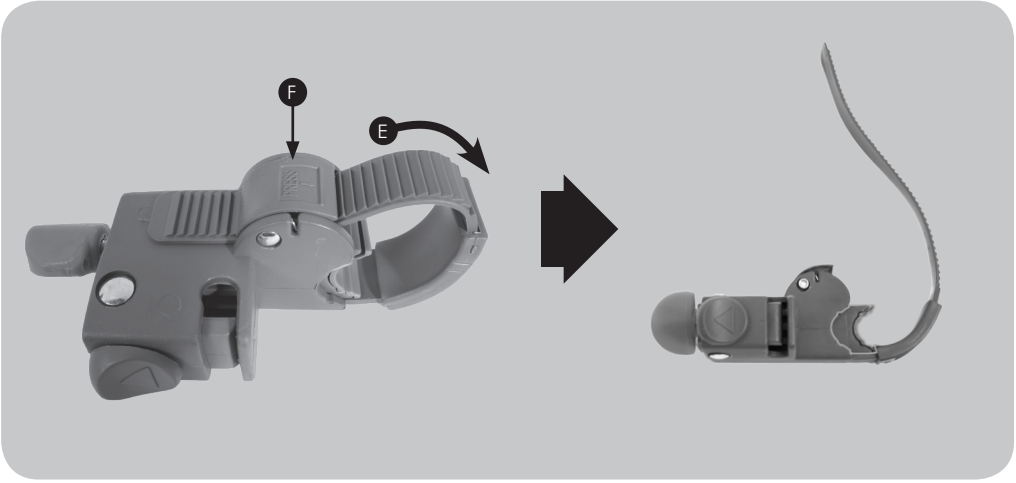

6. To get the connectors ready for fitting on the pushchair, press the adjuster button (F) and release the strap (E).


Assembly - *Readying the connectors for fitting (cont)*

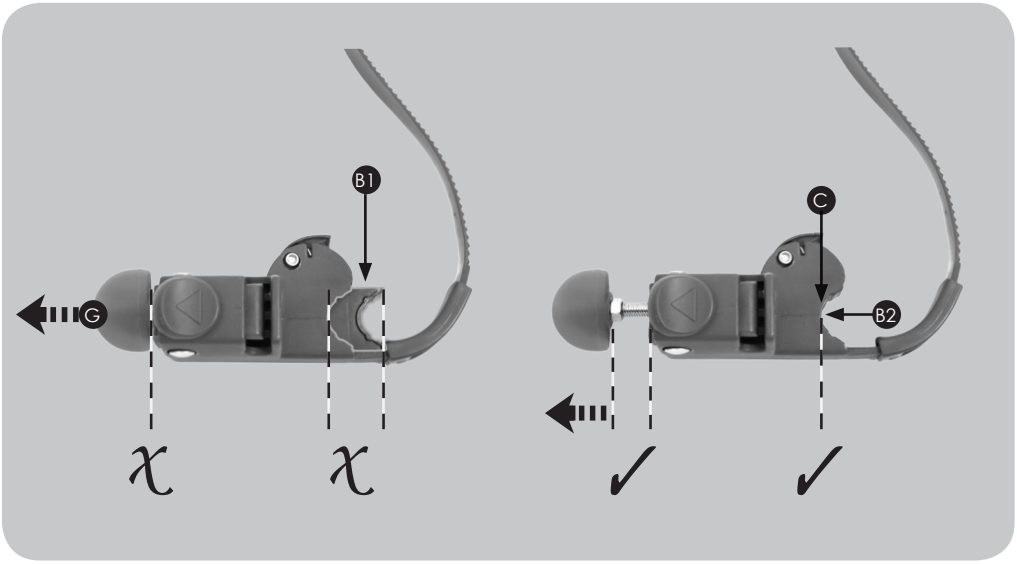

7. Unscrew the safety knob (G) until the block (B1) is fully retracted (B2).
The block (B2) should be flush with the body (C). If it is sticking out then push it in.

IMPORTANT: Ensure block (B2) is fully retracted. Failure to do so may make it more difficult when fitting to strollers with thicker leg tubing.


8. If you intend fitting the connectors to square or rectangular tubing then insert the adapters (H) into the block (B) before attaching the connectors.

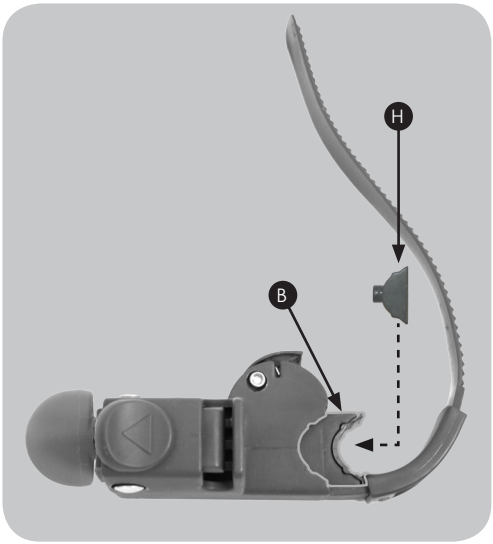

Fitting the board - *General fitting advice*

IMPORTANT: Ensure block (B) is fully retracted. Failure to do so may make it more difficult when fitting to strollers with thicker leg tubing.

1. Attach the connectors to the legs of the pushchair. Make sure both connectors are at the same height and pull strap (E) as tightly as possible through the adjuster button (F) (you may need to wiggle the connector left and right to achieve this). Tighten safety knob (G) all the way in ensuring block (B) is tightened fully against the leg tubing.

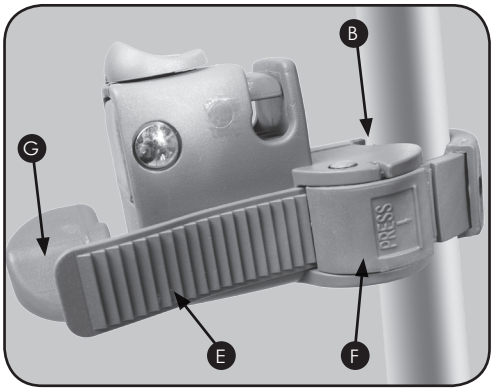


2. **For thin/narrow tubing:**

• Slide the tube protector (A) to the body of the connector (C).


• Pull the strap (E) through the adjuster (F) as tightly as possible.

• Tighten the safety knob (G) fully.

ATTENTION! Ensure the connectors are gripping the tube firmly before attaching the board.

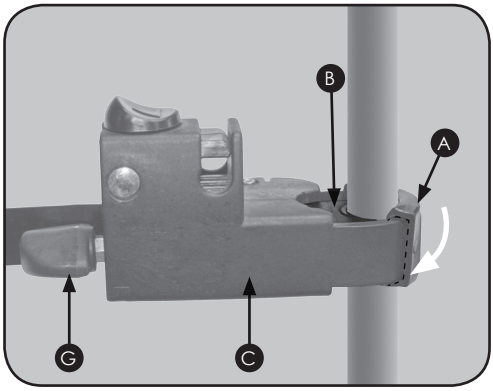


3. Loosen knobs (H). This will allow the two arms (J) to be rotated and moved in or out as necessary.

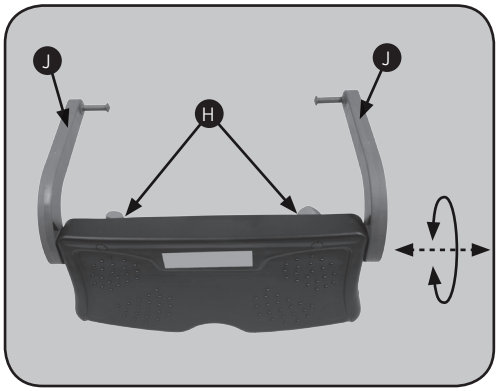


Fitting the board - *General fitting advice*

4. Attach the arms to the connectors - you may need to move the arms apart or push them in so they are the correct distance apart to fit on the connectors. Make sure the arms stick out from the side of the board by the same distance on both sides.

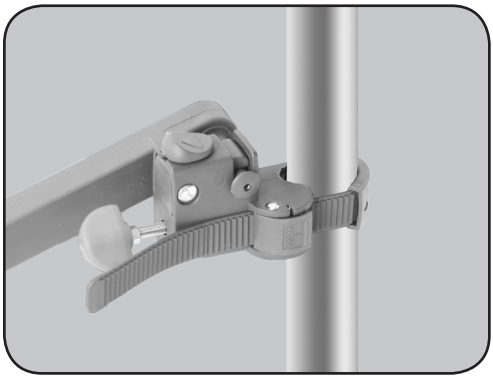

5. Adjust the board so it is level and tighten the knobs (H) underneath the board to fix it into position.

ATTENTION: Make sure the board is level and fixed in position. Re-tighten if necessary.

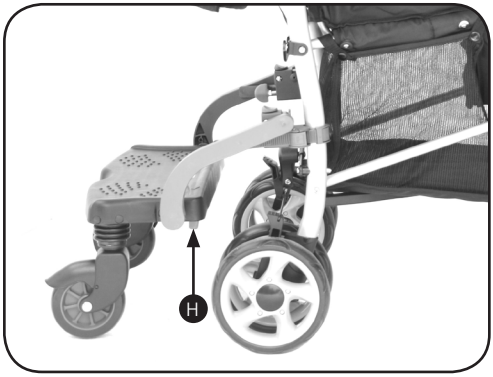


Fitting the board - *To your model of pushchair*

The On Board will fit a wide range of strollers and pushchairs. This guide aims to provide the steps for fitting the On Board to some of the more common types of strollers and pushchairs such as:


1. Large style umbrella folds,
2. Small style umbrella folds,
3. Doubles/Twins,
4. 3-Wheelers,
5. Classic frames,
6. Modern frames,
7. Tandems,
8. 3-in-1 chassis.

Locate the style of stroller/pushchair closest to the one you are wishing to fit the On Board to.


Fitting the board - ***LARGE-style*** *umbrella fold strollers*

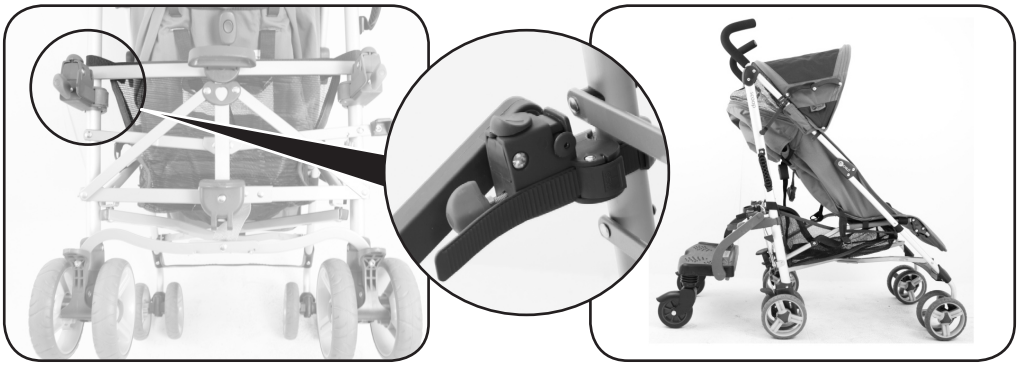


Fitting the board - ***Small-style*** *umbrella fold strollers*

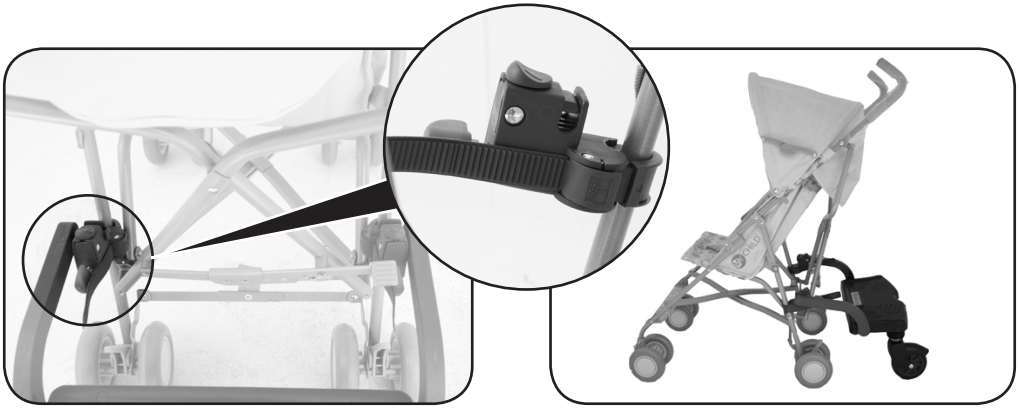

Fitting the board - ***Double/Twin*** *strollers*

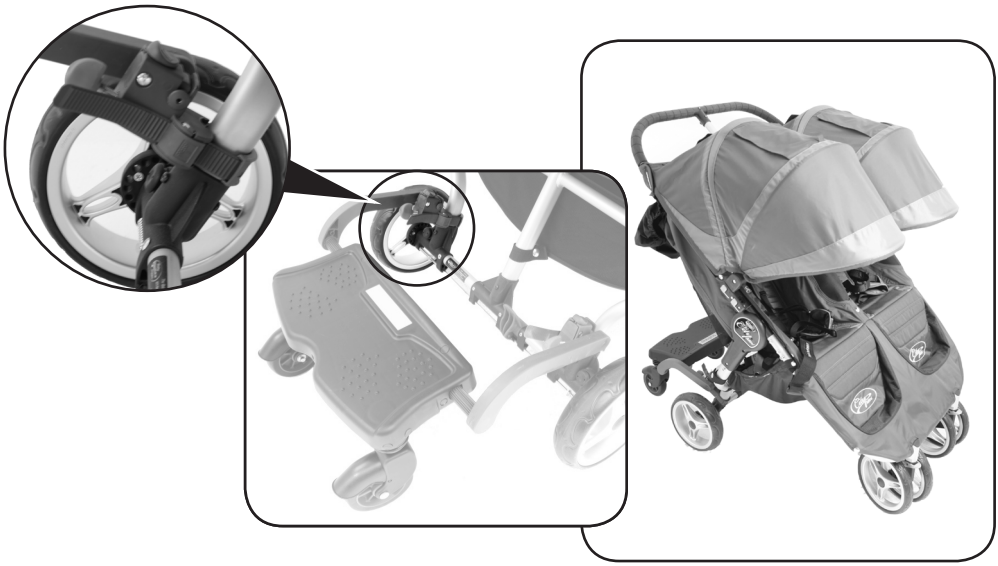


Fitting the board - ***3-Wheeler*** *strollers*

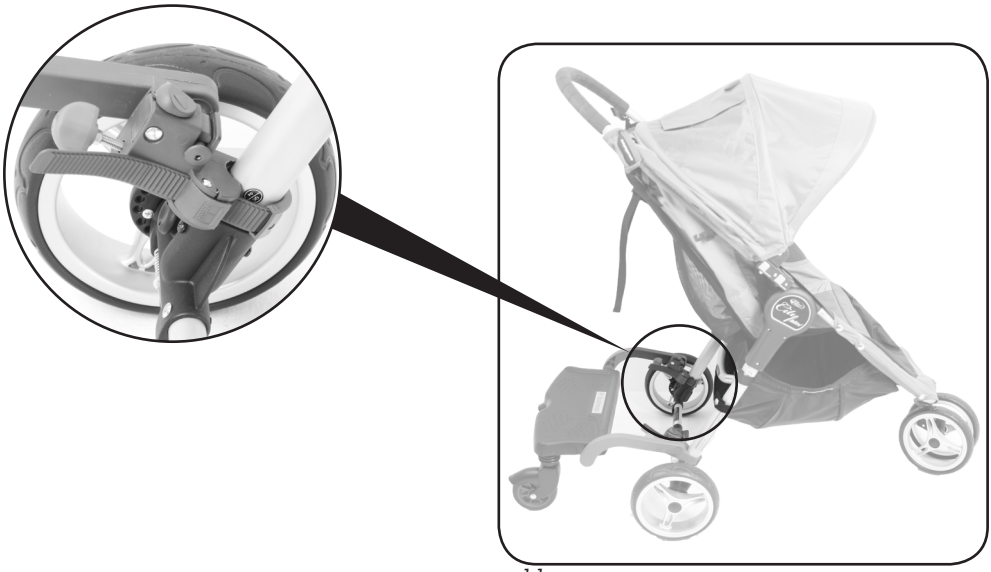


Fitting the board - ***Classic Frame*** *strollers*

Note: Strap (K) is facing inwards.
IMPORTANT: The connector MUST be clear of the brake bar (L).

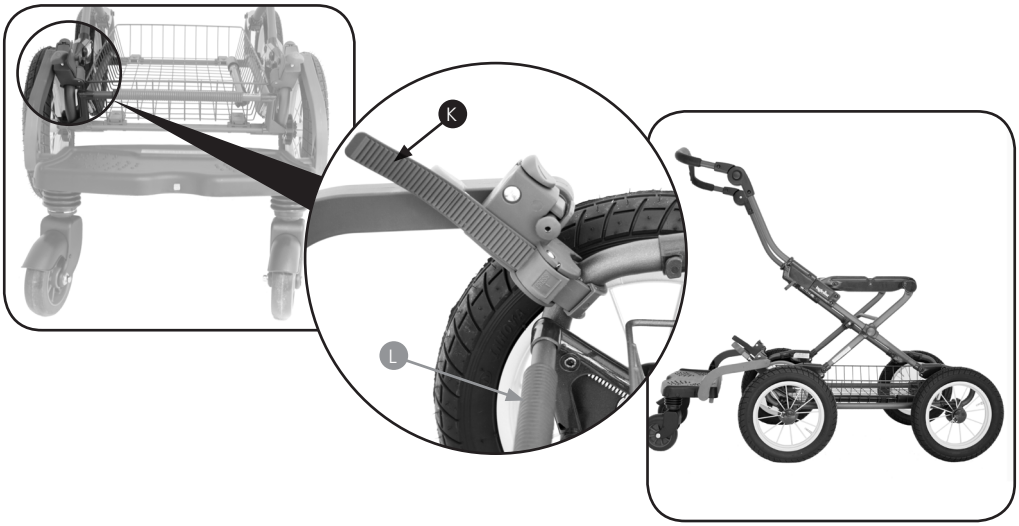


Fitting the board - ***Modern Frame*** *strollers*

This design of frame has a brake wire (M) running down the tube.
IMPORTANT: Make sure that the brake still works after you have attached the connector (N).

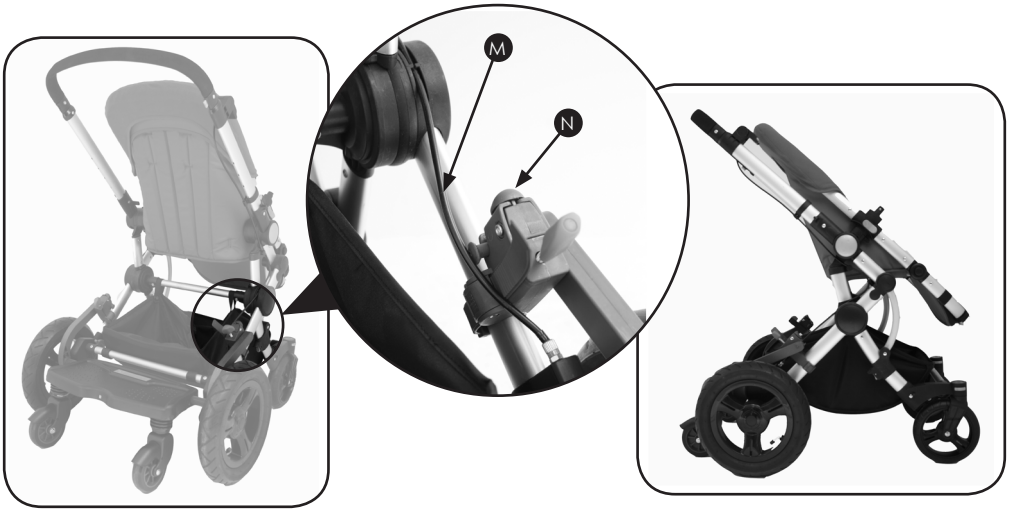


Fitting the board - ***Tandem strollers*** *(1 seat behind another)*

Note: Strap (O) is facing inwards.

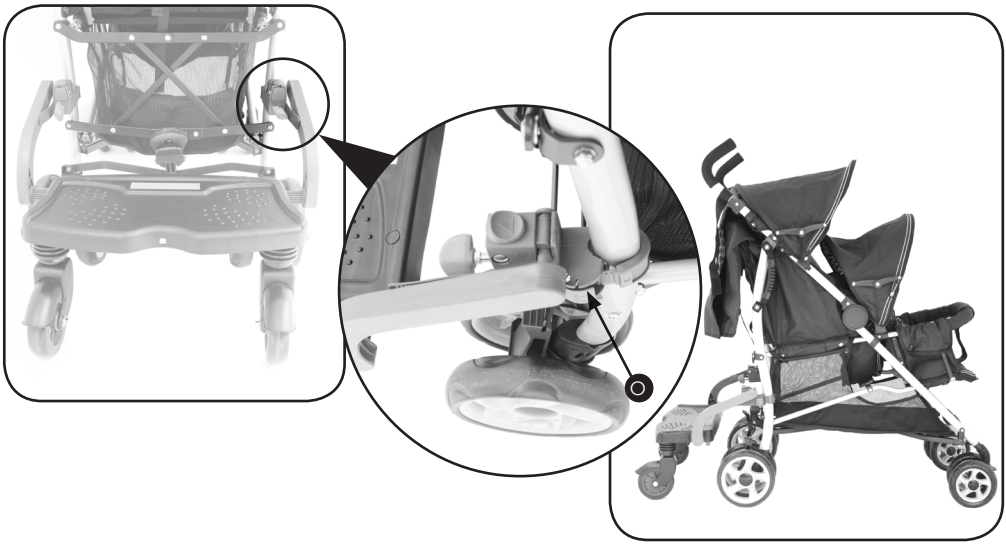


Fitting the board - ***3-in-1chassis***

Note: Strap (P) is facing inwards.

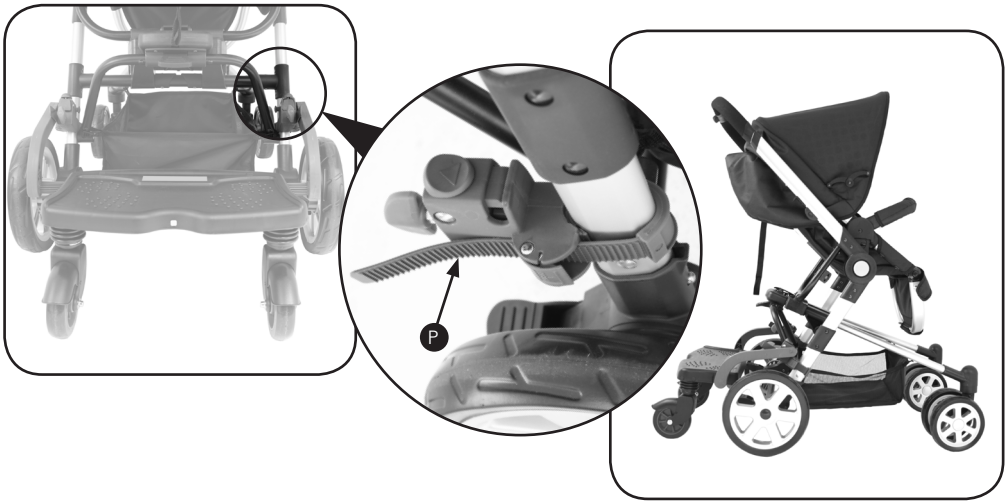

Fitting tips - *Strap facing outward or inward?*

The strap side of the connector sticks out a little bit, so it needs slightly more clearance space. If both sides of the connector have space (this means they are not touching the wheels or moving parts) then this is not an issue.

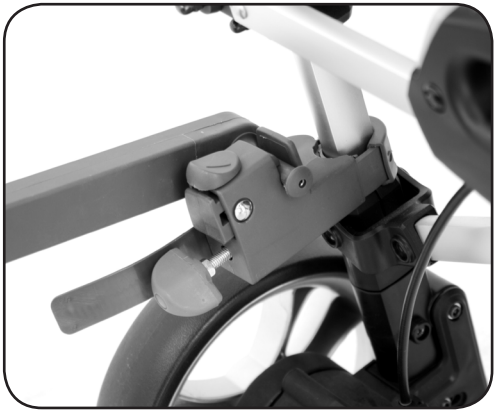


1. Outward = facing the wheel.



2. Inward = the two straps will be facing each other.

ATTENTION: DO NOT attach the connector upside down (i.e. with the quick release slider underneath)!

Fitting tips - *Fold it first*

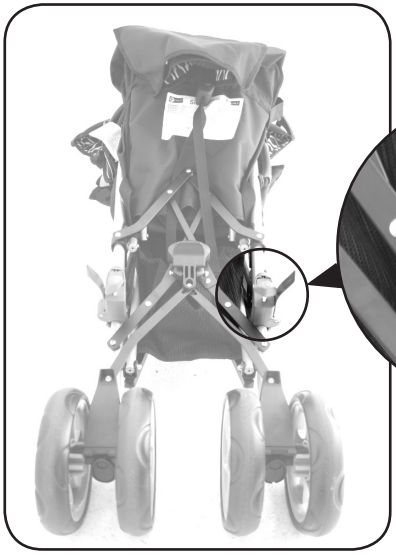

1. Does your pushchair still fold with the connector on the legs?

Fold it first. Then try to find a place on the legs where the connector will fit.


Now try to open and close the pushchair. If the connector obstructs this action, then reposition it on the legs. **(SEE NOTE BELOW).**

There may be more than 1 place where the connector fits that still allows the pushchair to fold.

Fitting tips - *Fold it first* *(continued)*




2. If the connector is high up on the leg then the board will be nearer to the pushchair. This will give you more leg room if you are taller and have a longer stride.

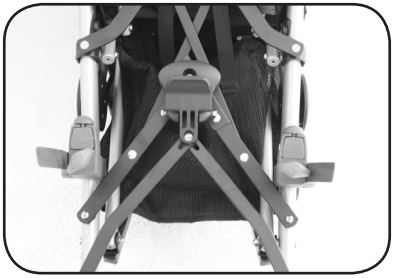

3. If you fit the connector low down **[RECOMMENDED]** then board will be further away from the pushchair, so you may find it easier to reach the brakes and may be more suitable for taller children.

NOTE: If you cannot find a place to fit the connector while the pushchair is in the folded position, or opening/closing action is obstructed, then you may need to remove the connectors before you can fold the pushchair.

Storage strap

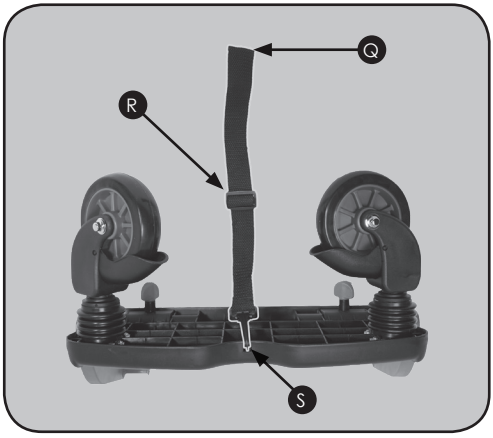

1. Attach the loop (Q) to the pushchair handle.

2. Attach the board to the pushchair (follow assembly and fitting guide).

3. With the board still connected to the pushchair, fold the board up against the back of the pushchair. Adjust the strap so the clip (R) reaches the board.

4. Fold the board against the back of the pushchair and attach clip to back of board (S).

ATTENTION: Do not allow strap to trail on the ground as it may be a trip hazard.

Customerservice@kooltrade.co.uk
Imported by MyChild. M34 3QA
www.mychild.co.uk
Tel: 0161 335 2508