
nailbot®

by preemadonna

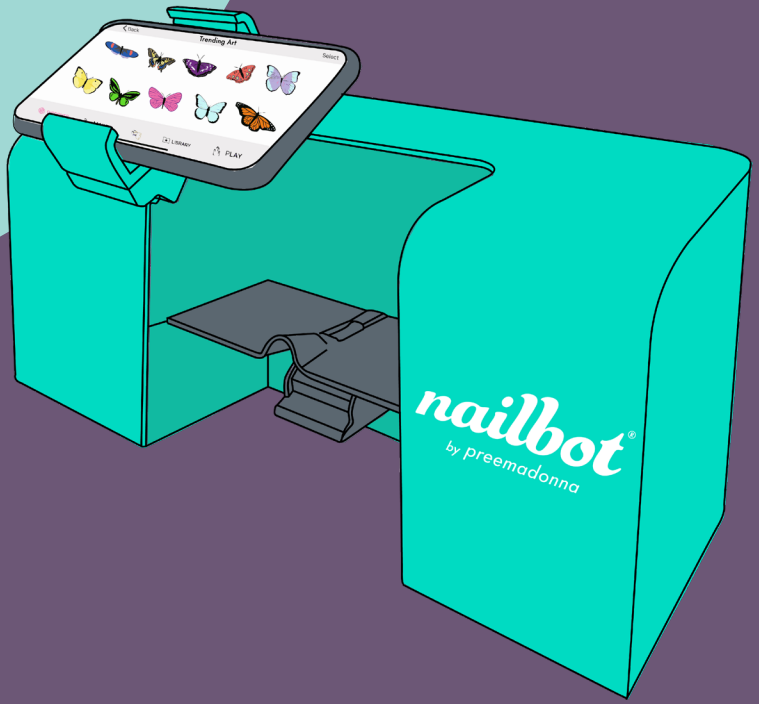

Set Up Guide

IMPORTANT SAFETY INSTRUCTIONS

⚠ Caution - Electrically Operated Product

When using electrical appliances and products, basic safety precautions should always be followed, including the following:

1. Read and save these instructions. Retain packaging for repack and important product and safety information.
2. For household use only. Place Nailbot on a dry, even surface near an outlet to minimize safety risk.
3. To protect against fire, electric shock, and injury to persons do not immerse product, cord, or plugs in water or other liquid. Do not handle product or accessories with wet hands.
4. Not recommended for children under 8 years of age. As with all electrical products, precautions should be observed during handling and use to reduce the risk of electric shock. Do not use near water. Avoid contact with eyes and mouth. Close supervision is required and necessary when the product is used by or near children 12 years or younger.
5. Unplug from outlet when not in use.
6. Do not operate any product with a damaged Power Supply (including the Power Jack and Power Tip) or after the product malfunctions, or has been damaged in any manner. If issues persist, please email Preemadonna Inc. at contact@preemadonna.com.
7. Keep all loose articles of clothing, jewelry, hair, and other small items away from the print area to prevent injury.
8. The use of accessory attachments not authorized by Preemadonna Inc. may result in fire, electric shock, or injury. Only for use with Power Supply provided by Preemadonna Inc.
9. Warning for Canvas Polish, Nailbot Primer and Top Coat: Flammable. Keep away from heat and flame. Avoid contact with eyes and mouth. Do not eat or drink. In case of contact with eyes, rinse immediately with plenty of water. In case of allergic reaction, stop using immediately and seek medical advice. In case of ingestion or contact with eyes or mouth, call Poison Control.

CONTAINS FCC ID: 2AA8B04

FC

Power Supply			
Rated Input Voltage	100-240V	Rated Output Power	60W
Rated Input Frequency	50-60Hz	Limited Warranty	1 Year

preemadonna

© 2021 Preemadonna Inc.| All Rights Reserved

For more instructional info & tips, visit www.nailbot.com

Table of Contents

Initial Hardware Set Up.....pg.1

The Nailbot App.....pg.6

Nail Prep and Printing.....pg.10

Troubleshooting and FAQs.....pg.13

Storage and Packing.....pg.19

Company Notices.....pg. 21

Initial Hardware Set Up

1. In the Box

Nailbot



Power Supply



Ink Cartridge



Phone Cradle



Accessory Bag



Polish, Primer, Top Coat



Alcohol Wipes



Lint Free Pads


Photo Paper



Box Contents	
Quantity	Item
1	Nailbot
1	Power Supply
1	Ink Cartridge
1	Phone Cradle
1	Accessory Bag
1	Canvas Polish
2	Nailbot Primer
1	Top Coat
10	Alcohol Wipes
5	Lint Free Pads
4	Photo Paper Sheets


2. *Get to Know Your Nailbot*

Take your Nailbot out of the packaging and get familiar with its features. Do not discard any part of the packaging as you will need it to safely store your Nailbot.

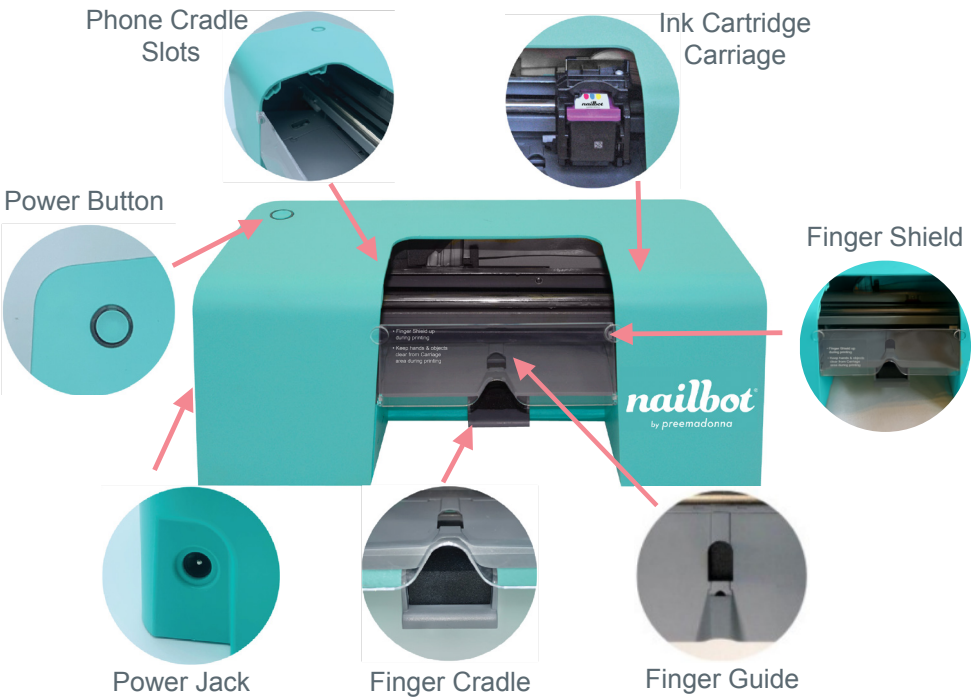

3. *The Finger Shield*

The Finger Shield is a small plastic piece in the center of your Nailbot that keeps obstructions from entering the print area. It is hinged so you can move it up and down when setting up or servicing your Nailbot. To begin, move the Finger Shield down and out of your way during setup.

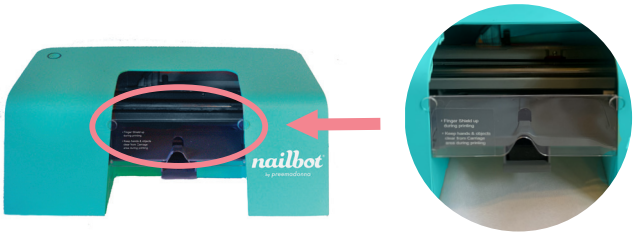

Finger Shield


4. *Prep Your Nailbot*

Gently remove the white tape on the upper right of your Nailbot. Next, remove the Ink Cartridge's clear clip slowly. Do not discard this clip as it may be needed later. Ensure the bottom of the Ink Cartridge does not touch any surfaces.



5. Insert Ink Cartridge


Using your left index finger, pull the Ink Cartridge Carriage towards the center of Nailbot and stop to the right of the Finger Guide. Insert the Ink Cartridge by tilting it upward and pushing it into its holder. When it is properly inserted, you will hear a click. Gently slide the Carriage all the way back to the right. Move the Finger Shield back up.

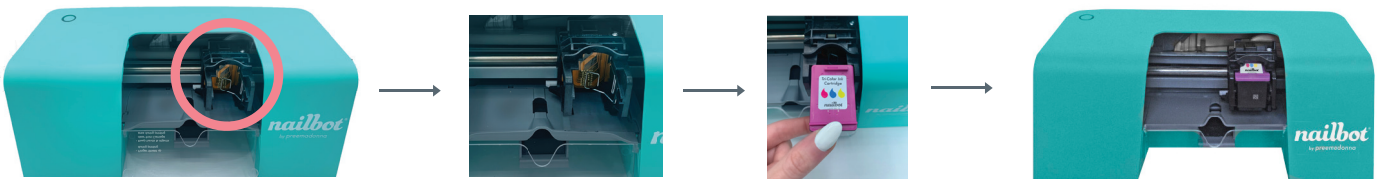

6. Power Up

Insert the Power Supply's Power Tip into the Nailbot's Power Jack. Plug the Power Supply into a nearby electrical outlet. Wait a few seconds, then press the Power Button. It will light up white when powered on.




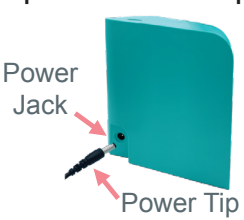




7. Attach Phone Cradle

Align the Phone Cradle's legs with the slots on the Nailbot. Slide the cradle into the slots.

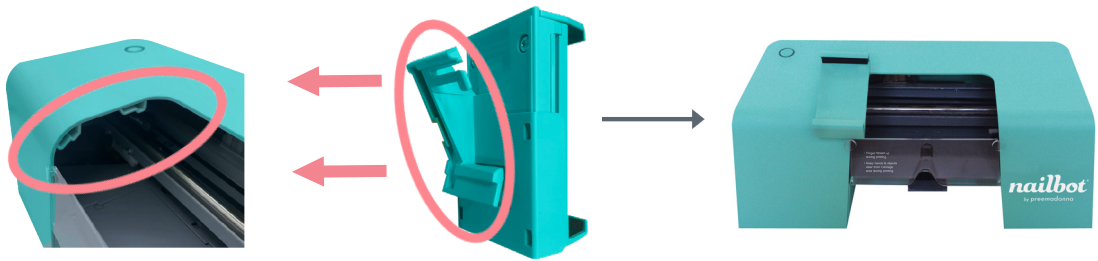


8. Phone Position

Open your phone's camera app and turn your phone to the right. Your capture button should be on the left of your screen. Insert your phone into the cradle and adjust it so that the Finger Guide is on the middle of your camera's screen.

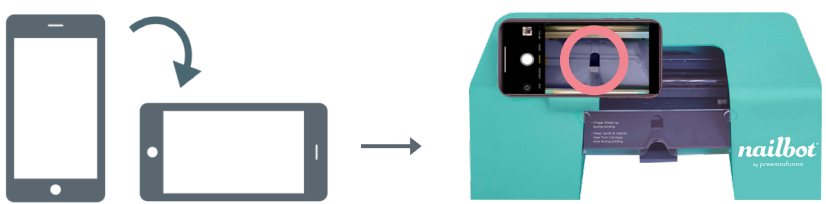

9. Phone Cradle Toggle

Not every phone will need to toggle its cradle to reach the correct position. Using your thumb, push the Toggle button on the bottom of your Phone Cradle in. Gently slide the cradle down until the Finger Guide is centered on your camera's screen.

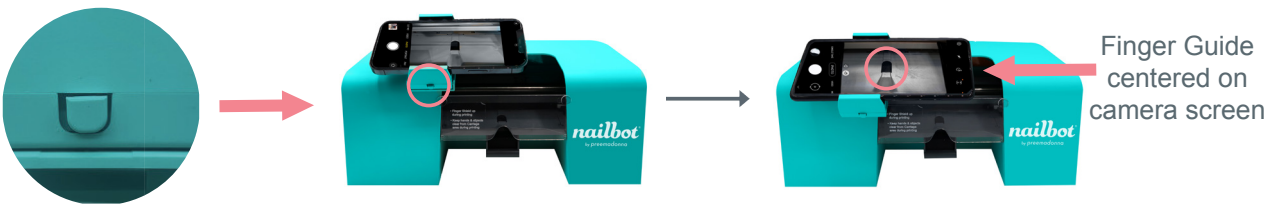

The Nailbot App


1. Download the App

Download the Nailbot app and follow the prompts to create your free account.




2. *Explore the App*


By selecting the Discover icon in the bottom left corner of the app, you can explore thousands of art collections and designs in the **Discover Section.**

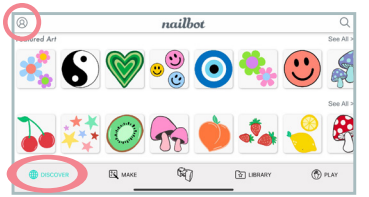

3. *Bluetooth Pairing*


Navigate to the **Profile Section** by selecting the top left Profile icon. Scroll down and select “Nailbot Pairing”. Your Nailbot should appear in the list. Select the check mark icon . It will turn from gray to mint and you will receive a confirmation pop-up when your Nailbot is connected to your device.

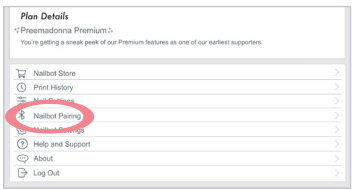

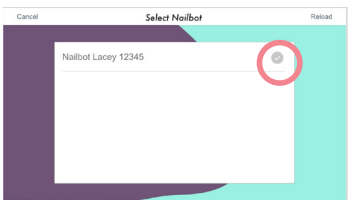


4. *AR Section (Augmented Reality)*

Select a piece of art to print from the app. Ensure the Finger Shield is in the up position and place your finger in the Finger Cradle. Align the base of your nail bed with the bottom of the Finger Guide to enable AR. You will see your selected image on your nail. For more finger placement tips, see pages 11 and 15.

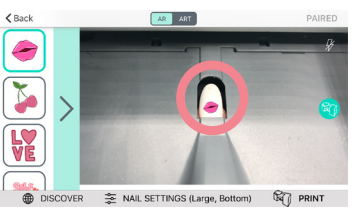


5. *Adjust Art*

Select the arrow icon on the **AR Section.** The **Nail Settings Section** will appear. Here, you can change the size, position, and flip your art. Changes will be reflected once you select the Save button.

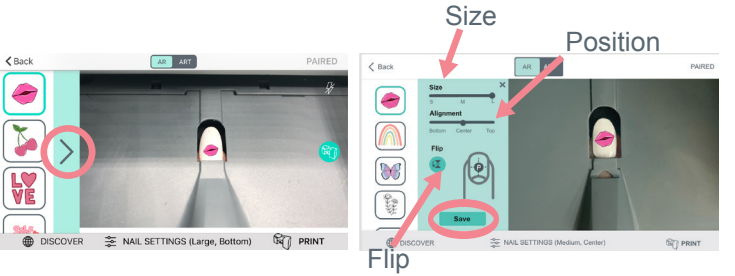


6. *Favorite Art and Create Playlist*

From the **Discover Section**, navigate to the **Library Section** by selecting the Library icon on the bottom bar. Select your **Favorites** folder to view your favorited art. You can “Favorite” art by long-pressing it in the **AR Section,** or toggling to the **Art Section** and selecting the heart icon in the top right corner of each art design. Use the Toggle button to view your Playlists and create new ones. Playlists are personalized collections of art that you can curate.

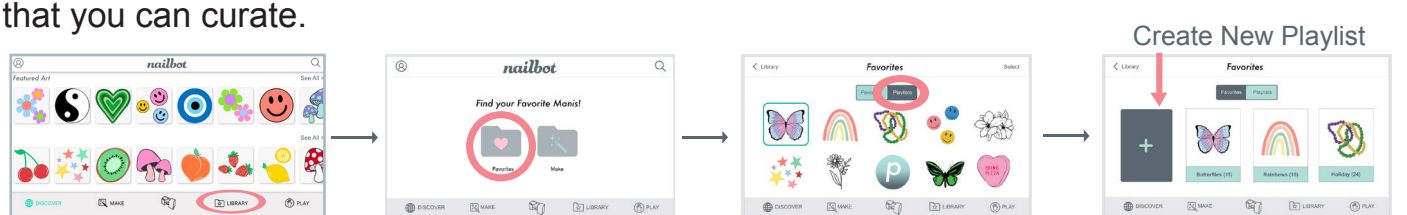


7. Make Art

Navigate to the **Make Section** by selecting the Make icon. Here, you can select a photo from your camera roll or capture a photo to use. From your selection, you can crop your art, draw on it, type on it, and use stickers or filters to customize your design.

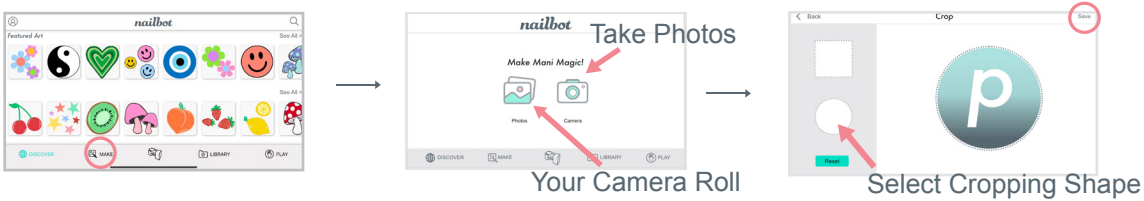


After designing, click Save in the top right corner. You can find your previously made designs in the **Library Section** by selecting Library, then Make.

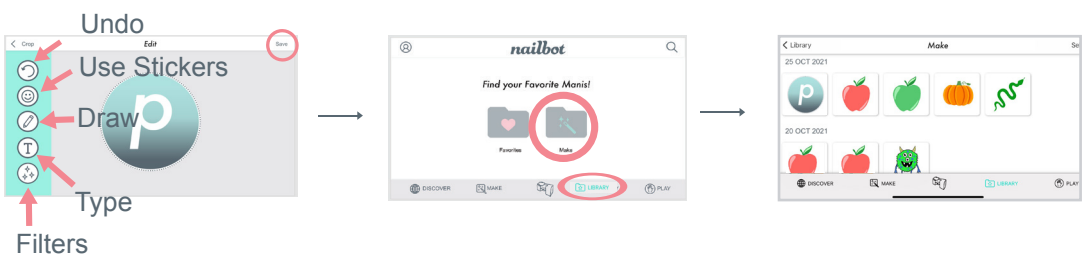

Nail Prep & Printing

1. Prep Your Nails

Thoroughly roll the Canvas Polish bottle between your palms. Apply two thin and even coats of the polish and let it dry completely. Other light-colored polishes may be used, but white produces the best results.

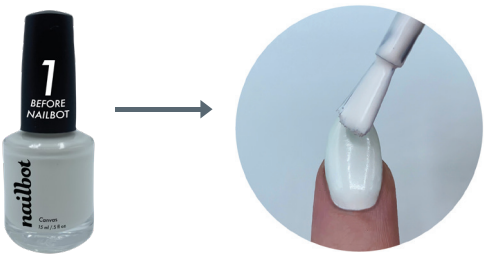


2. Prime Your Nails

Apply one thin coat of Primer on top of Canvas Polish. Wait 60 seconds for the Primer to turn completely matte and dry to the touch. If a non-white polish is used, expect the Primer to dry matte white on top of the colored polish.




3. Finger Placement

- Rest one finger flat on the foam piece of the Finger Cradle. Keep your finger relaxed.
- Don’t lift your finger or poke through the Finger Guide.
- Align the base of your nail bed with the base of the Finger Guide. Keep your finger even with the guide and still during printing.
- Keep fingers outside of the Carriage area during printing.

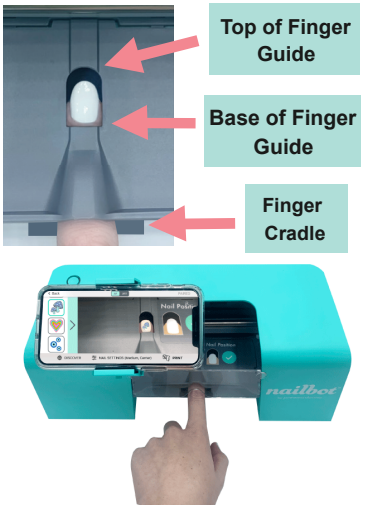

4. Print

Select the piece of art you would like to print and tap the Print button in the bottom right corner. Record your print using the video icon on the right once it pops up.

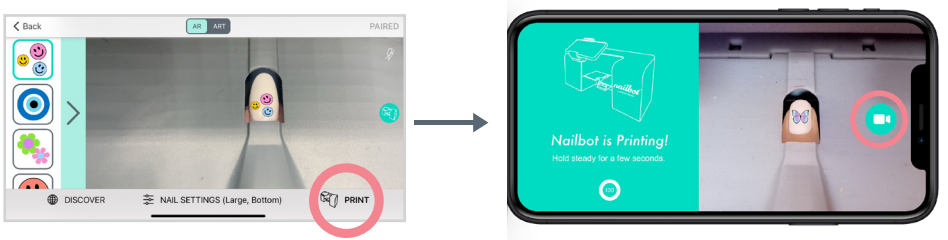

5. Top Coat or Reprint

Once you love your print, apply one coat of Seal the Deal top coat to ensure that your design will last. If you used a different color polish as your base, apply two coats of Seal the Deal top coat evenly and the matte white primer will disappear.





Seal the Deal
over Canvas Polish



Seal the Deal
over pink polish

Do not seal if you're unhappy with your print. Instead, erase it with an alcohol wipe. Reapply primer and wait 60 seconds to print again.

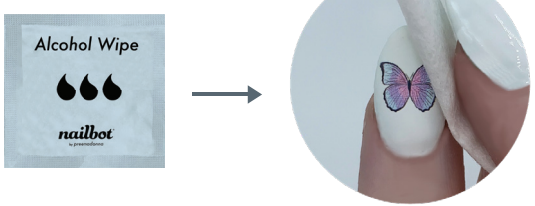

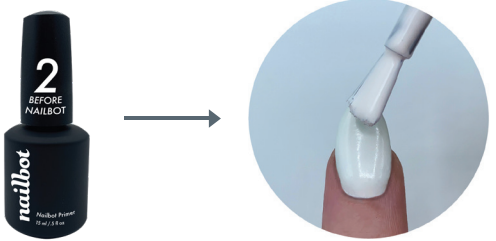

Troubleshooting & FAQs

1. Print Quality Issues

- Why is my print streaky?
- Why is my print blurry?
- When should I change my Ink Cartridge?

2. Common Questions

- Why does Nailbot miss my nail when printing?
- Why is my Nailbot having trouble pairing?
- How do I use the Phone Cradle Toggle feature?

3. Support Questions

- What does each Nailbot light ring color mean?
- Will Nailbot need a firmware update?




Print Quality Solutions

Q: Why is my print streaky?

A: It's possible that the nozzles in your Ink Cartridge are clogged. Often users haven't waited for their Canvas Polish and primer to dry before printing and have pushed their nail too high, touching the cartridge nozzles.


1. Take the cartridge out and inspect the nozzles. If it looks like there is streaking, take an included lint pad and gently swipe over the nozzles to remove the build-up. If the lint pad doesn't remove the streak, you can try an alcohol wipe.

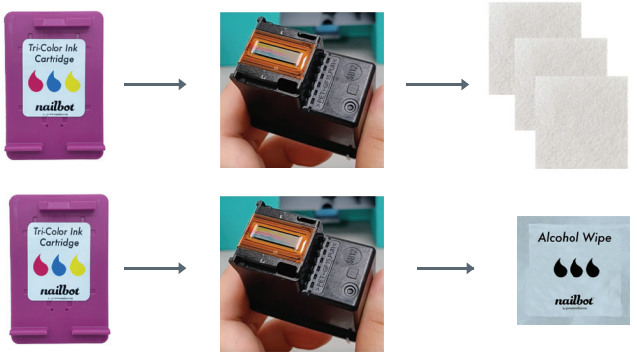


2. If you don't have a lint pad or alcohol wipe, try using a clean paper towel. Gently drag your Ink Cartridge across a paper towel. A bright streak of blue, magenta, and yellow should be visible on the paper towel. This indicates that your Ink Cartridge is clean.



3. Place your Ink Cartridge back into your Nailbot and slide the Carriage all the way back to the right. Power on and re-pair your Nailbot to your mobile device. Slide a sheet of the included photo paper in the Finger Cradle and make sure it is visible within the Nailbot's Finger Guide.

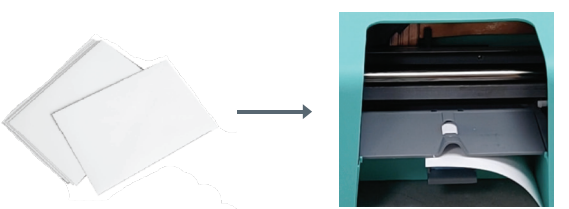

4. Print 3-5 designs onto your Photo Paper. Check your prints for streaking or discoloration. Repeat these steps again if you notice any issues.

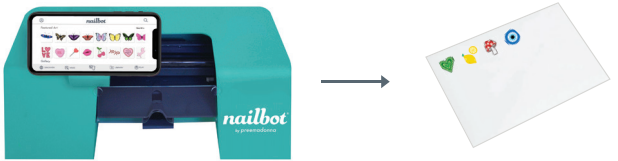

Q: Why is my print blurry?


A: A blurry print could be due to poor polish application or poor finger placement. Follow these tips to ensure you get the right print every time.

Make sure your nails are prepped with both the Canvas Polish and Nailbot Primer. Make sure your nails are dry to the touch after both applications.




Nail Position DO's:

- Align the bottom of your nail bed with the bottom of the Finger Guide. Place the Finger Shield up.
- Rest your finger in the Finger Cradle so your nail bed is flush with the Finger Guide.
- Keep all other fingers including thumb below the Finger Guide and the Finger Shield.

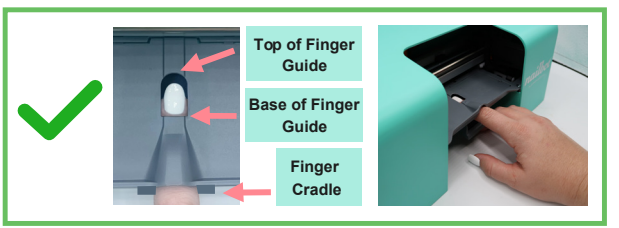

Nail Position DON'Ts:


- Don't push down on the Finger Cradle.
- Don't lift finger up and through the Finger Guide.
- Don't rest any fingers on top of Finger Guide.

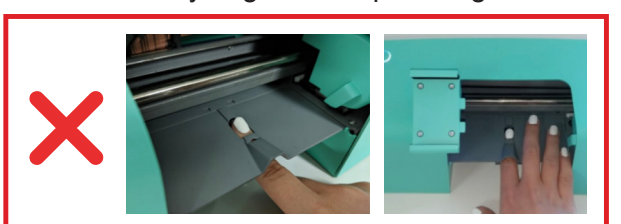

Make sure the artwork you are creating is a high quality image. Nailbot is designed to print at ~600 DPI resolution. Often prints are blurry because the images are not high enough in quality or the image is too detailed for Nailbot to capture accurately on such a small canvas.

Q: When should I change my Ink Cartridge?

A: You can manually check your Ink Cartridge's "Ink Levels" by navigating to the "Nailbot Settings" section in the **Profile Section** of the mobile app.

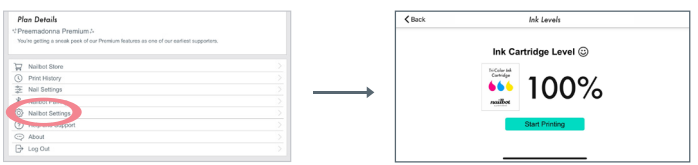


Common Question & Solutions


Q: Why does Nailbot miss my nail when printing?


A: Here is an insider tip to print in the right spot every single time!

For Small Nails: Resize to "Small" and "Bottom". Place your finger in the Finger Cradle so that the nail bed is flush with the bottom of the Finger Guide.

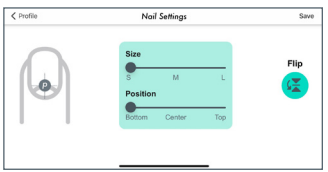


Settings for small nails

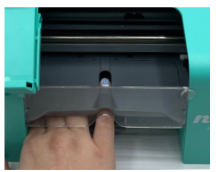

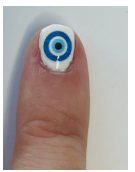



Small print on small pinkie nail

For Medium or Large Nails: Resize to "Medium" or "Large" and set to either "Bottom" or "Center". Place your finger in the Finger Cradle so that the nail bed is flush with the bottom of the Finger Guide.

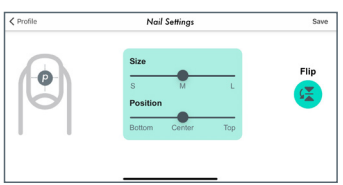

Settings for medium nails

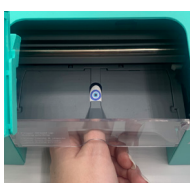

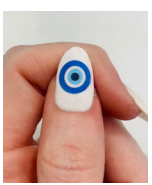

Medium print on large thumbnail

Q: Why is my Nailbot having trouble pairing?

A: If your Nailbot does not appear on the Nailbot Pairing list, ensure that Nailbot is on and Bluetooth is enabled in your phone settings. Make sure no other phone is paired to your Nailbot. Power off the Nailbot you want to pair to and then power it back on. Pair the Nailbot app to the Nailbot.

If your Nailbot app is paired but you're getting "Print Failed" messages, power off and unplug the Nailbot. Close out the Nailbot app. Power on Nailbot and re-open the Nailbot app. Pair the Nailbot app to the Nailbot. Make sure your phone has the latest version of the Nailbot app.

If you have multiple Nailbots in your house, make sure you are pairing to the correct Nailbot. Each Nailbot has a unique Nailbot Hardware Serial Number located on the bottom of your Nailbot. The last 5 digits of the Serial Number will correspond to the Nailbot Pairing list.






Q: How do I use the Phone Cradle Toggle Feature?


A: Adjust the Phone Cradle by pushing in the toggle button with your thumb and sliding the cradle until the Finger Guide is centered on your screen. If you are still having issues navigate to the Middle Section of the app and watch the "Phone Cradle Tips and Placement" video.

Support Questions & Solutions

Q: What does each Nailbot light ring color mean?

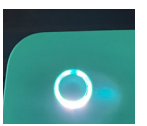

WHITE LIGHT: Nailbot is on and working. This white light indicates that everything is running smoothly and correctly.

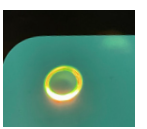

ORANGE LIGHT: This could be due to a missing Ink Cartridge, an incompatible Ink Cartridge that has been inserted into Nailbot, or an obstruction in the print area.

Step 1. Check that there are no objects, hands or fingers in the way of the carriage. If so, remove them.

Step 2. If the light ring returns to white, continue usage as normal. If the light ring turns red, refer to the next section on rebooting Nailbot.

If the light ring remains orange, continue to Step 3.

Step 3. Power off Nailbot and pull the Carriage toward the center of Nailbot. Stop to the right of the Finger Guide (refer to page 4).

Step 4. If an Ink Cartridge is missing, insert a Nailbot Ink Cartridge.


Step 5. If an Ink Cartridge has been inserted, remove the Ink Cartridge and check that it is a Nailbot Ink Cartridge. **Only Nailbot Ink Cartridges are compatible with the Nailbot System - others do NOT work.**

Step 6. If a Nailbot Ink Cartridge was inserted, remove it from the Carriage and check that the clear clip has been removed. Reinsert it into the Carriage, making sure it clicks into place (see page 4).

Step 7. Gently push the Carriage back into place once a compatible Nailbot Ink Cartridge has been inserted.

Step 8. Power on Nailbot. Check that the light ring is white, then continue usage.

RED LIGHT: User Intervention Required - Reboot Nailbot Sequence

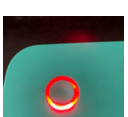

Step 1. Check that there are no objects, hands or fingers in the way of the carriage. If so, remove them.


Step 2. Power off Nailbot and unplug the Power Tip from the Nailbot.

Step 3. Wait 10 seconds, then replug the Power Tip into the Nailbot Power Jack.

Step 4. Power on Nailbot. If the light ring is white, continue usage as normal. If the light ring is still red, repeat steps 1-4.


Q: Will Nailbot need a firmware update?

A: If your Nailbot needs a firmware update - we will alert you via the Nailbot app. We don't anticipate firmware updates occurring regularly and only in a much needed event. When Nailbot is going through a firmware update, it will flash multiple colors on the light ring. The Nailbot light will change colors from white, to orange, to blue until it turns off and completes the update.

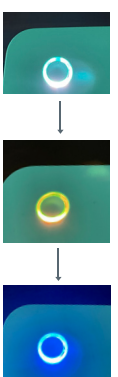

Storage and Packing

1. Store your Nailbot on a dry and flat surface where it will not easily be knocked over or come into contact with liquids. Surfaces such as desks and side tables work well. Unplug Nailbot when it is not in use. Leave the Ink Cartridge in the Nailbot when not in use.

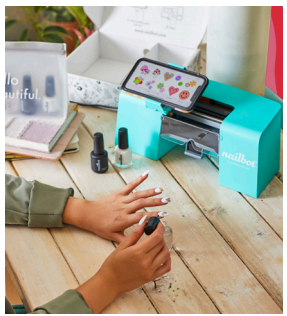

2. Power off the Nailbot and remove the Power Tip from the Power Jack. Remove your mobile device from the Phone Cradle. Gently remove the Phone Cradle itself by pulling to the right until the legs are free from the Nailbot.



3. Wrap up your Power Supply and place it back in your Accessory Box. Your polishes and Phone Cradle can fit in your “Hello Beautiful” Accessory Bag.



4. Place your Nailbot and your Accessory Box back into the foam casing of your large Nailbot Box. Place the Cardboard Insert back on top of the Nailbot and close the lid on your box. Now you’re ready to travel with your Nailbot!



Nailbot Pro Tips

Color in the doodles on your Nailbot box using colored pencils or crayons so it will look snazzy! Decorate and personalize your Nailbot using the included sticker pack!






The **Middle Section** of the Nailbot mobile app has FAQ videos to help answer common questions.



Purchase authorized replacement consumables including authorized Ink Cartridges or Nail Care Consumables (Canvas Polish, Nailbot Primer, Top Coat) on our website. Do not insert any unauthorized cartridges inside the Nailbot. You can access our store by selecting “Nailbot Store” in the Profile Section.

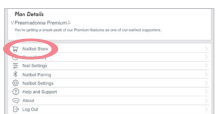





Follow us on Tiktok, Instagram, and YouTube to stay up to date on all things Nailbot. Email us at contact@preemadonna.com for more support.

@nailbot

youtube.com/preemadonna

@preemadonna

contact@preemadonna.com

preemadonna

Company Notices

Terms of Service:
Your use of the Nailbot system is governed by the Terms of Service and Privacy Policy listed at preemadonna.com/termsofservice. By using our Services, you accept and agree to be bound by these Terms. If you do not agree to be bound by these Terms, do not use the Services.

Nailbot Hardware Serial Number:
The Nailbot Hardware is assigned with a Nailbot Hardware Serial Number. This number is located on the bottom label of the Nailbot Hardware.

Support:
Please keep this Nailbot Set Up Guide for future use. Fix common Nailbot printer issues by visiting our FAQs on the website, watching the linked videos in the Nailbot mobile app, visiting our social media sites, or reviewing this manual.

Ingredient Information:
Information is available for the ingredients used in the Nailbot system at preemadonna.com/ingredients.

Patents:
Preemadonna's Nailbot System is protected by U.S. Patents 9,687,059, 10,470,546 and 10,477,937. Additional Patents are pending in the U.S. and elsewhere.

Trademarks:
Nailbot and Preemadonna are registered trademarks of Preemadonna Inc. Android, Google Play and Android logo are registered trademarks of Google LLC in the United States and other countries and regions. iPhone, Apple and the Apple logo are registered trademarks of Apple Inc. in the United States and other countries and regions. Bluetooth is a trademark of Bluetooth Sig, Inc. in the United States and other countries and regions.

© 2021 Preemadonna Inc.| All Rights Reserved