INALSA

HANDHELD VACUUM CLEANER

Ozoy
Ozoy Plus

Instruction Manual
Cum
Warranty Card

⚠ **Caution:** For longer motor life & best performance, use this vacuum cleaner 10-12 min continuously and then give 3 min break so that motor cool down before next use.

Dear Customer,

Congratulations! On the purchase of your **INALSA Handheld Vacuum Cleaner** this is designed to include many superior features that permit you the fullest expression of your cleaning skill and enthusiasm. You are now on the threshold of a whole new world of cleaning pleasure.


At INALSA, we have a reputation of manufacturing innovative, high quality appliances such as Food Processors, Mixer Grinders, Cooking Ranges, Air Fryers, Oven Toaster Grillers, Hand Blenders, Electric Kettles, Electric Chimneys, Garment Steamers, Vacuum Cleaners & Power Tools. Your newly acquired **INALSA Handheld Vacuum Cleaner** bears the same distinctive hallmark of excellence.

It is all the result of vigorous quality consciousness in INALSA's design and development where uncompromising standards are maintained and rigid quality control measures are exercised on raw materials, components and finally, the finished product.

Your **INALSA Handheld Vacuum Cleaner** has a lot of thoughtful features built in to make your cleaning convenient. Please read these instructions carefully, so that you may get the best out of the power packed features in your **INALSA Handheld Vacuum Cleaner.**


Welcome to the INALSA world of cleaning pleasure!!

Parts Identification: **Ozoy Plus**

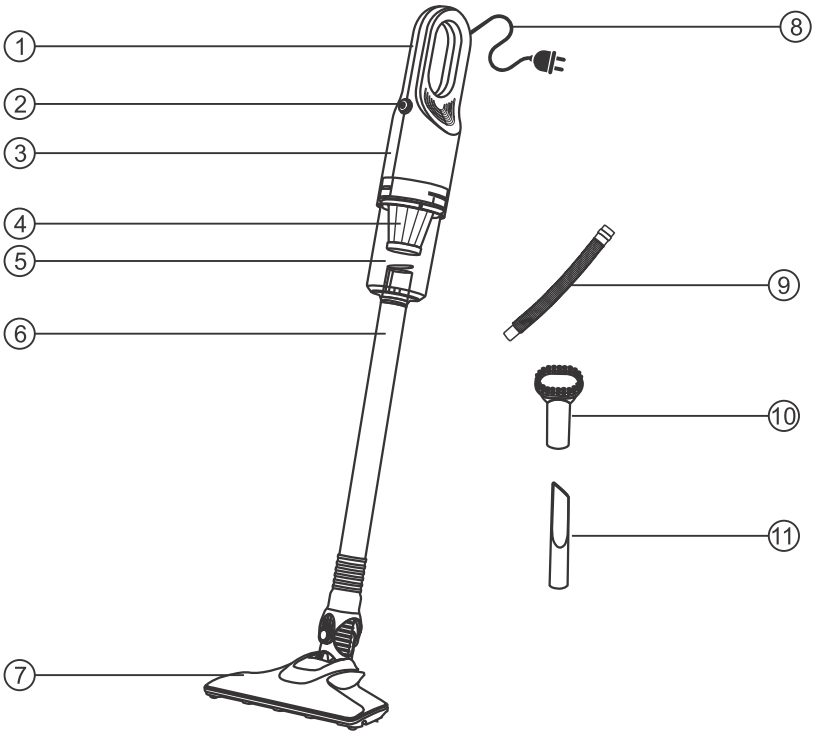

1. Easy Carry Handle
2. ON/OFF Switch
3. Main Unit
4. HEPA Filter
5. Transparent Dust Collector
6. Extension Pipe
7. Floor Brush
8. Power Cord
9. Flexible Hose Pipe
10. Round Brush
11. Crevice Nozzle

Parts Identification: **Ozoy**

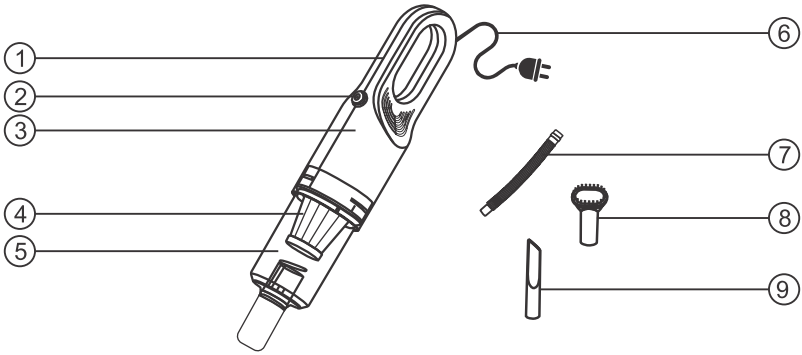

1. Easy Carry Handle
2. ON/OFF Switch
3. Main Unit
4. HEPA Filter
5. Transparent Dust Collector
6. Power Cord
7. Flexible Hose Pipe
8. Round Brush
9. Crevice Nozzle

Technical Specification*

Product	Handheld Vacuum Cleaner	
Model	Ozoy Plus	Ozoy
Wattage	700 W	
Voltage	240V, AC, 50Hz	
Cord Plug	≥ 6A 2 Pin moulded plug with 5.0mtr PVC cord	
Dust Container Capacity	800 ml	
Vacuum Pressure (max)	14 kpa	
Noise Level	75dB	
Safety	Overheat Safety Protection	
Floor Brush & Extension Pipe	Yes	No

* Due to continuous improvements in product, specifications are subject to change without prior notice.

Important Instructions

To avoid potentially fatal electric shocks:

1. Do not use the appliance outdoors.
2. Never use the vacuum cleaner if the cable, plug or casing are damaged.
3. To avoid risks, replace damaged power cables and/or plugs as soon as possible by INALSA authorized service personnel only.
4. Under no circumstances you should open the appliance yourself. Interference that are not carried out by a INALSA authorized service personnel could lead to physical injuries.
5. Before switching the vacuum cleaner ON, ensure that the mains voltage corresponds to the voltage indicated in the technical data for the appliance.
6. Never touch the power supply or the appliance with wet or damp hands.

To avoid the risk of injury:

1. Do not change any accessories while the appliance is switched ON.
2. Do not use the vacuum cleaner for vacuuming up sharp objects or glass shards.
3. Never vacuum up burning matches, glowing ashes or cigarette butts.
4. Do not use the vacuum cleaner for vacuuming up chemical products, stone dust, gypsum, cement or similar particles.
5. Do not use the vacuum cleaner for vacuuming up liquid, water or similar particles.
6. This appliance is not suitable for use with inflammable and explosive substances or chemical and aggressive liquids.
7. Always store the appliance indoors. To prevent accidents, keep the appliance in a dry location when not in use.
8. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Tips for Safety:

1. Only use accessory parts recommended by INALSA.
2. Always grip the plug to disconnect the appliance from the power supply.
3. Always be sure to keep the vacuum away from heating elements, ovens or other heated appliances and surfaces.
4. Always make certain that air outlet openings are not blocked. A blocked ventilation circuit can result in overheating and damage to the appliance.
5. Take special care when using the vacuum on stairs.
6. Do not use the vacuum without the HEPA filter inserted.

Where to Use Accessories:

Flexible Hose Pipe : Gives you the flexibility to reach hard to clean areas.

Round Brush : For cleaning sofas, mattresses, pillows, cushions & curtains.

Crevice Nozzle : To clean under the stove, refrigerator, corners & other such places where your hand can not reach. It can also be use to clean along the edge of base boards, vents etc.

How to Use Vacuum Cleaner :

1. Attach desired accessory with the suction inlet of vacuum cleaner. (Fig- 1,2 & 3)




Fig - 01




Fig - 02




Fig - 03

2. If you wish to use flexible hose, fit one end of hose pipe into suction inlet pipe & desired accessory on another end of hose pipe. (Fig - 4 & 5)




Fig - 04




Fig - 05

3. Put the plug into electric socket & switch ON the vacuum cleaner.

Note : Do not attach / detach accessory while vacuum cleaner is running.

How to Use Vacuum Cleaner :

(For Ozoy Plus Only)

1. Connect extension pipe with floor brush by simply pushing it into the hole of floor brush pipe. (Fig- 6)


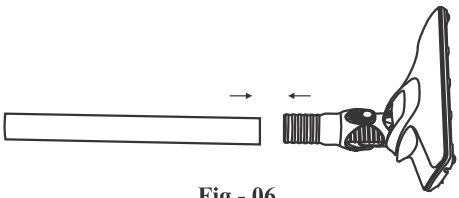


Fig - 06

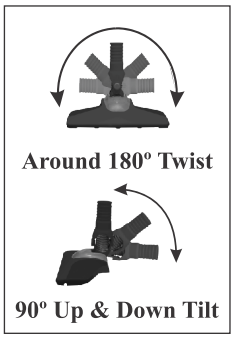

2. You can attach extension pipe to the vacuum cleaner by simply pushing suction inlet into the another end of extension pipe . (Fig- 7)

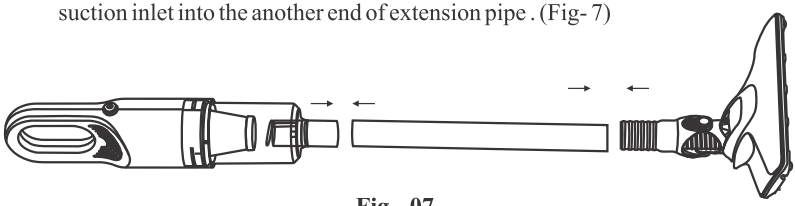


Fig - 07

3. You can directly plug in floor brush by gently pushing suction inlet into floor brush pipe.(Fig - 8)

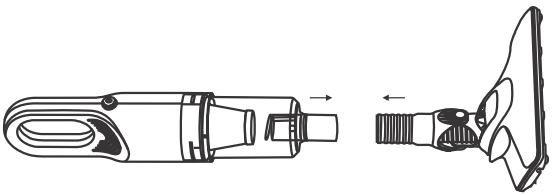


Fig - 08

⚠ **Caution:** For longer motor life & best performance, use this vacuum cleaner 10-12 min continuously and then give 3 min break so that motor cool down before next use.

Cleaning & Storage :

The dust container should emptied & the filter should be cleaned after each use, or at least on daily basis. To do so, the steps should be followed :-

1. Rotate the dust collector anti clockwise to take out the dust tank from main unit.
2. Take out HEPA filter from main unit by rotating it anti clockwise and transfer dust from duct collector into dustbin & rinse under running water.
3. Tap the dust away from HEPA filter & rinse using running water.
4. Clean the main unit with the help of damp cloth. Do not dip main unit in any kind of liquid, or use any kind of abrasive material.

5. Keep all parts in free air to dry.
6. When all parts are completely dried, assemble the vacuum cleaner & store in a dry place.

Please Note

The HEPA filter is washable. It should, however, be replaced every three(3) to six(6) months depending on usage, to ensure best performance of your vacuum cleaner.

Important

Make sure that dust filter has completely air dried before replace back In the vacuum cleaner.

Troubleshooting**

Problem	Possible Cause	Solution
Vacuum cleaner does not work	No power supply in socket	Check fuse or breaker, replace fuse/reset breaker
	Vacuum is not plugged in properly	Check the plug & fit it into socket
	Power switch button is not "ON"	Switch "ON" the power button.
Vacuum cleaner cannot pick-up dust; suction power become weak	Dust tank is full	Empty dust tank
	HEPA filter needs cleaning or replacement	Remove HEPA filter and check for object(s) in suction inlet and remove. Clean or replace HEPA filter assembly
	Air outlet openings are blocked	Check if there is any obstacle in ventilation path
	Inlet is blocked / partially blocked	Check & remove blockage in hose, accessories or suction inlet
Dust leak from vacuum cleaner	Dust tank is full	Empty dust tank
	HEPA filter is not installed correctly	Install the HEPA filter Correctly
	Puncture / hole in HEPA filter	Replace HEPA filter
Hose or accessories do not pick up dust	Hose Clogged	Remove obstruction from Hose
	Accessories Clogged	Clean Accessories
No air at the air outlet	The air outlet is blocked	Clean up the dust in the air outlet in time

** In case the problem still persists, please contact INALSA authorized service center.

WARRANTY

The **"Inalsa Handheld Vacuum Cleaner"** is fully warranted against any manufacturing defect for a period of **One Year** from the date of purchase. Should any defect develop in the **Vacuum Cleaner** during the warranty period, **TUAREG MARKETING PVT. LTD.** undertakes to get the **Vacuum Cleaner** or any part there of, repaired at any of its Authorised Service Center.

The above warranty shall be subject to the following terms and conditions:-

1. Any defective product or part thereof will be repaired within the above stated warrant. period on receipt of the same with this card duly filled in and stamped by dealer from whom the product was purchased along with the purchase bill/ invoice, provided the product is brought to our nearest service center freight paid and packed securely.

2. In the event of repairs/ replacement of any part of product, this warranty will thereafter continue and remain in force only for the unexpired period of warranty.

3. This warranty is valid only when:-

- The product is purchased from the company's authorized dealer and accompanied by this warranty card / cash memo.

- The product has been installed, used and maintained in accordance with the instruction manual.

4. The warranty does not apply to :-

- Normal wear and tear of the product

- The product has not been serviced by the Inalsa authorized service personnel.

- Damage due to chipping, peeling, plating and denting.

- Damages arising due to running of the appliances on the alternate sources of power such as Inverter, generator or any such auxiliary power supply aid resulting in variation/ fluctuating voltage

- Breakage or damage to components made of ABS, SAN, Bakelite, Glass and such plastic/rubber parts, cord, bulbs and surface coating.

- Damages resulting from accidents, mishandling or negligence on the part of the customer

- Product if used for the commercial purposes.

- Product, the serial number of which has been removed obliterated or altered on the specification plate.

5. The warranty is in lieu of all other warranty, expressed or implied and does not cover indirect or consequential damages/ loss.

WARRANTY CARD

Product : Handheld Vacuum Cleaner

Model : Ozoy Plus ☐ Ozoy ☐

Serial No : .....

Date of Purchase : .....

Bill/ Cash Memo No. : .....

Purchaser's Name : .....

Address : .....

: .....

: .....

Dealer's stamp and Signature

Scan For Extended Warranty Registration

Must register within 30 Days from date of purchase to avail **6 MONTHS EXTENDED WARRANTY**

- Please scan the **QR CODE** for product registration and avail **"6 MONTHS EXTENDED WARRANTY"** on product
- Please preserve the invoice for the product warranty claim. Customer purchasing from online platforms needs to produce the online partner's invoice copy to claim the warranty

or visit : www.inalsaappliances.com/product-registration

Scan and Download INALSA Connect App to Register your Warranty & Complaint

For any feedback or complain, you can also connect us at :
E-mail- customercare@inalsa.co.in

Customer Care Number
(Open on all 7 Days* from 9:30 to 18:30)
9773982065

INALSA

TUAREG MARKETING PVT. LTD.
Khasra No - 1189, Bhalswa, Delhi- 110033