


# LED MONITOR

## Product manual



LED MONITOR Product manual

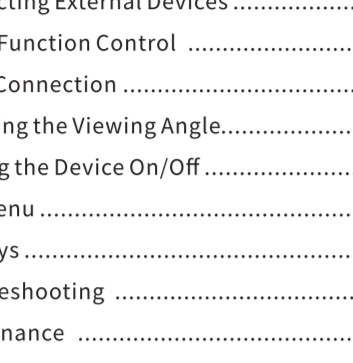


LED MONITOR Product manual




LED MONITOR Product manual




LED MONITOR Product manual




LED MONITOR Product manual




LED MONITOR Product manual




LED MONITOR Product manual



LED MONITOR Product manual




LED MONITOR Product manual



LED MONITOR Product manual




LED MONITOR Product manual




LED MONITOR Product manual




LED MONITOR Product manual




LED MONITOR Product manual




LED MONITOR Product manual




LED MONITOR Product manual



LED MONITOR Product manual



LED MONITOR Product manual



LED MONITOR Product manual

**Contents**

Welcome.....3

Package Contents.....3

Product Overview.....3

Installing the Stand.....4

Connecting to Power.....4

Connecting External Devices.....7-8

Touch Function Control.....9

Audio Connection.....10

Adjusting the Viewing Angle.....11

Turning the Device On/Off.....12

OSD Menu.....13

Hot Keys.....14

Troubleshooting.....15-16

Maintenance.....17

Product Guarantee.....18

**Welcome**

**Package Contents**

- 1.Touch Display
2. Power cord
- 3.HDMI cable
- 4.USB 2.0 touch cable (Type-A to Type-A)
- 5.Quick start guide

**Front View**

56.5cm

Display Screen

Power LED

Power Button

WU

AUTO

**Rear View**

1. HDMI
2. VGA
3. Audio
4. Power
5. USB

**Product Overview**

1. Place the monitor on a flat, stable surface with the screen facing down.
2. Remove the stand accessory from the box and adjust the base to 90°.
3. Align the stand with the mounting holes on the back of the monitor.
4. Using short screws and spacers, connect the stand to the back of the monitor with a screwdriver.
5. Do not use long screws to fix the monitor directly as this will damage the internal parts of the monitor.

**NOTE:** Always place the device on a flat, stable surface. Failure to do so may cause the base to break and damage the device.

**Installing the Stand**

1. Place the monitor on a flat, stable surface with the screen facing down.
2. Remove the stand accessory from the box and adjust the base to 90°.
3. Align the stand with the mounting holes on the back of the monitor.
4. Using short screws and spacers, connect the stand to the back of the monitor with a screwdriver.
5. Do not use long screws to fix the monitor directly as this will damage the internal parts of the monitor.

**NOTE:** Always place the device on a flat, stable surface. Failure to do so may cause the base to break and damage the device.

**Connecting to Power**

1. Connect the power cord to the power jack at the rear of the device.
2. Connect the power cord plug to a power outlet.

**Connecting External Devices**

**HDMI Connection**

Connect one end of an HDMI cable to the HDMI port of the monitor. Then connect the other end of the cable to the HDMI port of the computer.

**NOTE:** The monitor is equipped with one HDMI 1.4 port.

**Connecting External Devices**

**VGA Connection**

Connect one end of a VGA cable to the VGA port. Then connect the other end of the cable to the VGA port of the computer.

**Connecting External Devices**

**USB Connection**

Connect the USB Type-A to Type-A cable to the USB Type-A port of the monitor. Then connect the other end of the cable to the USB Type-A port of the computer.

**Touch Function Control**

Before using the touch function, ensure the USB Type-A to Type-A cable is connected to your computer and the Windows operating system is running.

**Audio Connection**

Plug an audio cable into the Audio port of the monitor. Plug the other end into headphones.

**NOTE:** The monitor is also equipped with dual speakers.

**Adjusting the Viewing Angle**

1. For optimal viewing, we recommend that you look at the full face of the monitor, then adjust the monitor to the angle that is most comfortable for you.
2. Hold the stand to prevent the monitor from falling while changing its angle.
3. You can adjust the monitor's angle from -5 to 90°.
4. Do not touch the touch screen when you change the angle. It may cause damage or break the Touch screen and LCD screen.

**Turning the Device On/Off**

1. Plug the power cord into a power outlet.
2. Press the Power key to turn on the monitor.
3. To turn the monitor off, press the Power key again.

**NOTE:** The monitor will still consume some power as long as the power cord is connected to the power outlet. If the monitor is not being used for a long period of time, please disconnect the power plug from the power outlet.

**On-Screen Display (OSD) Menu**

Press the MENU key to activate the On-Screen Display (OSD) Menu.

**NOTE:** Follow the key guide that appears on the screen to select the option. The font of the Selected menu will appear red. MENU is equivalent to the OK key, and the **and** keys can be used to select sub-menus up and down or to adjust parameter values.

**Hot Keys**

When the On-Screen Display (OSD) Menu is off, you can quickly access functions by using the control panel keys.

1. Press the **key** to call up the volume adjustment menu.
2. Press the **key** to call up the brightness adjustment menu.
3. Press Auto to switch the signal channel.

**Troubleshooting**

This section describes some common problems that you may experience when using the monitor.

Problem or Issue	Possible Solutions
No power	<ul style="list-style-type: none"> <li>Make sure the power cord is properly and securely connected to the monitor and power outlet.</li> <li>Plug another electrical device into the power outlet to verify that the outlet is properly connected.</li> <li>Adjust the brightness and contrast settings.</li> </ul>
Power is On, but no image appears on the screen	<ul style="list-style-type: none"> <li>Make sure the video cable connecting the monitor to the computer is properly and securely connected.</li> <li>Adjust the brightness and contrast settings.</li> <li>Reset the monitor to factory settings.</li> </ul>
Wrong colors	<ul style="list-style-type: none"> <li>If any colors (red, green, or blue) are missing, check the color calibration settings on the monitor.</li> <li>Make sure the video cable connecting the monitor to the computer is properly and securely connected.</li> <li>Adjust the resolution to the correct Aspect Ratio.</li> <li>Reset the monitor to factory settings.</li> </ul>
Screen image is too light or dark	<ul style="list-style-type: none"> <li>Make sure the correct input source is selected.</li> <li>Check the input brightness and the other color settings.</li> <li>Make sure the video cable connecting the monitor to the computer is properly and securely connected.</li> <li>Adjust the resolution to the correct Aspect Ratio.</li> <li>Check the Aspect Ratio.</li> <li>Reset the monitor to factory settings.</li> </ul>
Screen image cuts in and out	<ul style="list-style-type: none"> <li>Make sure the video cable connecting the monitor to the computer is properly and securely connected.</li> <li>Adjust the resolution to the correct Aspect Ratio.</li> <li>Check the Aspect Ratio.</li> <li>Reset the monitor to factory settings.</li> </ul>
Screen image is blurry	<ul style="list-style-type: none"> <li>Adjust the horizontal and vertical controls via the OSD menu.</li> <li>Check the Aspect Ratio.</li> <li>Reset the monitor to factory settings.</li> </ul>
The screen is not centered properly	<ul style="list-style-type: none"> <li>Adjust the horizontal and vertical controls via the OSD menu.</li> <li>Check the Aspect Ratio.</li> <li>Reset the monitor to factory settings.</li> </ul>
The screen appears yellow	<ul style="list-style-type: none"> <li>Confirm whether the monitor is in sleep protection mode or warm mode.</li> </ul>

**Maintenance**

**General Precautions**

- Make sure the monitor is turned off and the power cable is unplugged from the power outlet.
- Never spray or pour any liquid directly onto the screen or case.
- Handle the monitor with care, as a darker-colored monitor, if scratched, may show marks more clearly than a lighter-colored monitor.

**Cleaning the Screen**

- Wipe the screen with a clean, soft, lint-free cloth. This removes dust and other particles.
- If the screen is still not clean, apply a small amount of non-ammonia, non-alcohol based glass cleaner onto a clean, soft, lint-free cloth then wipe the screen.

**Cleaning the Case**

- Use a soft, dry cloth.
- If the case is still not clean, apply a small amount of non-ammonia, non-alcohol based, mild non-abrasive detergent onto a clean, soft, lint-free cloth, then wipe the surface.

**Product Guarantee**

**Product certification**

product name	Innovative Standard
model	Specification
Origin	Linghang District, Shenzhen City, Guangdong Province
Inspector	

This product is allowed to leave factory after passing the inspection.

Certified company:

**warranty card**


purchase type	Warranty time
user name	document number
purchase date	purchase shop
purchase model	Maintenance record

The shelf life of this product is 3 months, and the shelf life is calculated from the date of purchase. The following conditions are not within the scope of the three-month warranty:


1. Damaging three quarters of the screen.
2. Damaging the monitor's case.
3. Damaging the monitor's case.

# LEDモニタ

## 製品マニュアル

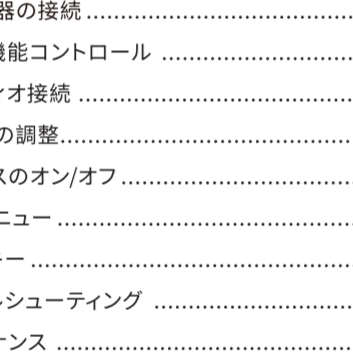

LED MONITOR Product manual




LED MONITOR Product manual




LED MONITOR Product manual



LED MONITOR Product manual



LED MONITOR Product manual




LED MONITOR Product manual




LED MONITOR Product manual



LED MONITOR Product manual



LED MONITOR Product manual



LED MONITOR Product manual

**製品一覧**

ようこそ.....3

パッケージ内容.....3

製品概要.....4

スタンドの設置.....5

電源への接続.....6

外部機器の接続.....7-8

タッチ機能コントロール.....9

オーディオ接続.....10

視野角の調整.....11

デバイスのオン/オフ.....12

OSDメニュー.....13

ホットキー.....14

トラブルシューティング.....15-16

メンテナンス.....17

製品保証.....18

**ようこそ**

**パッケージ内容**

- 1.タッチディスプレイ
- 2.電源コード
- 3.HDMIケーブル
- 4.USB 2.0タッチケーブル (Type-A to Type-A)
- 5.クイックスタートガイド

**製品概要**

56.5cm

表示画面

Power LED

電源ボタン

WU

AUTO

**リアビュー**

1. HDMI
2. VGA
3. オーディオ
4. パワー
5. USB

**スタンドの設置**

1. モニターを平らで安定した場所に設置します。画面を下に向けて向きを調整します。
2. スタンドアクセサリーを箱から取り出し、スタンドをモニター背面に設置します。
3. スタンドをモニター背面の取り付け穴に合わせてください。
4. 短い短ネジとスペーサーを使用して、スタンドをモニター背面に固定します。
5. モニターをモニター背面の取り付け穴に合わせてください。長いネジを使用してモニターを直接固定しないでください。長いネジはモニター背面の内部部品を損傷する可能性があります。

**注意:** 製品を平らで安定した場所に設置していただき、必ず正しいデバイスが落下し、ディスプレイの破損や人身事故の原因となります。

**電源への接続**

1. 電源コードを機器背面の電源ジャックに接続します。
2. 電源コードのプラグを電源コンセントに接続します。

**外部機器の接続**

**HDMI接続**

HDMIケーブルの一端をモニターのHDMIポートに接続する。次にケーブルのもう一方の端をコンピュータまたはHDMIポートに接続します。

**注:** モニターにはHDMI 1.4ポートが搭載されています。

**外部機器の接続**

**VGA接続**

VGAケーブルの一端をVGAポートに接続する。次にケーブルのもう一方の端をコンピュータのVGAポートに接続します。

**タッチ機能コントロール**

タッチ機能を使用する前に、USB Type-A to Type-AケーブルをコンピュータのUSB Type-Aポートに接続し、Windowsオペレーティングシステムが正常に動作していることを確認してください。タッチ機能を使用する前に、コンピュータの電源をオンにし、Windowsオペレーティングシステムが正常に動作していることを確認してください。

1. You can adjust the monitor's angle from -5 to 90°.
2. Do not touch the touch screen when you change the angle. It may cause damage or break the Touch screen and LCD screen.

**オーディオ接続**

オーディオケーブルをモニターのオーディオポートに差し込みます。もう一方の端をヘッドフォンに差し込みます。

**注:** モニターにはデュアルスピーカーも搭載されています。

**視野角の調整**

1. 最適な視認性のために、モニターの全面を見ることをお勧めします。また、モニターを傾けて最適な角度に調整してください。
2. モニターを傾けて、モニターが落下しないようにしてください。
3. Youはモニター角度を5から90°に調整できます。また、タッチ画面およびLCDスクリーンを破損する可能性があります。
4. Do not touch the touch screen when you change the angle. It may cause damage or break the Touch screen and LCD screen.

**デバイスのオン/オフ**

1. 電源コードをコンセントに差し込みます。
2. 電源コードを押し、モニターの電源を入れます。
3. モニターをオフにするには、電源コードを押し、電源コードをコンセントから抜きます。

**注:** 電源コードがコンセントに接続されている限り、モニターは電力を消費します。電源コードがコンセントから接続されている限り、モニターは電力を消費します。電源コードがコンセントから接続されている限り、モニターは電力を消費します。

**オンスクリーンディスプレイ(OSD)メニュー**

MENUキーを押してオンスクリーンディスプレイ(OSD)メニューを起動します。

**注:** 画面に表示されるキーガイドに従って、オプションを選択してください。アプリケーションを選択します。選択されたメニュー項目は赤い文字で表示されます。MENUはOKキーに相当します。およびのキーを使用してメニュー項目を上下に移動したり、パラメータを調整したりすることができます。

**ホットキー**

オンスクリーンディスプレイ(OSD)メニューがオフの状態では、コントロールパネルキーを使用してモニターの機能を簡単にアクセスできます。コントロールパネルキーを使用して、モニター電源をオン/オフします。

1. キーを押して音量調整メニューを呼び出します。
2. キーを押して、明るさ調整メニューを呼び出します。
3. Autoを押して信号チャンネルを切り替えます。

**トラブルシューティング**

このセクションでは、モニターを使用する際に発生する可能性のある一般的な問題を説明しています。これらの問題を解決するためのヒントを提供しています。

問題または症状	可能な解決策
電源が入らない	<ul style="list-style-type: none"> <li>電源コードがコンセントに正しく挿入されていることを確認してください。</li> <li>電源コードを押し、モニターを再起動してください。</li> <li>電源コードをコンセントから抜いてください。</li> </ul>
電源が入るが画面が真っ暗	<ul style="list-style-type: none"> <li>モニターが正しい入力ソースを選択されていることを確認してください。</li> <li>モニターが正しい入力ソースを選択されていることを確認してください。</li> <li>モニターが正しい入力ソースを選択されていることを確認してください。</li> </ul>
画面の色が正しくない	<ul style="list-style-type: none"> <li>モニターの色設定を確認してください。</li> <li>モニターの色設定を確認してください。</li> <li>モニターの色設定を確認してください。</li> </ul>
画面の明るさやコントラストが適切でない	<ul style="list-style-type: none"> <li>モニターの色設定を確認してください。</li> <li>モニターの色設定を確認してください。</li> <li>モニターの色設定を確認してください。</li> </ul>
画面がちらちらする	<ul style="list-style-type: none"> <li>モニターの色設定を確認してください。</li> <li>モニターの色設定を確認してください。</li> <li>モニターの色設定を確認してください。</li> </ul>
画面がぼやけている	<ul style="list-style-type: none"> <li>モニターの色設定を確認してください。</li> <li>モニターの色設定を確認してください。</li> <li>モニターの色設定を確認してください。</li> </ul>
画面が黄色い	<ul style="list-style-type: none"> <li>モニターの色設定を確認してください。</li> <li>モニターの色設定を確認してください。</li> <li>モニターの色設定を確認してください。</li> </ul>

**メンテナンス**

**一般的な注意事項**

- モニターを電源がオフになっているときに、電源ケーブルがコンセントから抜かれていることを確認してください。コンセントから抜かれていることを確認してください。
- モニターを傾けて、モニターが落下しないようにしてください。
- モニターを傾けて、モニターが落下しないようにしてください。
- モニターを傾けて、モニターが落下しないようにしてください。

**スクリーンクリーニング**

- 清潔な柔らかい布を使用してスクリーンを拭いてください。これにより汚れが除去されます。
- スクリーンがまだきれいにならない場合は、アンモニアフリーのガラスクリーナーを少量使用してください。アンモニアフリーのガラスクリーナーを少量使用してください。
- スクリーンがまだきれいにならない場合は、アンモニアフリーのガラスクリーナーを少量使用してください。
- スクリーンがまだきれいにならない場合は、アンモニアフリーのガラスクリーナーを少量使用してください。

**ケースクリーニング**

- 柔らかい布を使用してケースを拭いてください。
- 柔らかい布を使用してケースを拭いてください。
- 柔らかい布を使用してケースを拭いてください。
- 柔らかい布を使用してケースを拭いてください。

**製品保証**

**製品保証**

商品名	インノベーティブスタンダード
モデル	仕様
原産国	広東省深圳市宝安区
検査者	

この製品は、検査合格後に工場を離れることができます。工場を離れることができることを保証しています。

**保証書**


購入タイプ	保証期間
ユーザー名	登録番号
購入日	購入店
購入モデル	メンテナンス記録

この保証書の有効期間は、本製品の購入日から起算し、3ヶ月間有効です。以下の条件は、この保証書の範囲外です:


1. 画面の3/4以上が破損している場合。
2. 画面の3/4以上が破損している場合。
3. 画面の3/4以上が破損している場合。

# LED-MONITOR

## Produkthandbuch

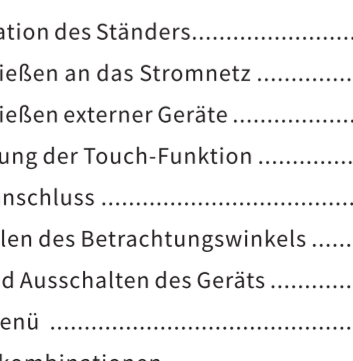

LED MONITOR Product manual



LED MONITOR Product manual

**Inhalt**

Willkommen.....3

Paketinhalt.....3

Produktübersicht.....3

Installation des Ständers.....4

Anschließen an das Stromnetz.....4

Anschließen externer Geräte.....7-8

Steuerung der Touch-Funktion.....9

Audioanschluss.....10

Einstellen des Betrachtungswinkels.....11

Ein- und Ausschalten des Geräts.....12

OSD-Menü.....13

Tastenkombinationen.....14

Fehlersuche.....15-16

Wartung.....17

Produktgarantie.....18

**Willkommen**

**Paketinhalt**

1. das Touch-Display
2. Netzkabel
3. HDMI-Kabel
4. USB 2.0 Touch-Kabel (Typ A auf Typ A)
5. Schnellstartanleitung

**Produktübersicht**

56.5cm

Bildschirm

Power LED

Ein-/Aus-Schalter

AUTO

**Rückansicht**

1. HDMI
2. VGA
3. Audio
4. Strom
5. USB

**Installation des Ständers**

1. Stellen Sie den Monitor auf eine flache, stabile Oberfläche mit dem Bildschirm nach unten gerichtet.
2. Nehmen Sie das Stativzubehör aus dem Karton und stellen Sie es auf den Monitor auf.
3. Richten Sie die Ständer auf die Befestigungslöcher auf dem Rückblech des Monitors aus.
4. Verwenden Sie kurze Schrauben und Abstandshalter, um den Ständer an der Rückseite des Monitors mit einem Schraubenzieher zu befestigen. Verwenden Sie keine langen Schrauben, um das Innere des Monitors zu beschädigen. Die Verwendung von langen Schrauben kann zu Schäden an den internen Teilen des Monitors führen.
5. Stellen Sie den Monitor auf und stellen Sie ihn wie gewünscht ein. Verwenden Sie keine langen Schrauben, um das Innere des Monitors zu beschädigen.

**WICHTIG:** Stellen Sie die Gerät immer auf eine flache, stabile Oberfläche. Die Nichtbeachtung kann zu Schäden an der Basis und zu Verletzungen führen.

**Anschließen an die Stromversorgung**

1. Schließen Sie das Netzkabel an die Netzsteckdose auf der Rückseite des Geräts an.
2. Schließen Sie den Stecker des Netzkabels an eine Steckdose an.

**Anschließen externer Geräte**

**HDMI-Anschluss**

Schließen Sie ein Ende eines HDMI-Kabels an den HDMI-Anschluss des Monitors an. Schließen Sie das andere Ende des Kabels an den HDMI-Anschluss des Computers an.

**WICHTIG:** Der Monitor ist mit einem HDMI 1.4-Anschluss ausgestattet.

**Anschließen externer Geräte**

**VGA-Anschluss**

Schließen Sie ein Ende eines VGA-Kabels an den VGA-Anschluss an. Schließen Sie das andere Ende des Kabels an den VGA-Anschluss des Computers an.

**Touch-Funktionssteuerung**

Verwenden Sie sich vor der Verwendung der Touch-Funktion, dass das USB Type-A to Type-A-Kabel an Ihren Computer angeschlossen ist und das Windows-Betriebssystem Betriebssystem ausgeführt wird.

1. Sie können den Winkel des Monitors von -5 bis 90 Grad einstellen.
2. Halten Sie den Ständer fest, um zu verhindern, dass der Monitor beim Verändern des Winkels kippt.
3. Sie können den Winkel des Monitors von -5 bis 90 Grad einstellen.
4. Berühren Sie nicht den Touchscreen, wenn Sie den Winkel ändern. Dies kann den Touchscreen und den LCD-Bildschirm beschädigen.

**Audioverbindung**

Schließen Sie ein Audiokabel an den Audioanschluss des Monitors an. Schließen Sie das andere Ende an einen Kopfhörer an.

**HINWEIS:** Der Monitor ist auch mit zwei Lautsprechern ausgestattet.

**Einstellen des Betrachtungswinkels**

1. Für eine optimale Betrachtung empfehlen wir, dass Sie auf die gesamte Fläche des Monitors schauen und den Winkel einstellen und dann den Monitor auf den für Sie bequemsten Winkel einstellen. Der für Sie am angenehmsten ist.
2. Halten Sie den Ständer fest, um zu verhindern, dass der Monitor beim Verändern des Winkels kippt.
3. Sie können den Winkel des Monitors von -5 bis 90 Grad einstellen.
4. Berühren Sie nicht den Touchscreen, wenn Sie den Winkel ändern. Dies kann den Touchscreen und den LCD-Bildschirm beschädigen.

**Ein- und Ausschalten des Geräts**

1. Stecken Sie das Netzkabel in eine Steckdose.
2. Drücken Sie die Power-Taste, um den Monitor einzuschalten.
3. Um den Monitor auszuschalten, drücken Sie erneut die Power-Taste.

**HINWEIS:** Der Monitor verbraucht weiterhin etwas Strom, solange das Netzkabel an die Steckdose angeschlossen ist. Wenn der Monitor längere Zeit nicht benutzt wird, ziehen Sie bitte den Netzstecker aus der Steckdose.

**Menü der Bildschirmanzeige (OSD)**

Drücken Sie die Taste MENU, um das OSD-Menü (On-Screen Display) zu aktivieren.

**HINWEIS:** Folgen Sie der auf dem Bildschirm angezeigten Tastenführung, um die Option zu wählen. Die Schrift des ausgewählten Menü wird rot angezeigt. MENU entspricht der OK-Taste, und die **and** Tasten können verwendet werden, um die Untermenüs nach oben und unten zu wählen oder Parameterwerte einzustellen.

**Tastenkombinationen**

Wenn das OSD-Menü (On-Screen Display) ausgeschaltet ist, können Sie schnell können Sie mit den Tasten des Bedienfelds schnell auf Funktionen zugreifen.

1. Drücken Sie die Taste **key**, um das Menü für die Einstellung der Lautstärke aufzurufen.
2. Drücken Sie die Taste **key**, um das Menü für die Helligkeitseinstellung aufzurufen.
3. Drücken Sie Auto, um den Signalkanal zu wechseln.