
X7 3 in 1


Electric Vacuum Sealer for Mason Jar

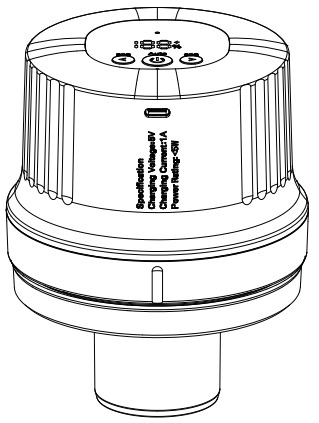


Please read this manual carefully before use

Product introduction

Screen Zone:
①Working time
②Battery
③Charging Indicator

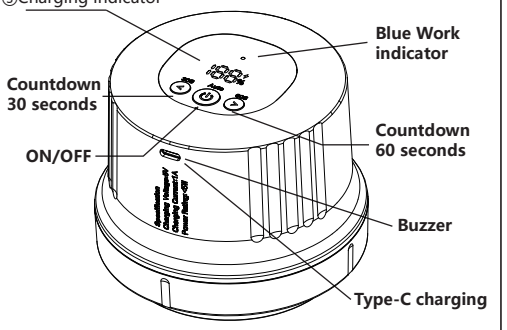


(Suitable for 2.7-inch /68mm Mason jar with regular mouth)

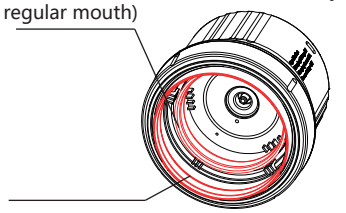


(Suitable for 3.4-inch /85mm wide mouth Mason jar)

Instructions for use


1. Before use, please select the appropriate sealing silicone position based on the diameter of the Mason jar (wide mouth/regular mouth);
2. Fill the food in the Mason jar. Please reserve some space, as filling it fully will affect the sealing effect. For solid foods like fruit or pickles, be sure to leave approximately 1/2 inch of space. For soft foods like jams or jellies, be sure to leave approximately 1 inch of space;
3. Wipe the bottle mouth and sealing cap to ensure there is no dirt or liquid residue;
4. Align the sealing cap with the bottle mouth (see image below);

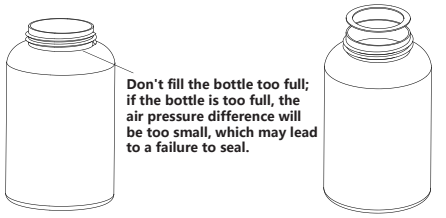

5. Align the sealer with the mouth of the bottle and press firmly down to the end (see picture below).

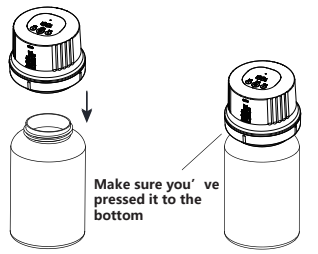

Automatic mode:
① Press the "ON/OFF" button to start the machine. At this time, the Auto blue indicator on the top will light up. When the air in the Mason jar has been emptied, the machine will automatically stop working, and the sealing machine can be taken off after hearing "DI";
② Press the left/right button, the machine will automatically countdown work 30S/60S . You can take off the sealing machine when you hear "DI" .

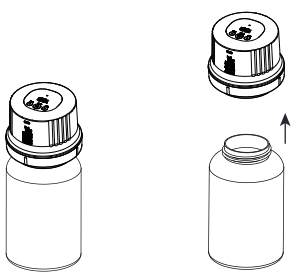


Charging and remaining Battery indication:

1, during the working process, if the power indicator flashes several times and stops working and shutting down, it means that the power is too low, please charge in time;
2, The green charging indicator will flash all the time during the charge till it is full.

External Vacuum Extraction Mode:

1. Please refer to the illustration below for instructions on integrating the external vacuum extraction assembly, including the converter and canister, with the main unit;
2. This mode is designed for use with vacuum seal bags, vacuum lunch boxes, and similar items.

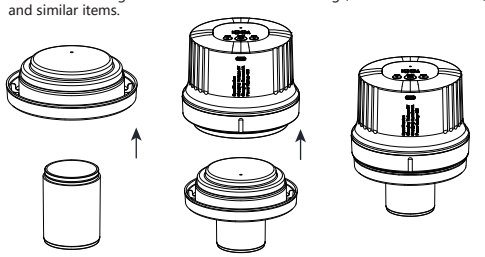

Product specification

Model:	X7 Auto Version
Charging power:	USB Type-C 5V/1A
Rated power:	＜5W
Material:	ABS、Silicone
Weight:	355g
Dimension:	109*109*89.2mm
What in the box:	Machine *1 External Vac Assembly *1 Type-C Charging cord *1 Manual *1 Bottle opener *1 Wide-mouth cover *5 Regular mouth cover *5 Vacuum bag *3 Vacuum bag sealer *2

Troubleshooting

Mason jars cannot be sealed:
1. Check for any dirt or liquid on the bottle mouth and lid;
2. While using it, ensure that the sealer is pressed to the bottom. If you're uncertain, realign and press again until the sealer is firmly at the bottom;
3. Examine if the jar is too full. Make sure the food does not exceed the thread line for a better sealing effect.

Warm reminder

1. When using the machine, apply more force to ensure a tight fit onto the bottle cap;
2. When the battery is low, please charge it promptly;
3. Avoid using steel balls, abrasive cleaners, or corrosive liquids (such as gasoline, acetone, etc.) to clean the machine;
4. Do not submerge the main unit in water or any other liquids, and avoid cleaning the product under running water to prevent damage to the host;
5. This product is not waterproof. If water splashes on the machine, please wipe it immediately;
6. Please avoid overfilling liquid food in the glass jar, as overfilling can result in a too small air pressure difference, preventing proper sealing of the Mason jar;
7. Press and hold "on" key about 5 seconds to enter the manual mode. It will continuous operate for 150 seconds unless you click "on" key to stop it;
8. It is recommended to vacuumize for more than 30 seconds.