

**NiPOGi**

**User Manual**

EN/FR

**AK1/AK2/AK3/GK3**

Thank you for choosing NiPoGi Mini PC, please read the manual carefully before using the product. If you have any unsolvable problems, please contact customer service as soon as possible, our customer service team will help you solve your problem in time.  
Have a nice day. Thank you!

---

English user manual .....	01-06
Manuel utilisateur en français .....	07-14

## AK1 Series

### Interface Introduction



### How To Add 2.5 " DISK




1. Remove the bottom cover.
2. put in a 2.5 inch Disk , then gently push the Disk to the right card slot until it is stuck.
3. Cover the kit base.



01

## AK2 Series

### Interface Introduction

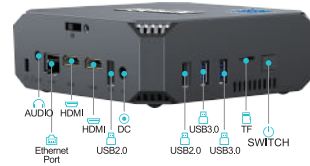

### How To Add 2.5 " DISK

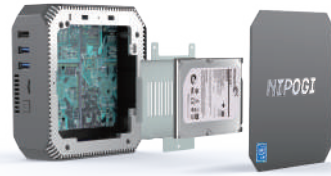

1. Move the switch/lever, there's a sliding "switch" on the top cover of the back that need to move over in order to remove the lid.
2. Then lift off the lid from that side, put in a 2.5 inch Disk.
3. Gently push the Disk to the right card slot until it is stuck.

02

## GK3/AK3 Series(Grey/Silver) Interface Introduction



## How To Add 2.5 " DISK



1. Remove one screw and then flipping a switch to take the cover off.
2. Put in a 2.5 inch Disk.
3. Gently push the Disk to the right card slot until it is stuck.

03

## How To Use Mini Pc



1. Connect the Mini PC the HDMI connector of the TV or monitor with HDMI cable.
2. Connect the power adaptor into the wall socket,and the other end into the power input port of Mini PC.
3. Turn on the TV or Monitor.
4. Push the power button,then the device starts.

## Package Contents



Mini PC

HDMI cable

Power adapter

VESA Mount

User manual

04

## Questions And Answers

### 1. There was no product key in the box or email confirming the purchase of pc?

We have activated our Windows product key for you, and you can enter THIS PC. Right-click in the blank space to enter the properties, and then you can view your product key. It is not safe to send the product key in the box or e-mail. And the key has been used to activate your windows, so it cannot be used on other computers.

### 2. How to change the operating system of Windows OS?

First insert the flash drive, press the Delete key to enter the BIOS, then select boot, Then press Enter to enter the system priority boot menu and set the flash drive to priority boot. Then enter save.

### 3. Keyboard and mouse are not recognized.

We recommend that you use other keyboards, mice, and U disks to check whether the USB interface is normal. If it does not work, it means that the interface is broken, and we are willing to replace a new item for you.

### 4. Computer blue screen.

There are many reasons for the blue screen, such as abnormal shutdown, update, forced restart (restart halfway after power-on), and unexpected power failure. This is normal, and other computers will also, not mini PC. It is recommended that you restart, if not, it is recommended that you reinstall the system.

### 5. All audio is lost, no audio output.

Regarding the problem that audio cannot be output, we recommend that you do the following.

- 1) If the speaker icon shows a red X, it means the driver is lost it need to install the driver.
- 2) Check that the audio device is switched incorrectly. Right-click the speaker icon in the taskbar to open the sound control panel to set the output mode of the external amplifier. Confirm whether the default audio output of the system is HDMI (display speaker) or Speaker (external speaker).
- 3) Replace the HDMI cable and try the cable which come with the pc.
- 4) Try an external speaker.

## Precautions

1. Please read all the instructions in the document before using the product.
2. The system is installed as the latest version.
3. Do not use this product in water or overheated places.

Manufacturer Information	
Name:	Shenzhen CYX Industrial CO., Ltd.
Address :	Building A, Corrent Low Carbon Industrial Zone, Huarong Road, Dalang Street, Longhua District, ShenZhen, China
After-Sales-Service-Email:	service@cyxtech.com

UK	REP	UK Representative Information
Name:		Sikes Electric Co., Ltd
Address :		63/66 Hatton Garden Fifth Floor, Suite 23, London, England, EC1N 8LE
E-mail :		yalanda.ma@outlook.com

EC	REP	EU-Bevollmächtigter
Name:		Brightstar consulting e.K.
Address :		Humboldtstr.5,31812 Bad Pyrmont Germany
E-mail :		utaundnico@hotmail.com



# Manuel de l'Utilisateur

EN/DE/FR/IT/ES/NL/PL/SE/JP

Merci d'avoir choisi notre marque Mini PC, veuillez lire attentivement le manuel avant d'utiliser le produit. Si vous rencontrez des problèmes insolubles, veuillez contacter le service client dès que possible, notre équipe du service clientèle vous aidera à résoudre votre problème à temps. Bonne journée. Merci!

## Série AK1

### Introduction à l'interface utilisateur



### Comment ajouter un disque 2.5" ?




1. Retirez le couvercle inférieur.
2. insérez un Disque de 2,5 pouces, puis poussez doucement le Disque dans le logement de carte droit jusqu'à ce qu'il soit bloqué.
3. Couvrez la base du kit.


09

## Série AK2

### Introduction à l'interface utilisateur

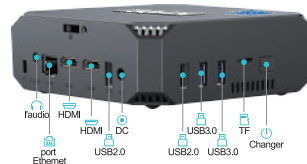

### Comment ajouter un disque 2.5" ?



1. Déplacez l'interrupteur / levier, il y a un «interrupteur» coulissant sur le couvercle supérieur du dos qui doit se déplacer pour retirer le couvercle.
2. Soulevez ensuite le couvercle de ce côté, insérez un Disque de 2,5 pouces.
3. Poussez doucement le Disque dans le logement de carte droit jusqu'à ce qu'il soit bloqué.


10

## Série GK3 / AK3 (gris / argent)

### Introduction à l'interface utilisateur



### Comment ajouter un disque 2.5" ?

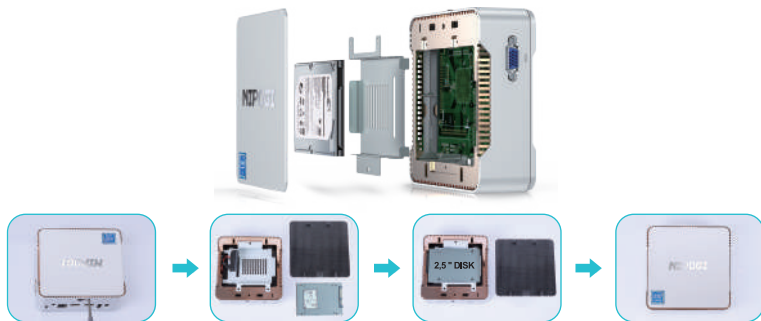

1. Retirez une vis, puis basculez un interrupteur pour retirer le couvercle.
2. Installez un Disque de 2,5 pouces.
3. Poussez doucement le Disque vers le bon emplacement pour carte jusqu'à ce qu'il soit bloqué.

11

### Comment utiliser le mini pc?



1. Connectez le mini PC au connecteur HDMI du téléviseur ou du moniteur avec un câble HDMI.
2. Connectez l'adaptateur secteur à la prise murale et l'autre extrémité à l'entrée d'alimentation port du Mini PC.
3. Allumez le téléviseur ou le moniteur.
4. Appuyez sur le bouton d'alimentation, puis l'appareil démarre.

### Contenu du colis



Un mini PC

Câble HDMI

Adaptateur secteur

support de montage VESA

manuel de l'utilisateur

12

## Questions et réponses

### 1. Il n'y avait pas de clé de produit dans la boîte ou dans l'e-mail confirmant l'achat du PC?

Nous avons activé notre clé de produit Windows pour vous et vous pouvez entrer CE PC. Cliquez avec le bouton droit dans l'espace vide pour entrer les propriétés, puis vous pouvez afficher votre clé de produit. Il n'est pas sûr d'envoyer la clé de produit dans la boîte ou par e-mail. Et la clé a été utilisée pour activer vos fenêtres, elle ne peut donc pas être utilisée sur d'autres ordinateurs.

### 2. Comment changer le système d'exploitation de Windows OS?

Insérez d'abord le lecteur flash, appuyez sur la touche Suppr pour entrer dans le BIOS, puis sélectionnez boot, puis appuyez sur Entrée pour accéder au menu de démarrage prioritaire du système et réglez le lecteur flash sur le démarrage prioritaire. Entrez ensuite enregistrer.

### 3. Le clavier et la souris ne sont pas reconnus.

Nous vous recommandons d'utiliser d'autres claviers, souris et disques U pour vérifier si l'interface USB est normale. Si cela ne fonctionne pas, cela signifie que l'interface est cassée et nous sommes prêts à remplacer un nouvel élément pour vous.

### 4. Écran bleu d'ordinateur.

L'écran bleu a de nombreuses raisons, telles qu'un arrêt anormal, une mise à jour, un redémarrage forcé (redémarrage à mi-chemin après la mise sous tension) et une panne de courant inattendue. C'est normal, et d'autres ordinateurs le seront également, pas des mini-PC. Il est recommandé de redémarrer, sinon, il est recommandé de réinstaller le système.

### 5. Tout l'audio est perdu, pas de sortie audio.

En ce qui concerne le problème que l'audio ne peut pas être émis, nous vous recommandons de faire ce qui suit.

- 1) Si l'icône du haut-parleur affiche un X rouge, cela signifie que le pilote est perdu, il faut installer le pilote.
- 2) Vérifiez que le périphérique audio est mal commuté. Cliquez avec le bouton droit de la souris sur l'icône du haut-parleur dans la barre des tâches pour ouvrir le panneau de commande du son et définir le mode de sortie de l'amplificateur externe. Vérifiez si la sortie audio par défaut du système est HDMI (haut-parleur d'affichage) ou Haut-parleur (haut-parleur externe).
- 3) Remplacez le câble HDMI et essayez le câble fourni avec le PC.
- 4) Essayez un haut-parleur Externe.

## Précautions

1. Veuillez lire toutes les instructions du document avant d'utiliser le produit.
2. Le système est installé avec la dernière version.
3. N'utilisez pas ce produit dans l'eau ou dans des endroits surchauffés.

Information du fabricant	
Nom:	"Shenzhen CYX Industrial CO., Ltd. "
adresse:	Building A, Corrent Low Carbon Industrial Zone, Huarong Road, Dalang Street, Longhua District, ShenZhen, China
Service après-vente-Email:	service@cyxtech.com

UK	REP	UK Representative Information
Name:		Sikes Electric Co., Ltd
Address:		63/66 Hatton Garden Fifth Floor, Suite 23, London, England, EC1N 8LE
E-mail:		yalanda.ma@outlook.com

EC	REP	EU-Bevollmächtigter
Name:		Brightstar consulting e.K.
Address:		Humboldtstr.5,31812 Bad Pyrmont Germany
E-mail:		utaundnico@hotmail.com

