

Portable Monitor

User Manual



Table of contents

Safety information.....	1
Care & cleaning.....	1
Package Contents.....	3
Adjust / Install the Monitor Stand.....	4
Connect Adapter or Power Bank.....	5
Monitor Introduction.....	6
Key Function.....	7
Initial Language Setting.....	7
Connect to Mobile Phone.....	8
Supports Type-C Mobile Phone Models.....	8
Mobile Phone that Support Type-C Directly Connected.....	8
Connect to HDMI Adapter(iOSZAndroid).....	9
Connect to Laptop.....	11
Supports HDMI Laptop Models.....	11
Howto Connect.....	11
Split Screen Expansion Function.....	12
Connect the 3.5mm Jack.....	13
Connect to Switch/Xbox one/PS4.....	13
Connect to TV stick, Blu-ray Player and Other PC Models (HDMI Connection) .	14
Specifications.....	14
Troubleshooting (FAQ).....	15

Safety Information

- Before setting up this portable monitor, carefully read all the documentation that came with the package.
- To prevent fire or shock hazard, never expose this portable monitor to rain or moisture.
- Never try to open this portable monitor cabinet.
- Before using this portable monitor, make sure all cables are correctly connected and the power cables are not damaged. If you detect any damage, contact your dealer immediately.
- Avoid dust, humidity, and temperature extremes. Do not place this portable monitor in any area where it may become wet. Place this portable monitor on a stable surface.
- Never push objects or spill liquid of any kind into the slots on this portable monitor cabinet.
- If you encounter technical problems with this portable monitor, contact a qualified service technician or our After-sales Service.
- This portable monitor is powered by Type-C port (The back of the fuselage is marked with an icon for the purpose of the port).

Care & Cleaning

- **Cleaning.** Turn your monitor off and unplug the power cord. Clean the monitor surface with a lint-free, non-abrasive cloth. Stubborn stains may be removed with a cloth dampened with mild cleaner.
- Avoid using a cleaner containing alcohol or acetone. Use a cleaner intended for use with the LCD. Never spray cleaner directly on the screen, as it may drip inside the monitor and cause an electric shock.

The following symptoms are normal with the monitor:

- Because each person's perception of brightness is different, there may be a different visual effect that the monitor screen is slightly brighter or darker. You only need to open the menu and adjust the brightness and Contrast.
- The monitor displays "no cable" during connect or use.
 - During the connection process, you need to connect the power supply first, and then connect the Type-C / HDMI data transmission line. If you connect in the wrong order, the display will show "No cable", you only need to unplug the Type-C / HDMI data transmission line. Re-insert the port, it can be used normally.
 - if "No cable" appears on the display during use, it may be that the power supply or data transmission interface is loose. You need to check whether the port is loose and plugged in, which can restore normal use.
- During use, the monitor shows "no signal", which may be caused by the loose HDMI / Type-C data transmission line, just plug in the HDMI /Type-C cable Tightly.
- When using the split-screen expansion mode, the image size of the laptop screen and the monitor may be inconsistent, which is caused by the difference in resolution between the portable monitor and the laptop. You need to adjust the resolution of the laptop screen to be consistent with the resolution of the monitor.

Note: Adjusting the monitor resolution will not work, you only need to adjust the screen resolution of the laptop.

- When the screen becomes black or flashes, or cannot work anymore, contact your dealer or service center to fix it. Do not repair the screen by yourself.

Features

- 1.15.6 inch large-screen display with 1920 * 1080p HD screen,the cover case is made of PU leather to provide excellent protection for the entire monitor and can be folded into different positions to create a stand.
- 2.Our portable monitor has the characteristics of plug and play, no need to install any software or set the input password. You only need to connect the power supply and the Type-C / HDMI data transmission cable to use it.
- 3.Adapter provides stable and reliable power supply, you also can use the Type-C to USB cable to connect the charging treasure for charge and operate, which is convenient for you to travel and use outside.

4. Equipped with 3.5mm headphone jack and dual audio speakers, to bring you the best experience.

5. Split screen expansion function for laptop connected to monitor (not supported by mobile phone)


6. You can also connect the TV stick and Bluetooth player to the monitor to play YouTube videos or enjoy music.

7. Connect the game console to enjoy happy hour

Our portable monitor supports connection to Xbox one, Switch, PS4 game consoles.

You can play games with family or friends, enjoy the good times.


Package Contents

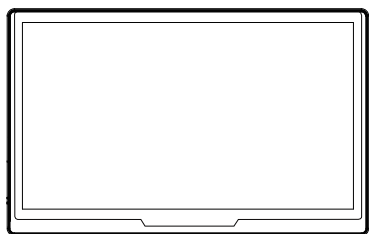

①




②

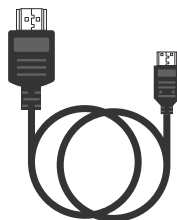


③



④

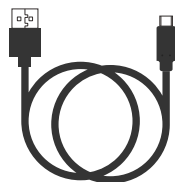

⑤

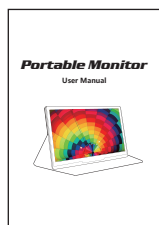

⑥

1. Portable monitor

2. 5V4A Adapter*1

3. Mini HDMI to HDMI

4. Type C to Type C cable


5. Type C to USB cable

6. User Manual

Note: If any of the above items is damaged or missing, contact your retailer immediately.

Adjust / Install the Monitor Stand

Our portable display is equipped with a leather case, which can be used not only to protect the display, to avoid wear and scratches, to extend the life of the display, but also as a stand.

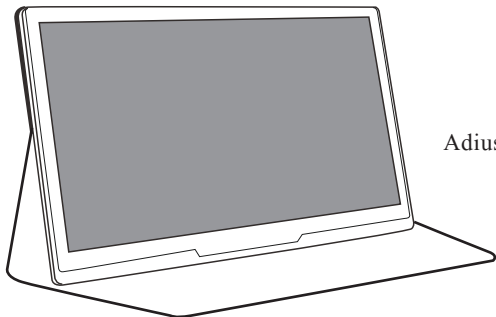


Adjust the monitor stand

Install the monitor stand

After removing the holster stand. You can install fixed bracket yourself for home / office use.

Note: We do not provide a fixed bracket, you need to purchase and install it separately (it is best to ask a professional person to install the bracket)

Two Methods of Power Supply :Power Adapter or Power Bank

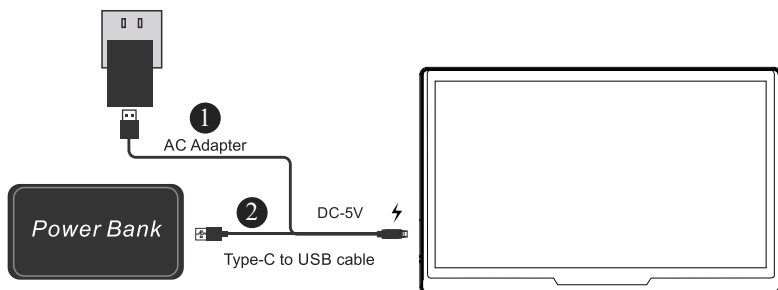

1. Power Adapter

Follow below picture to connect power adapter.

First connect small end of adapter to monitor(Type-C dedicated charging port).

Plug the adapter body to power outlet.


2. Connect to Power bank

Follow below picture to connect power bank.

Using Type-C to USB cable. Connect Type-C port to the monitor (Type-C dedicated charging port), plug USB port to power bank. Make sure the power bank is full and keep the output status.


Monitor Introduction

Connection Schematic Diagram

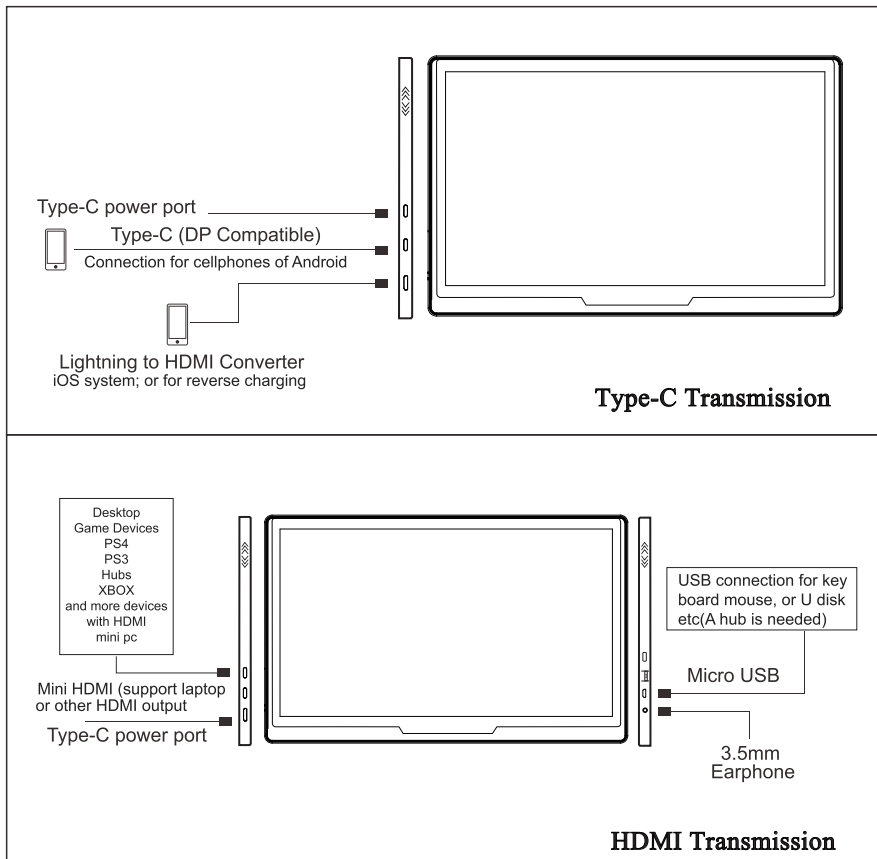

Attention: Please select the right annunciator or port for your devices, and connect in the right way. You may restart the phone or computer when it is out of order.

Key Function

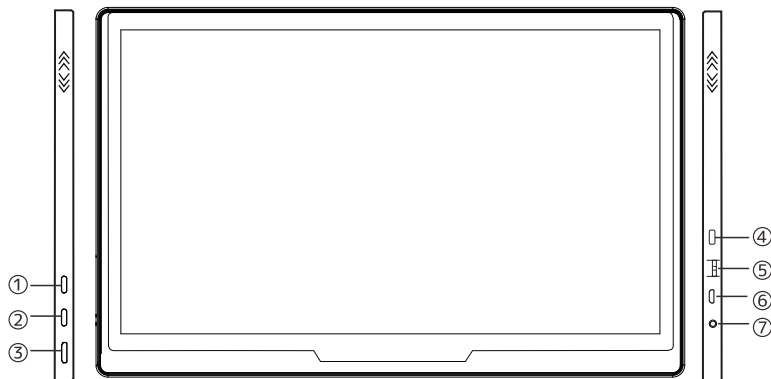

①	Type-C for Charging	⑤	Wheel Button
②	Type-C input	⑥	Micro USB
③	MiNi HDMI	⑦	Earphone
④	Power ON/OFF		

1. Click the “MENU” button to display the setting interface and enter, slide up and down the wheel button to move, click the wheel button to return to the previous level of the setting interface.

2. Slide up the wheel button to enter the volume setting.

Slide down the wheel button to enter the brightness setting.

Click the wheel button: Set input (Auto Select, D0: TYPE-C, D1: HDMI)

Initial Language Setting

Initial custom language selection: the machine has built-in English, French, Italian, German, Spanish, Japanese.

You need select the language when you start the machine at the first time, the language will be remembered after the first power-on. Then the second power-on needn't select the language, and the language selected for the first time is been memoried.

Connect to Mobile phone

1.Supports Type-C Mobile phone models

HUAWEI	Mate10> Mate10 Pro> Mate20、 Mate20 Pro Mate20 X. P20、 P20 Pro. HonorNote10
JmGO	RL Pro2S
OPPO	R17 Pro
Samsung	S8、 S8+、 S9> S9+、 Note8、 Note9
iPhone	Supports iPhone connection, but a lightning to HDMI adapter is needed.
More models	Keeping Update


Note:

Mobile phones that cannot be directly connected using Type-C to Type-C cables need to be connected using the HDMI VGA cable(for Android)/AV HDMI cable(for iOS), the specific connection method needs to be operated according to the instructions.

2.Mobile phone that support Type-C directly connected

Cable selection:	
Option 1	5V/3A Adapter, Type-C to Type-C cable
Option 2	Power Bank, Type-C to USB cable, Type-C to Type-C cable

d.Find the Type-C data transmission interface, use a Type-C to Type-C cable to connect the phone with the portable monitor, and the image will be copied and displayed immediately.

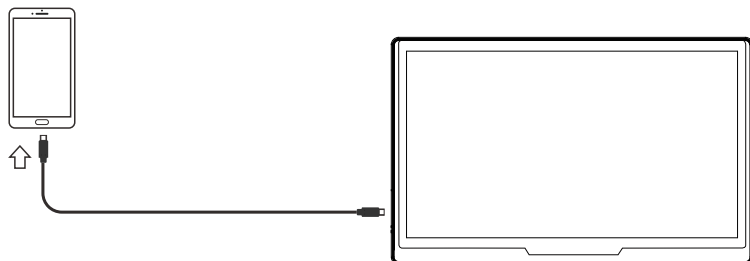


Note: You need to plug in the power supply and keep it powered on before connecting the Type-C to Type-C cable to the monitor. If the sequence is wrong, it will cause no input on the portable monitor. At this time, you need to unplug the data transmission cable, plug it in again and check whether plugged in properly and tight.

3.Connect to HDMI Adapter(iOS/Android)

If your smart phone cannot directly enlarge the screen via Type-C to type-C cable data transmission, you need to purchase a iPhone iPad/Android to HDMI adapter that supports Bluetooth and prepare a USB power plug.

Connect to Android phone/Tablet

Cable selection:	
Option 1	5V/3Aadapter, Mini HDMI to HDMI adapter, Android to HDMI adapter
Option 2	Power bank, Type-C to USB cable, Mini HDMI to HDMI adapter, Android to HDMI adapter

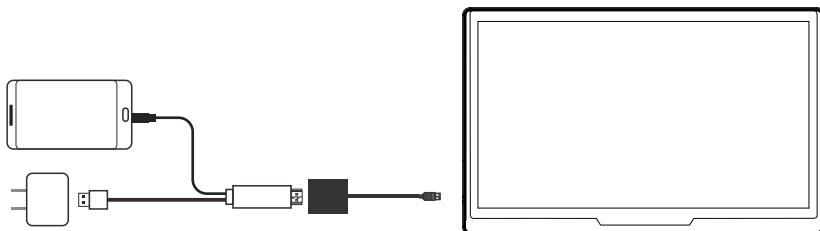


Connect:

- a. Make sure the phone has enough power.
- b. Connect the 5V/3A adapter (Power Bank) first and keep it charged.
- c. Connect cables.
- d. You may need to download and install the same-screen software according to the HDMI adapter you purchased, turn on the Bluetooth of the phone, connect the Bluetooth function of the HDMI adapter for authorization, and set according to the prompts.

Connect to iPhone/iPad(iOS)

Cable selection:	
Option 1	5V/3A adapter, Mini HDMI to HDMI adapter, iPhone/iPad to HDMI adapter
Option 2	Power bank, Type-c to USB cable, Mini HDMI to HDMI adapter, iPhone/iPad to HDMI adapter

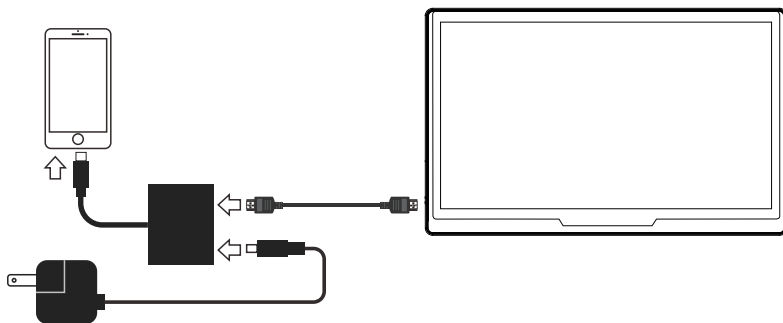

Connect:

- a. Make sure the phone has enough power.
- b. Connect the 5V/3A adapter (Power Bank) first and keep it charged.
- c. Connect cables.
- d. You may need to download and install the same-screen software according to the HDMI adapter you purchased, turn on the Bluetooth of the phone, connect the Bluetooth function of the HDMI adapter for authorization, and set according to the prompts.


Connect to Laptop

1.Supports HDMI Laptop models

Apple	MacBook 12"> MacBook Pro、 MacBook Air> iPad Pro 2018
HUAWEI	MateBook、 MateBookX> MateBookXPro> MateBookE
Honor	Magic
MIUI	Air 12.5713.3\ Pro15.6"MI Gaming NoteBook
Lenovo	Ybga5Pro、 ThinkPad XI Carbon 2017, Miix 720
HP	Pavilion x2、 EliteBook Folio G1
DELL	XPS13、 XPS15
Google	ChromeBook Pixels、 PieiBook Pen
Razer	Blade Stealth
Microsoft	Surface Book 2
ASUS	Zenbook、 U306、 U321 Series> U4100、 ROG Series
More models	Keeping Update.....

2.How to connect

Cable selection:	
Option 1	5V/3A adapter, Mini HDMI to HDMI adapter,
Option 2	Power bank, Type-c to USB cable, Mini HDMI to HDMI adapter,

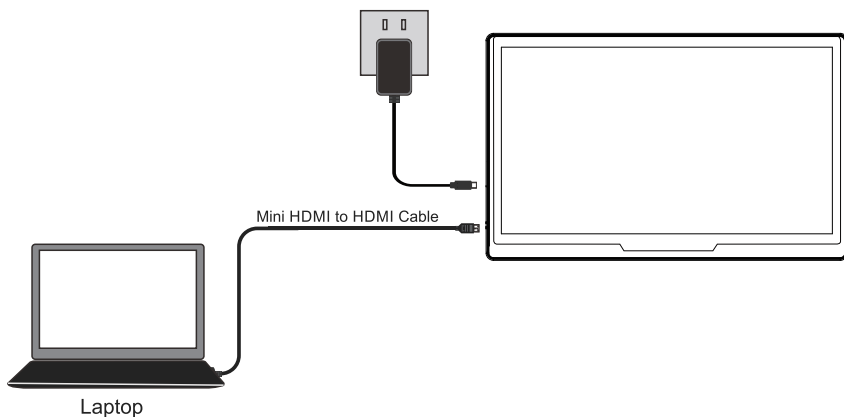

Connect:

- a. Make sure that the laptop has enough power. If the power is insufficient, you need to connect the laptop to the power supply and turn on the computer.
- b. Connect the 5V/3A adapter (Power Bank) first and keep it charged.
- c. Find the mini HDMI data transmission interface, use a mini HDMI to HDMI cable to connect the notebook/PC with the portable monitor, and the image will be copied and displayed immediately.

Note: You need to plug in the power supply and keep it powered on before connecting the mini HDMI to HDMI cable to the monitor.

If the sequence is wrong, it will cause no input on the portable monitor. At this time, you need to unplug the data transmission cable, plug it in again and check whether plugged in properly and tight.

3. Split screen expansion function

(1) Four modes

Copy mode:

Laptop screen display is consistent with portable monitor's. In this mode, pictures can be enlarged to bring you a clearer visual effect, avoiding the visual fatigue caused by the small screen.

Split screen mode:

In this mode, the screen display of the laptop is different from that of the portable display screen, and multiple operation requirements can be performed at the same time. Avoid the trouble caused by the continuous switching between two or more pages.

Second screen mode only:

In this mode, no display on the notebook, the picture only shows on the monitor. Remain connected and use the monitor directly.

Computer mode only

In this mode, no display on the monitor, the picture only shows on the notebook.


(2) Method of operation

Keep the power supply and the HDMI / Type-C data transmission cable well connected.

Click the notebook button and the letter "P" button at the same time, 4 mode selection boxes will pop up on the notebook. Include Copy mode, Split screen mode, Computer mode only, Second screen mode only.

Choose the appropriate working mode according to your needs.

Connecting the 3.5mm jack

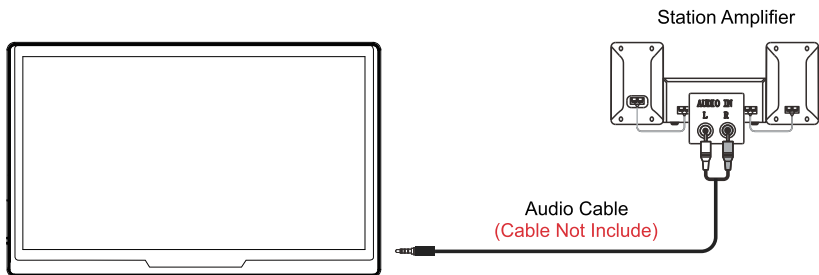


1.Connect in-ear headphones to 3.5mm jack

If you need to enjoy personal space while watching videos or listening to music, you only need to plug in headphones to enjoy your personal time.

2.Connect audio speakers to increase the volume

When you have a large event such as a party / picnic, you need to adjust the atmosphere, and need a super loud volume, you only need to plug in audio speakers to 3.5mm jack and enjoy the happy hour.

Connect to Switch/Xbox one/ PS4

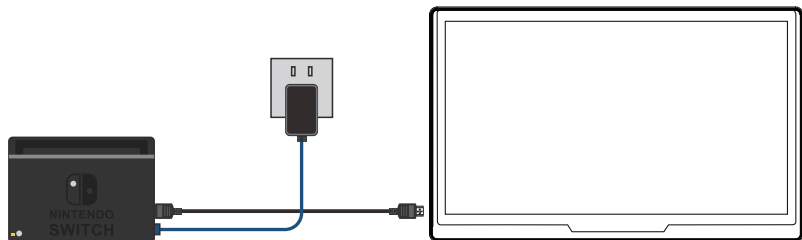

Our portable display brings you a large-screen 1920 * 1080p high-definition game experience. It supports connection to Switch, Xbox one, and PS4 game consoles via HDMI cable. Steps to connect:

1.First connect the game console and keep it powered on.


For example: First insert the small display of Nintendo Switch into the base and plug in the power to confirm that the power-on indicator is on.

2.Before connecting the monitor, connect the power adapter to the monitor and display “no signal”.

3.Connect the HDMI cable.

Note: The Type-C data transmission of the monitor does not have N-ISDN function, so it needs to be connected by the Switch base.

Connect to TV Stick, Blu-ray player and other PC models (HDMI connection)

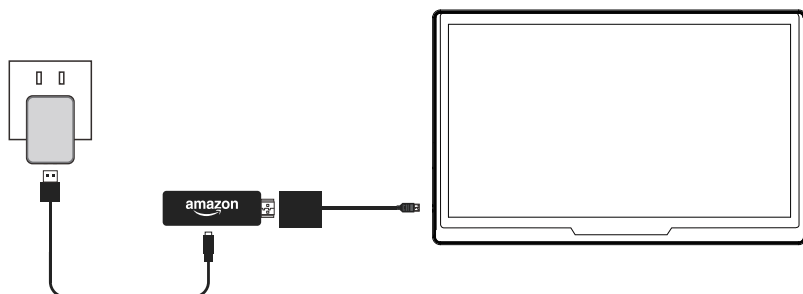

Our portable monitor supports to connect and use TV stick, watch videos on YouTube and other websites. For detailed usage, you can check the instruction manual of TV stick. If your Bluetooth player has an HDMI data transmission slot, you can also connect our monitor to get a large screen playback.

In addition, The portable monitor supports more PC models with HDMI data transmission. You can research and operate according to your equipment. If you have any questions, please contact us in time. We will feedback the problem to the engineer and give a satisfactory answer.

Specifications

Name	Portable Monitor
Model	P10
Screen Size	10.5 inch
Resolution	1920*1280P
Screen Ratio	15:10 widescreen
HD Standard	1080P(Full HD)
Panel Type	IPSALLSIGHI
Backlight Type	W-LED
signal port	USB/Type-C/HDMI
Power input:	TypeC 5V/3A
Size(mm)	222*148*8
Color	Black(bottom case metal sire drawing)
Item Weight	560g

Troubleshooting(FAQ)

1.Power LED is not ON

Press the button to check if the monitor is in the ON mode.

Check if the Type-C cable is properly connected to the monitor and the power outlet.

2.Screen image is too light or dark

Adjust the Brightness settings via the button.

3.Screen image bounces or a wave pattern is present in the image

Make sure the USB Type-C cable is properly connected between the USB Type-C monitor and the computer.

Move electrical devices that may cause electrical interference.

4.The monitor displays "no cable"

During the connection process, you need to connect the power supply first, and then connect the Type-C / HDMI data transmission line. If you connect in the wrong order, the display will show "No cable", you only need to unplug the Type-C / HDMI data transmission line. Re-insert the port, it can be used normally.

If "No cable" appears on the display during use, it may be that the power supply or data transmission interface is loose. You need to check whether the port is loose and plugged in, which can restore normal use.

If still not available, please contact us via

5.During use, the monitor shows "no signal"

It may be caused by the loose HDMI / Type-C data transmission line, just plug in the HDMI / Type-C cable Tightly. If there is still no display, please contact us ASAP

6.When using the split-screen mode, the image size of the laptop screen and the monitor may be inconsistent

Ybu need to adjust the resolution of the laptop screen to be consistent with the resolution of the monitor.

Note: No need to adjust the screen resolution of the monitor.

10.5インチ モバイルモニター



取扱説明書



目次

安全上のご注意と警告.....	1
使用上のご注意.....	3
付属品リスト.....	4
各部の名称.....	5
モニターに接続する.....	6
HDMI接続.....	7
Type-C 接続方法.....	8
Nintendo Switch 接続方法.....	9
iOS端末 接続方法.....	10
Android端末 接続方法.....	10
Amazon Fire TV Stick 接続方法.....	11
音声機器の接続方法.....	11
仕様.....	12
困ったときには.....	13

安全上のご注意と警告



お使いになる方や他の方への危害、あるいは財産の損失を未然に防ぐために、以下の内容(表示・図記号)についてよく理解した上で、記載事項を必ずお守りいただくようお願いいたします。

警告・注意について


 警告	誤った取り扱いをすると、死亡や重症を負う恐れがある内容を示しています。
 注意	誤った取り扱いをすると、傷害を負う可能性や物的損害が発生する恐れがある内容を示しています。



※ 本書記載の警告及び注意事項を遵守されずに、ご使用されて生じた、いかなる事故につきましても、弊社としましては、一切の責任を負いかねますのでご了承ください。




図記号の例

	絶対に行わないでください。
	必ず指示に従い、行ってください。

警告

	● 本製品を修理・分解・改造しない 発火や感電、破裂、やけど、動作不良の原因になります。	● 雷が鳴りはじめたら、充電中の本体 ACアダプター、充電台に触らない 落雷による感電の恐れがあります。
	● 付属アダプター以外のアダプターに繋がらない 発熱、発火の原因になります。	● 濡れた手で使用しない 事故やけが、家財の破損、故障の原因になります
	● 熱器具の側に配線しない 電源コードの被覆が破れ、発火や感電、やけどの原因になります。	● 本製品を飛行機の中で使用しない 飛行機の計器などの誤動作の原因になります。飛行機の中ではコンピューターから本製品を取り外してください。
	● 電源プラグを抜くときは電源コードを引っ張らない 電源プラグを持って抜いてください。電源コードに傷が付き、発火や感電の原因になります。	● 液晶パネルから漏れた液体(液晶)には触れない 万一、液体が目に入った場合は、目に障害を与える恐れがあります。すぐに多量の水でよく洗い流し、直ちに医師の診察を受けてください。本体に付いた液体は、手に付かないように注意しながらふき取ってください。液体が手や体に付いたときは、水でよく洗い流してください。

	<ul style="list-style-type: none"> ● ACアダプターを含む本製品を濡らしたり、水気の多い場所で使わない 水や洗剤などが本製品にかけると、隙間から浸み込み、発火・感電の原因になります。 ● お風呂場、雨天、降雪、海岸、水辺で使う際は、特に注意する ● 水の入ったもの(コップ、花びんなど)を上に置かない ● 万一、本製品が濡れてしまった場合は、絶対に使わない 	<ul style="list-style-type: none"> ● 本製品を以下のような場所に設置しない(太文字) ● 事故の原因となります ● 運転や移動の妨げになるところ ● エアバッグ動作の妨げになるところ ● 前方の視界を妨げるところ ● 夜間トンネル内などで本製品の画面がフロントガラスに映り込むようなところ(前方の視界の妨げになります)
	<ul style="list-style-type: none"> ● ACアダプターは正しく抜き差しする 正しく使用しないと、火災や感電、ショートなどの原因になります。 ● 取り付け、取り外し、移動の際は、必ず手順を守ってください。 先にパソコン本体・周辺機器および本製品の電源を切り、コンセントからACアダプタを抜かずに行くと、感電の原因になります 	<ul style="list-style-type: none"> ● ACプラグに付いたほこりなどは、乾いた布で定期的に取り除く ほこりが付いたまま使用すると、火災や感電、ショートの原因になります ● 煙が出たり、変な臭いや音が出たらすぐにコンセントから電源プラグを抜く そのまま使うと発火・感電の原因になります。異臭がなくなったことをご確認の上、ご購入店、または FANGORサポートへ連絡ください。

 注意		
	<ul style="list-style-type: none"> ● 本製品を踏まない 破損し、けがの原因になります。特に小さなお子様にはご注意ください。 	<ul style="list-style-type: none"> ● 人が通行するような場所に配線しない 足を引っ掛けると、けがの原因になります。
	<ul style="list-style-type: none"> ● 眼精疲労を防ぐために、以下を守ってください 長時間ディスプレイを見続ける場合は、ディスプレイの明るさと周辺の明るさの差をなるべく小さくしてください。また、1時間に10分から15分程度の休憩をとってください。長時間ディスプレイを見続けると、眼に疲労が蓄積されます。 	

■ 画面の焼き付きを防ぐために

同じ画面を長時間表示させていると画面の焼き付きを起こすことがあります。

- パソコンやディスプレイを使用しないときは電源を切ってください。

■ お手入れ方法

本製品についた汚れなどを落とす場合は、ACアダプターを抜いてから、柔らかいきれいな布で軽く乾拭きをしてください。

- 汚れがひどい場合は、水で十分に薄めた中性洗剤に布を浸して、よく絞ってから汚れを拭き取り最後に乾いた布で拭いてください。

- ベンジン、シンナー、アルコール、消毒薬、化学ぞうきん、クリーナー/クリーニングペーパーなどは使わないでください。

変質やひび割れなどの原因になります

- 液晶パネルに水滴などをつけたまま放置しないでください。水滴などがついた場合はすぐに乾いた柔らかい布などで拭き取ってください。

放置しておくと液晶パネルが変色したり、シミの原因になります。また、水分が内部へ入ると故障の原因になります。

■ 連続使用について

本製品は、24時間連続使用を前提とした設計ではありません。

有寿命部品の消耗を加速させる原因となりますので、24時間連続でのご利用は避けてください。

■ 液晶パネルについて

- 液晶パネルの周囲を押さえたり、その部分に過度の負担がかかる状態で持ち運んだりしないでください。液晶パネルが破損する恐れがあります。

- 液晶パネルの表面は傷つきやすいので、工具や鉛筆、ボールペンなどの固いもので押ししたり、叩いたり、こすったりしないでください。

- 液晶パネル上に滅点(点灯しない点)や輝点(点灯したままの点)がある場合があります。これは、液晶パネル自体が99.999%以上の有効画素と0.001%の画素欠けや輝点をもつことによるものです。故障、あるいは不良ではありません。

- 見る角度や温度変化によっても色むらや明るさのむらが見える場合があります。これらは、故障あるいは不良ではありません。


付属品リスト



①




②

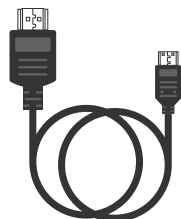

③



④

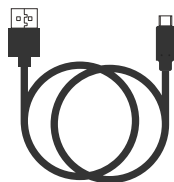


⑤



⑥

1. モバイルモニター
2. アダプター
3. Mini HDMI to HDMIケーブル
4. Type-C to Type-Cケーブル
5. USB Type-A to Type-Cケーブル
6. 取扱説明書

各部の名称

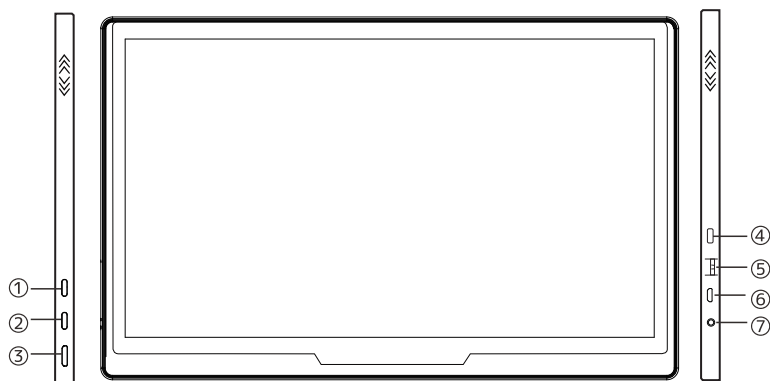


①	充電用Type-C	⑤	ホイールボタン
②	Type-C入力	⑥	micro USB
③	MiNi HDMI	⑦	ヘッドセット
④	スイッチ / メニュー		

1.メニューボタンをクリックして、インターフェースの設定を開き、上下のホイールボタンで選択します。ホイールボタンをクリックすると、設定画面の前の状態に戻ります。前の設定画面に戻るには、ホイールボタンをクリックしてください。

2.ホイールボタンを上をスライドして、明るさ設定に入ります。ホイールボタンを下をスライドさせて、音量の設定に入ります。ホイールボタンをクリックして、全体の設定に入ります(自動選択、D0:TYPE-C、D1:HDMI)

モニターに接続する

1. モニターを立てかける

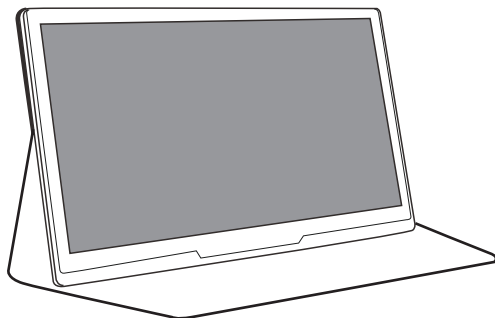


※ケースがとれますケースが不要の場合は取り外しても構いません。

2. Type-Cポート又は Mini HDMIポートで入力機器とつなぐぎます。

3. 電源を入れる

ACアダプターを給電用のType-Cポートに繋いで、コンセントと繋ぎます。電源を入れると電源ランプが青に点灯します。

※点灯されていない場合はスイッチ/メニューボタンを約5秒押ししてください。



USB Type-A to Type-Cケーブル
接続アダプター



※USB Type-A to Type-Cケーブルを使用して、バッテリーに電力を供給できます。


※「no cable」と表示された場合は、Type-Cケーブル又はHDMIケーブルを差し直してください。

4. ホイールボタンをクリックして、一番下の設定クリック。一番上の言語設定をクリックして、日本語を選択します。

HDMI接続

※接続する前に接続機器にHDMIポートの有無を確認ください。

- 1.HDMI機器(パソコンなど)を接続する前にモバイルモニターの電源を切ってください。
2. Mini HDMI to HDMIケーブル1でHDMI機器とモバイルモニターをつなぎます。
- 3.電源を入れます。ACアダプターを給電用のType-Cポートにつないで、コンセントと繋ぎます。電源を入れると、電源ランプが青に点灯します。
- 4.ホイールボタンをクリックして、下から2番目のAUTOを選択します。HDMIを選択し、ホイールボタンをクリックして切り替えます。



HDMI

※パソコンでHDMIポートがない場合は

- ①パソコンでVGAポートがあり、VGA to HDMI変換ケーブル/アダプターを使用して接続します。
- ②パソコンでMini DP(Display Port)があり、Mini Display Port-HDMI変換ケーブル/アダプターを使用して接続します。

接続方法:接続設備→ケーブル/アダプターをモバイルモニターのMini HDMIポートに挿入する。



VGA



Mini DP

※VGA to HDMI&Mini Display Port to - HDMI 変換ケーブル/アダプターは付属されていません。

Type-C 接続方法

※接続する前に対応機種を確認ください。(下のフォームにご参考にしてください。)

- 1.Type-C機器(スマホ、パソコンなど)を接続する前にモバイルモニターの電源を切ってください。
- 2.[Type-C to Type-Cケーブル]で Type-C機器とモバイルモニターの入力用の Type-Cポートに繋がります。
- 3.電源を入れます。ACアダプターで給電用の Type-Cポートにつないで、コンセントと繋がります。電源を入れると、電源ランプが青に点灯します。
- 4.ホイールボタンをクリックして、下から2番目のAUTOを選択します。Type-Cを選択し、ホイールボタンをクリックして切り替えます。

Type-C 対応機種

スマホ 対応機種

HUAWEI	P30/P30Pro/P20/P20Pro/Mate20/Mate20pro/Mate20x/Mate10/Mate10Pro/Honor Note10/Honor V20
Samsung	S8/S8+/S9/S9+/S10/S10+/S10e/Note8/Note9/Note10
ジェングオ (JianGuo)	R1/Pro2s


パソコン 対応機種

HUAWEI	Matebook D/Matebook X/Matebook X Pro/Matebook E/Matebook 13		
HP	Pavilion X2/Elitebook/Folio/G1/Shadow Elves 4		
XiaoMi	Air12.5インチ/Air13.3インチ/ XiaoMi Gaming Laptop		
Legion	Yoga6 Pro/Legion Y7000/Y7000P/Y9000K		
Apple	Mac Book12インチ/ Mac BookPro/2017、2018/ Mac Book Air2018/iPad Pro 2018		
Dell	G3/G5/G7/Inspiron 5000/7000/XPS13/XPS15		
ASUS	Zenbook3/X/U4100UN/U5100UQ/ROG		
Google	Chrome book/Pixel book/Pen	Honor	Magic boos
Microsoft	Surface	Razer	Blade Stealth

Nintendo Switch 接続方法


①Nintendo Switch ドック使い接続方法

- 1.【Nintendo Switchドック】の裏側のカバーを開きます。カバーを開くと、2箇所を繋ぐ穴があります。
 - 2.一番上の端子に[Nintendo switch純正のACアダプター]を繋ぎます。一番下の端子に[Mini HDMI to HDMIケーブル]をつなぎます。
 - 3.繋いだらドックのカバーを閉めます。[Nintendo switch純正のACアダプター]をコンセントにつなぎます。
 4. [Mini HDMI to HDMIケーブル]をモバイルモニターにつなぎます。
 - 5.[モバイルモニター]の電源を入れます。ACアダプターを給電用のType-Cポートに繋いで、コンセントと繋ぎます。電源を入れると、電源ランプが青に点灯します。
 - 6.ホイールボタンをクリックして、下から2番目のAUTOを選択します。HDMIを選択し、ホイールボタンをクリックして切り替えます。
 - 7.[Nintendo Switch本体]の電源ボタンを押してからAボタンを押してHOMEメニューまで進みます。
 - 8.上からゆっくりと[Nintendo Switch本体]を [Nintendo Switchドック]に差し込みます。
- ※映像が映るまで数秒から十数秒程度かかる場合があります。

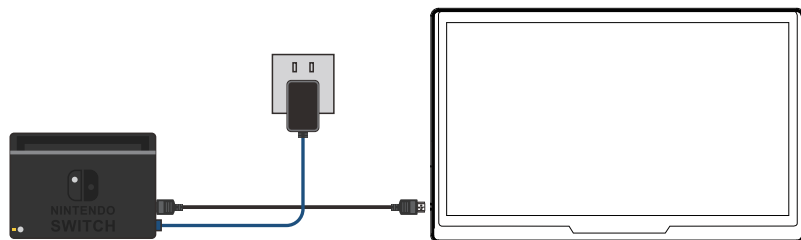

②ドックなしの接続方法

1. [Nintendo Switch本体]と[モバイルモニター]を[Type-C to Type-Cケーブル]で繋ぎます。
※[Type-C to Type-Cケーブル]を入力用の Type-Cポートに繋ぎます。
2. [Nintendo switch純正のACアダプター]を[モバイルモニター]給電用の Type-Cポートに繋ぎます。コンセントと繋ぎます。電源を入れると、電源ランプが青に点灯します。電源ランプが青に点灯します。
3. [Nintendo Switch本体]の電源ボタンを押してからAボタンを押してHOMEメニューまで進みます。
※映像が映るまで数秒から十数秒程度かかる場合があります。

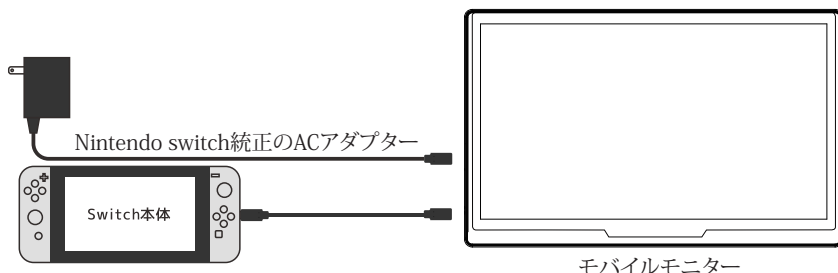


iOS端末 接続方法

※ [Lightning Digital AVアダプター]が必要です。(付属されていません)

1. [Digital AVアダプター]をiOSデバイスの底部にある充電ポートに差し込みます。
2. Mini HDMI to HDMIケーブルをアダプターと[モバイルモニター]に接続します。
3. [モバイルモニター]の電源を入れます。ACアダプターを給電用のType-Cポートに繋いで、コンセントと繋がります。電源ランプが青に点灯します。
4. ホイールボタンをクリックして、下から2番目のAUTOを選択します。HDMIを選択し、ホイールボタンをクリックして切り替えます。

※映像が映るまで数秒から十数秒程度かかる場合があります。

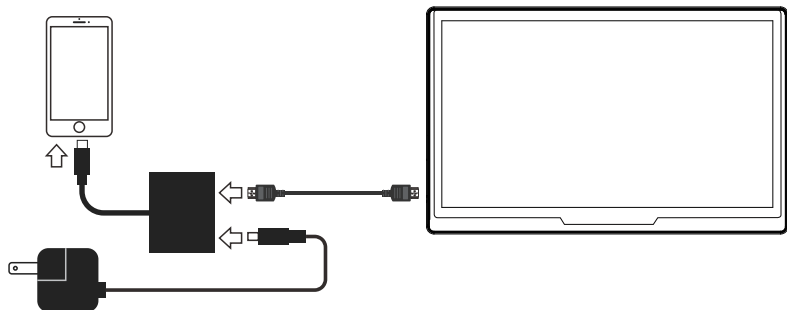

Android端末 接続方法

※ HDMI to micro USB/CMHL変換アダプター(USB給電タイプ)が必要です。(付属されていません)

※ Mini HDMI(オス) to HDMI(メス)変換ケーブルが必要です。(付属されています)


1. micro USB/Cをスマホに接続し、HDMIを [Mini HDMI(オス) to HDMI(メス)変換ケーブル]のメスに接続して、micro USBをコンセントと繋がります。
2. [Mini HDMI(オス) to HDMI(メス)変換ケーブル]のオスを [モバイルモニター]につなぎます。
3. [モバイルモニター]の電源を入れます。ACアダプターで給電用のType-Cポートにつないで、コンセントと繋がります。電源を入れたら、電源ランプが青に点灯します。
4. ホイールボタンをクリックして、下から2番目のAUTOを選択します。HDMIを選択し、ホイールボタンをクリックして切り替えます。

※映像が映るまで数秒から十数秒程度かかる場合があります。

※詳しくはお使いのアダプターの説明書をご確認ください。

※アダプターにより接続には対応していない場合があります。

※アダプターにより音声再生には対応していない場合があります。

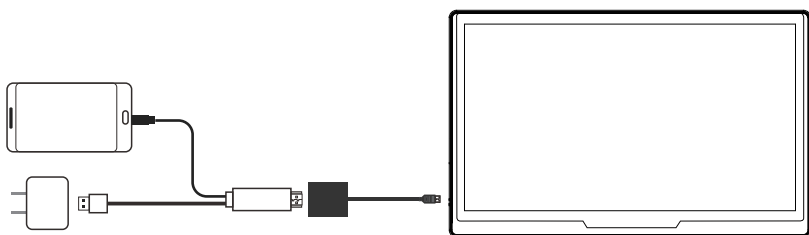


Amazon Fire TV Stick 接続方法

※ Amazon Fire TV Stickは付属されていません。


※ Mini HDMI(オス) to HDMI(メス)変換ケーブルが必要です。(付属されています)

- 1.Fire TV StickのHDMIを[Mini HDMI(オス) to HDMI(メス)変換ケーブル]のメスに接続します。
- 2.[Mini HDMI(オス) to HDMI(メス)変換ケーブル]のオスを[モバイルモニター]に繋ぎます。
- 3.Fire TV Stickの側面にあるUSB端子に、Fire TV Stick付属のUSB電源ケーブルを接続して、もう一方を電源アダプタに接続します。電源アダプターをコンセントに繋ぎます。
- 4.[モバイルモニター]の電源を入れます。ACアダプターで給電用の Type-Cポートに繋いで、コンセントと繋ぎます。電源を入れると、電源ランプが青に点灯します。
- 5.ホイールボタンをクリックして、下から 2 番目のAUTOを選択します。HDMIを選択し、ホイールボタンをクリックして切り替えます。

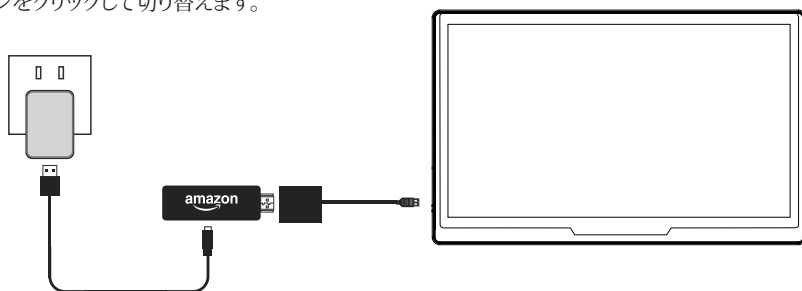

音声機器の接続方法

- 1.音声機器を[モバイルモニター]のステレオミニジャックにに繋ぎます。
- 2..一部の音声機器は電源が必要です。
- 3.接続完了でしたらお使いのモバイルモニターの音声は外部機器で出力します。

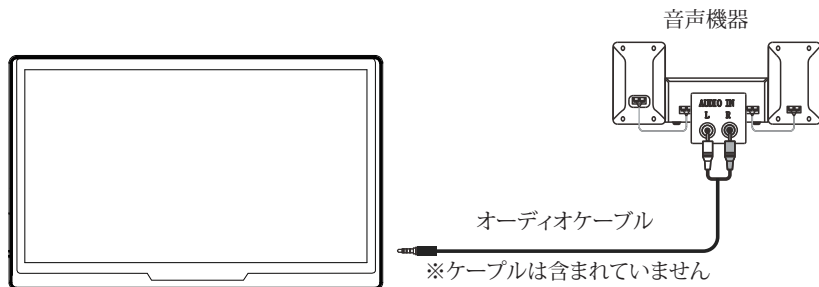

仕様

型番	P10
画面サイズ	10.5インチ
解像度	1920*1280P
画面アスペクト比	15:10
画質	1080P(Full HD)
パネルタイプ	IPS全視野角
バックライトタイプ	W-LED
入力端子	Mini HDMI/ Type C/ステレオミニジャック
定格電圧	AC100-240V50/60Hz
サイズ	232mm*166mm*9mm
梱包時質量	約560G

困ったときには

電源ランプが消灯の場合	電源が入っていません。電源ボタンを押したり、ACアダプターやUSB Type-Cケーブルを繋ぎ直してください。 解決できない場合は、お問い合わせください。
画面の色がおかしい	メニューの〔設定→リセット〕を実行してください。 解決できない場合は、サポートに連絡をお願い申し上げます。
ドット抜けがある	輝点やドット抜けでは故障ではありません。 解決できない場合は、サポートに連絡をお願い申し上げます
「no cable」と表示される	Type-Cケーブル又はHDMIケーブルを差し直してください。 解決できない場合は、サポートに連絡をお願い申し上げます。

保証について

取扱説明書に従った使用状態で、保証期間内に故障した場合のみ、保証に対応できます。
但し、以下の理由またはこれに準ずる理由により生じた故障等については保証書は適用されません。

- (A) 取扱いの不注意、誤った使用方法、落下などの破損
- (B) 取扱説明書に書かれている注意を怠った場合
- (C) 火災・地震・水害・落雷・その他の天災、公害等による故障や損傷
- (D) お買い上げ後の転居による輸送、移動、落下等
- (E) 弊社または弊社の指定した事業所以外で行われた修理、改造
- (F) 日本国以外での商品確認や使用による不具合
- (G) 本書のご提示がない場合、または保証期間が過ぎている場合