Customer	:	Date	: 7 Jan. 2021
Item no.	: 210381-PKR1	Revision	:
Part no.	: 21038-PKR1-A100-11		
Description	: DPSC_GourmetKitchen - Instruction		
Language	: US (ENGLISH + 2 Legal)		
Box Size	: A-4 size - 297mm x 210mm with one fold (12 pages)		
Packaging Designer Remarks	: : Double sided printing		

Color to Print: BLACK

©Disney
www.disneyprincess.com

©2021 and manufactured for / fabriqué pour JAKKS PACIFIC, INC., 2951 28TH ST., SANTA MONICA, CA 90405 USA.
® and/et™ designate U.S. trademarks of / désignent les marques déposées de JAKKS Pacific. Other trademarks used under license / Autres marques déposées utilisées sous licence. **MADE IN CHINA. FABRIQUÉ EN CHINE.**
Imported into UK by / Importé au Royaume-Uni par JAKKS Pacific (UK) Ltd., 1 Arlington Square, Downshire Way, Bracknell, Berkshire RG12 1WA, GB, and EU by / et UE par JAKKS Europe B.V., Herikerbergweg 88, 1101 CM Amsterdam NL.
www.jakks.com www.jakks.com/warranty consumers@jakks.com
North America / Amérique du Nord: 1.877.875.2557 or 1.909.594.7771
UK & EU / Royaume-Uni et UE: 00.44(0)1344.638909

Colors & decoration may vary. Retain packaging/instructions for reference. / Les couleurs et le décoration peuvent varier par rapport aux illustrations. Conserver l'emballage/instructions pour toute référence.

Remove all packaging before giving toy to child. / Enlever le jouet de l'emballage avant de le donner à un enfant.

WARNING! Small Parts. Choking Hazard. / ATTENTION ! Petits éléments. Danger d'étouffement.

WARNING! This is a toy only, not to be used with real food, beverages or liquids.
ATTENTION! Cet article est un jouet uniquement. Ne pas utiliser avec de véritables aliments, boissons ou tout autre liquide.

3+

Gourmet "Smart" Kitchen

Instruction Manual

Includes:
1 Kitchen, 1 Pot, 1 Flip Pan, 2 Spoons,
2 Forks, 2 Knives, 2 Plates, 1 Cup,
2 Ice Cubes, 1 Fried Egg, 1 Bacon Strip,
1 Pancake, 1 Hard Boiled Egg, 1 Spatula,
1 Serving Spoon, 1 Cake Pan,
1 Dish Rack and 1 Carton of Almond Milk



⚠ WARNING:
CHOKING HAZARD - Small parts.
Not for children under 3 years.

⚠ ATTENTION :
DANGER D'ÉTOUFFEMENT - Petits éléments.
Ne convient pas aux enfants de moins de 3 ans.


Requires 3 x "AA" (LR6/R6) batteries (not included)
Size of assembled kitchen: 42.32 inches (107.5cm) high x 44.96 inches (114.2cm) wide (with counter top up) x 13.78 inches (35cm) deep.
ADULT ASSEMBLY AND SUPERVISION REQUIRED. Never allow child to stand on the Kitchen Set.

Requiert 3 piles AA/LR6/R6 non comprises.
Dimensions de la cuisine assemblée : 107,5 cm (42,32 po) de haut x 114,2 cm (44,96 po) de large (avec plan de travail redressé) x 35 cm (13,78 po) de profondeur.
MONTAGE ET SURVEILLANCE DEVANT ÊTRE CONFÉS À UN ADULTE. Ne jamais laisser l'enfant se tenir debout sur la cuisine.

CONTENTS




ACCESSORIES

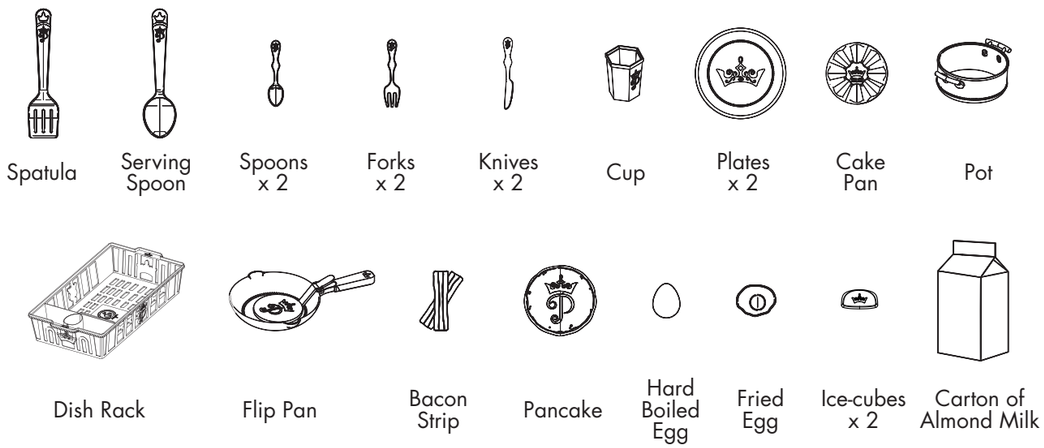

HOW TO PLAY



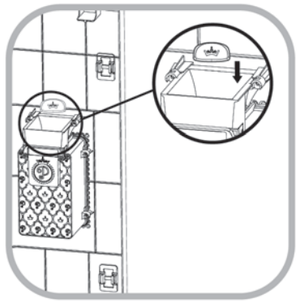

Open refrigerator upper right door to insert the play ice cubes.






GETTING STARTED

BATTERY INSTALLATION INSTRUCTIONS
Requires 3 x "AA"(LR6/R6) batteries (not included).

ADULT INSTALLATION REQUIRED
1. Locate battery compartment on back of product.
2. Using a Phillips Head screwdriver, remove the screw and battery cover.
3. Install new batteries.
4. Replace the battery cover and the screw.

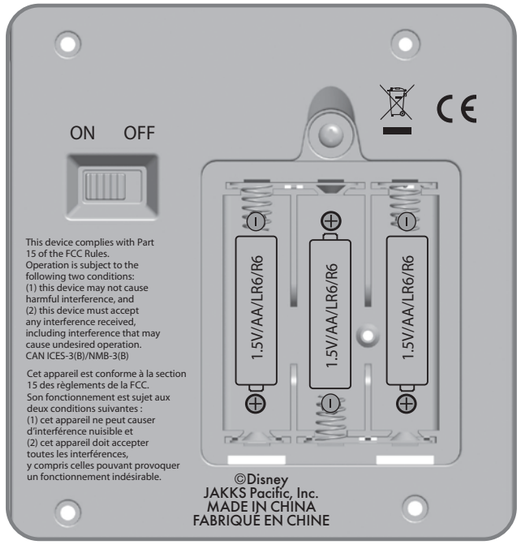

Insert the batteries in the back of the kitchen.
To turn on the kitchen, slide switch to the ON position.
Turn off when not in use to conserve battery power.

BATTERY SAFETY INFORMATION:
⚠ WARNING! Battery acid leakage can cause personal injury and cause damage to the product and surrounding property. If battery leakage occurs, thoroughly wash any affected skin, making sure to keep battery acid away from eyes, ears, nose and mouth. Immediately wash any clothing or other surface that comes in contact with leaked battery acid. Leaking batteries may make "popping" sounds. Always remove replaceable batteries before disposing product. Dispose batteries or products with non-replaceable batteries according to Local, State or Federal Battery and Recycling Laws.

TO AVOID BATTERY PROBLEMS:
NEVER mix old and new batteries or different brands of batteries.
NEVER mix alkaline, standard (carbon-zinc), rechargeable batteries with this product.
NEVER dispose of batteries in fire, as they may leak and explode.
ALWAYS remove batteries when exhausted or unused for a long time.
ALWAYS have an adult install batteries consistent with installation instructions.
ONLY use batteries specified by manufacturer.
Batteries are to be inserted with the correct Polarity (+ and -).
The supply terminals are not to be short-circuited.
Non-rechargeable batteries are not to be recharged.
Rechargeable batteries are to be removed from the toy before being charged.
Rechargeable batteries are only to be charged under adult supervision.


This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.


WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


CAN ICES-3 (B)/NMB-3(B)


PARTS

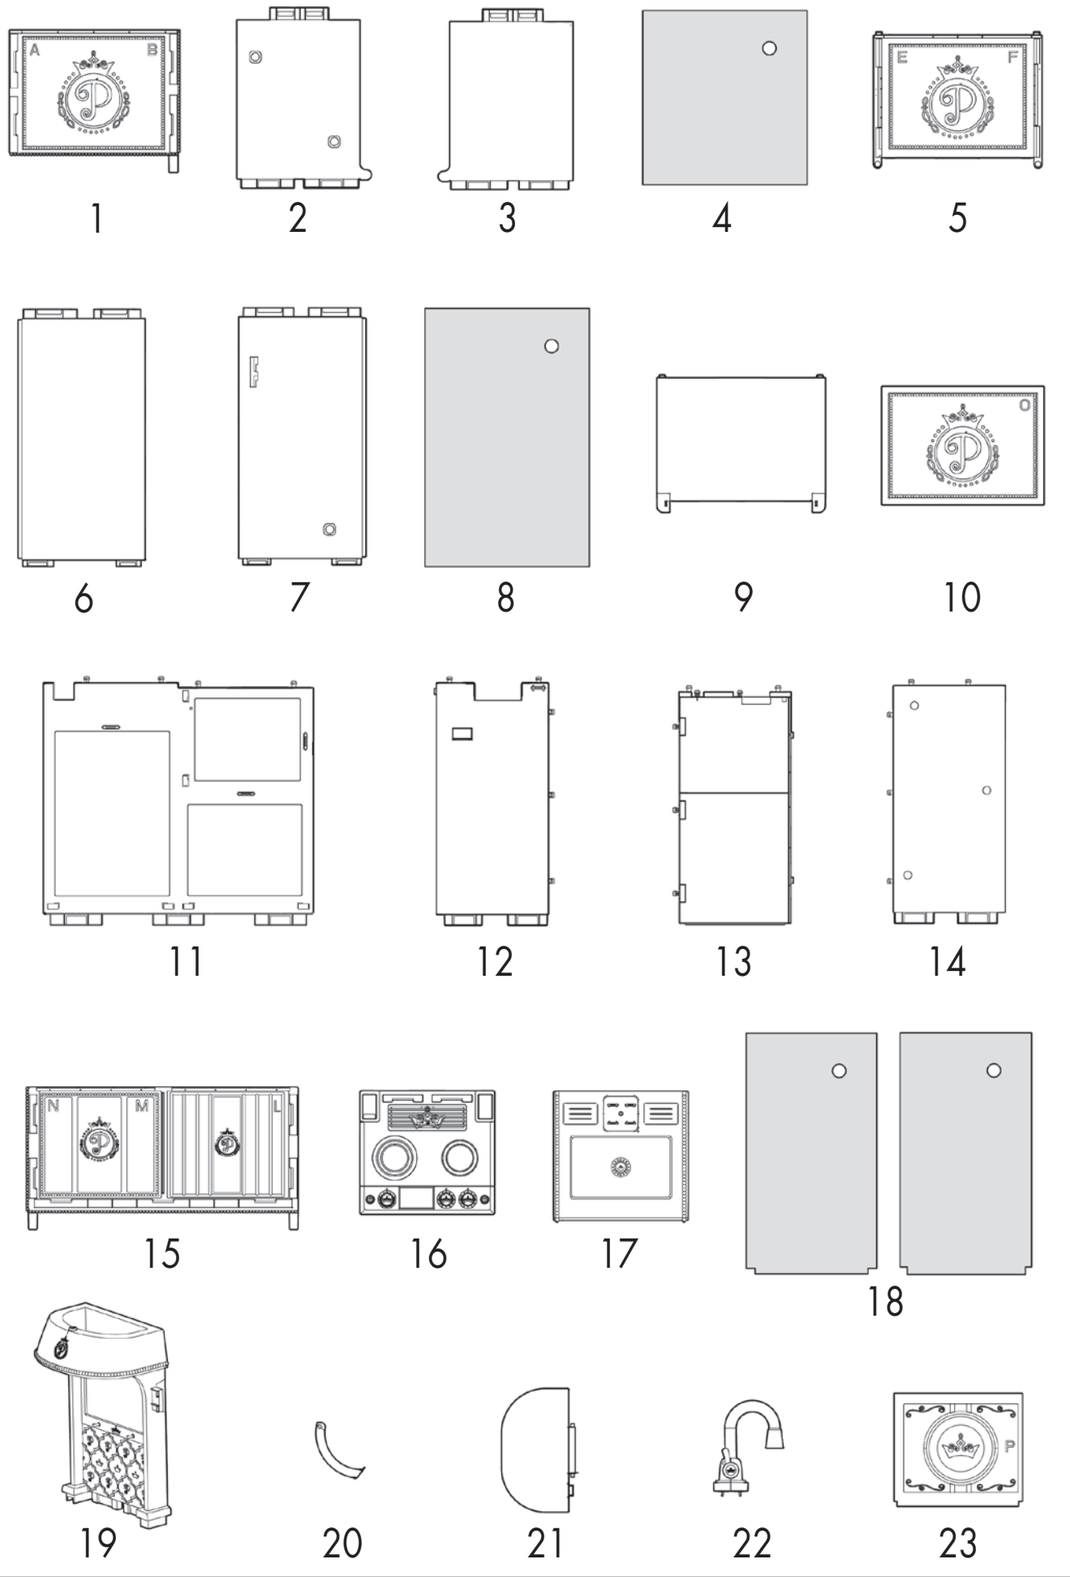


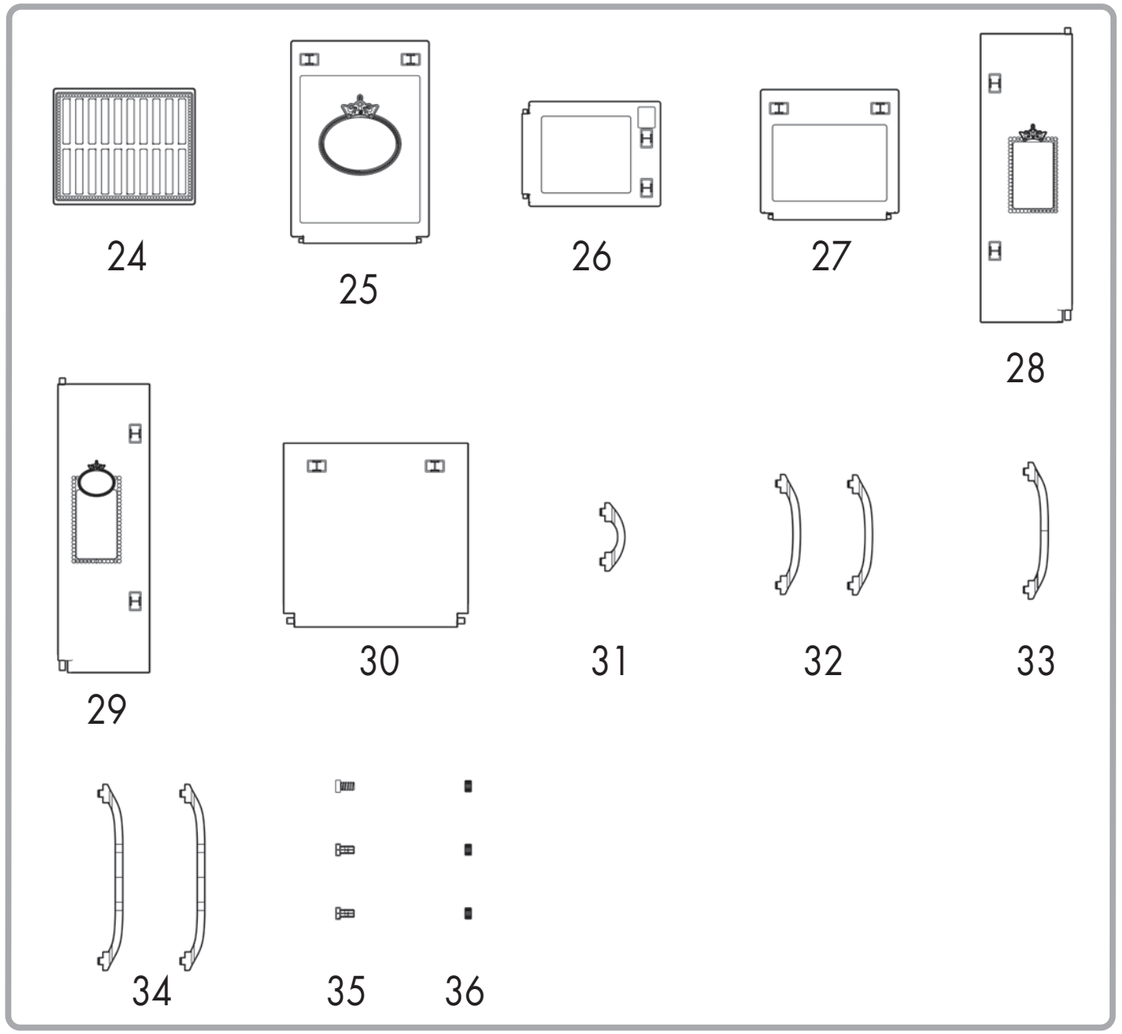



1 Refrigerator Lower Bottom Piece
2 Refrigerator Lower Left Piece
3 Refrigerator Lower Right Piece
4 Refrigerator Lower Back Board
5 Refrigerator Upper Bottom Piece
6 Refrigerator Upper Right Piece
7 Refrigerator Upper Left Piece
8 Refrigerator Upper Back Board
9 Refrigerator Upper Top Piece
10 Refrigerator Shelf
11 Dishwasher and Oven Front Piece
12 Dishwasher Left Piece
13 Microwave and Oven Left Piece
14 Microwave and Oven Right Piece
15 Dishwasher and Oven Bottom Piece
16 Stove table
17 Sink table
18 Dishwasher/Oven Back board
19 Hood stand
20 End Counter Holder
21 End Counter
22 Faucet
23 Oven Shelf
24 Dishwasher Shelf
25 Dishwasher Door
26 Microwave Door
27 Oven Door
28 Refrigerator Upper Right Door
29 Refrigerator Upper Left Door
30 Refrigerator Lower Door
31 Microwave Door Handle
32 Dishwasher/Oven Door Handle
33 Refrigerator Lower Door Handle
34 Refrigerator Upper Door Handle x 2
35 Plastic Screw x 3
36 Screw Cap x 3

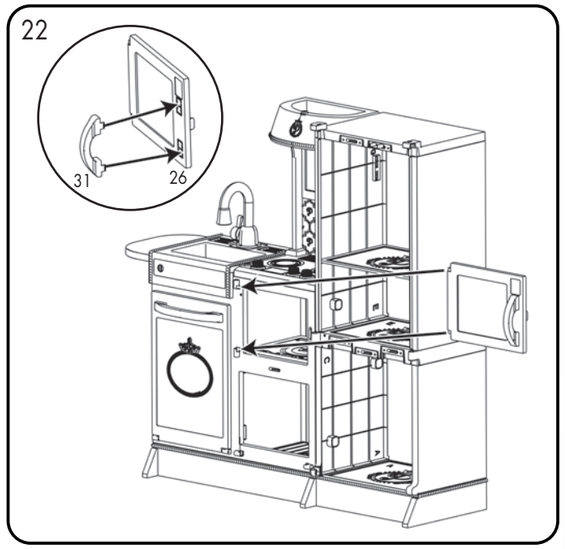

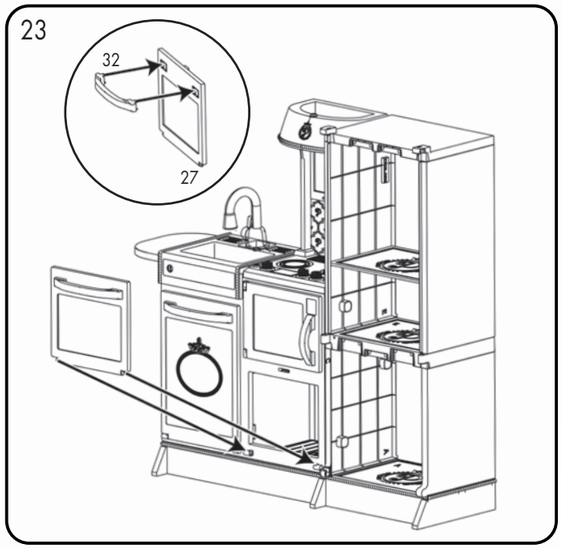

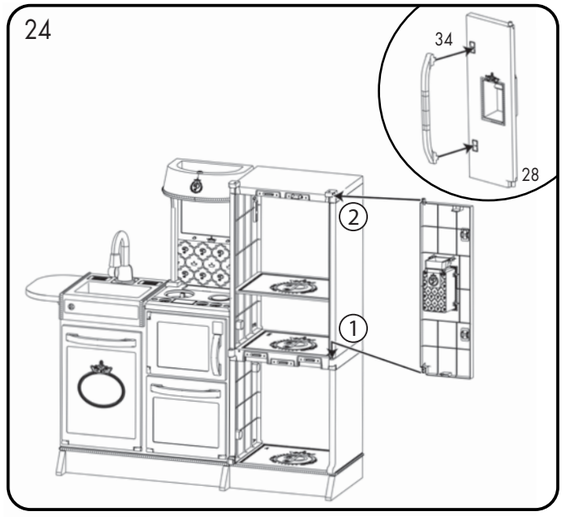


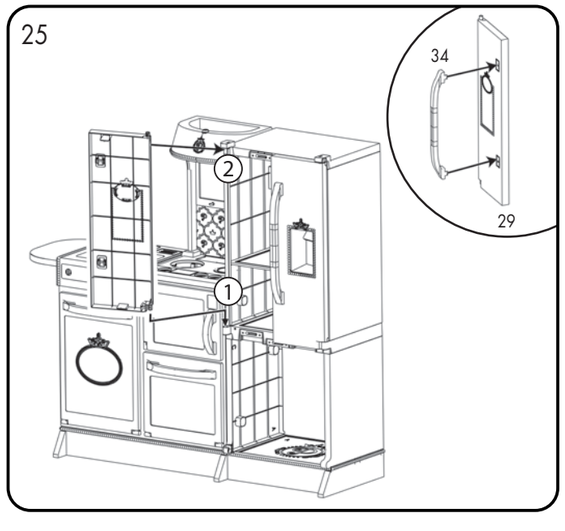


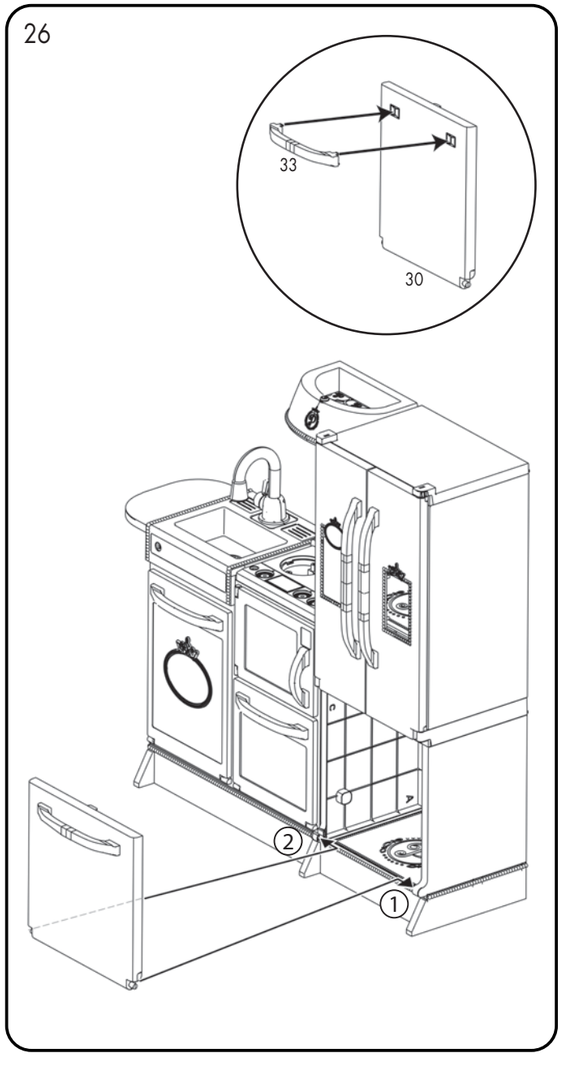



ASSEMBLY INSTRUCTIONS


Adult Assembly Required

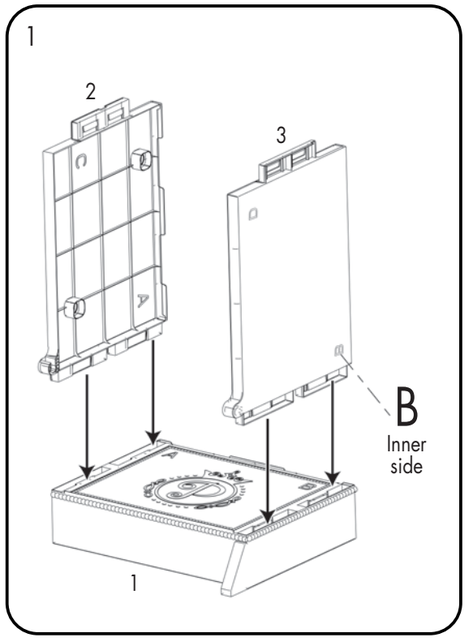


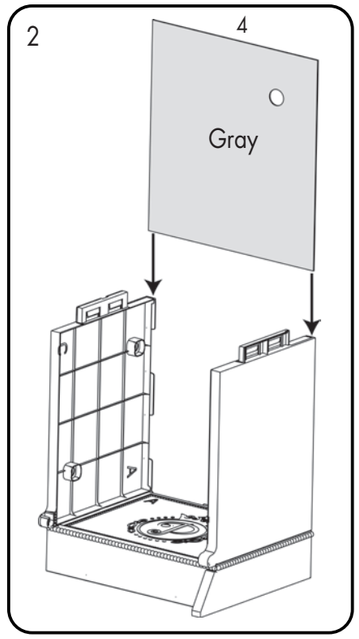


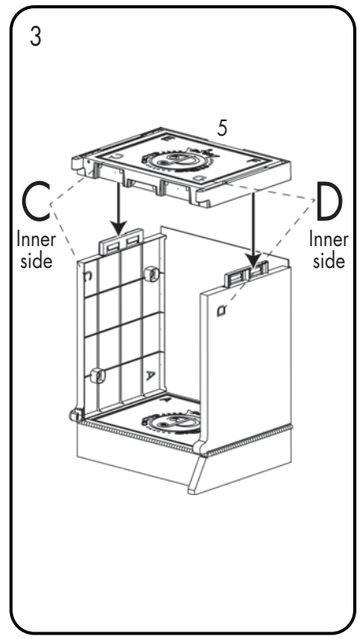


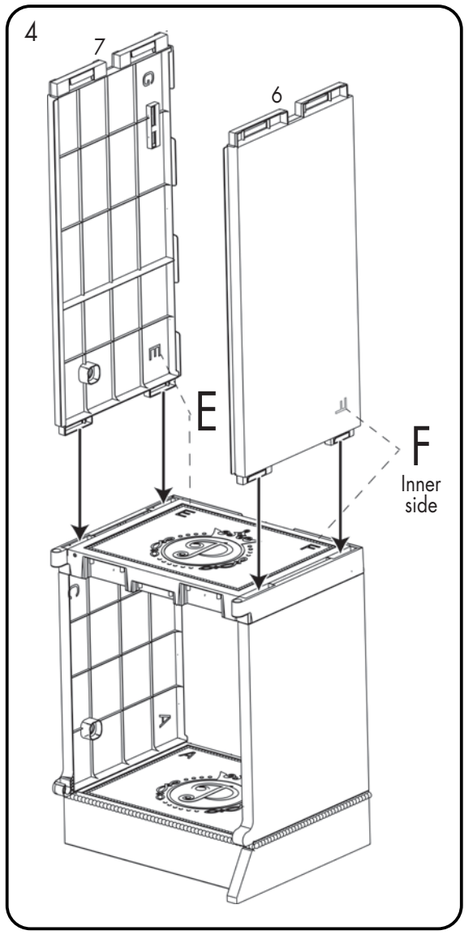


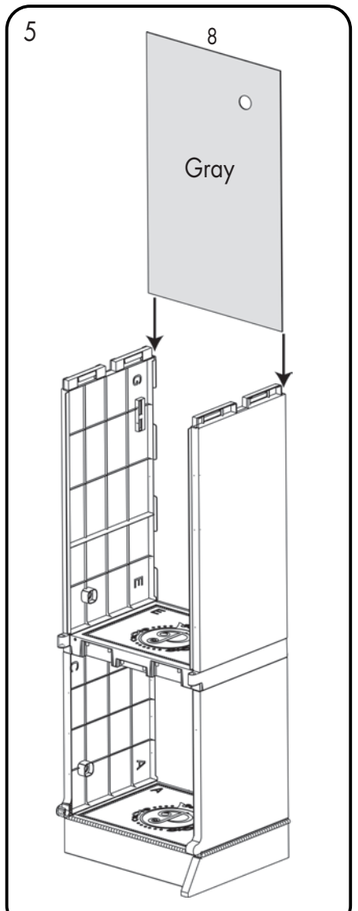


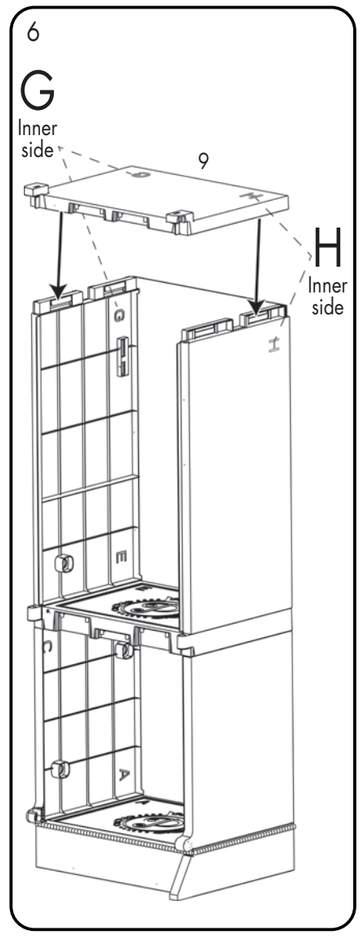


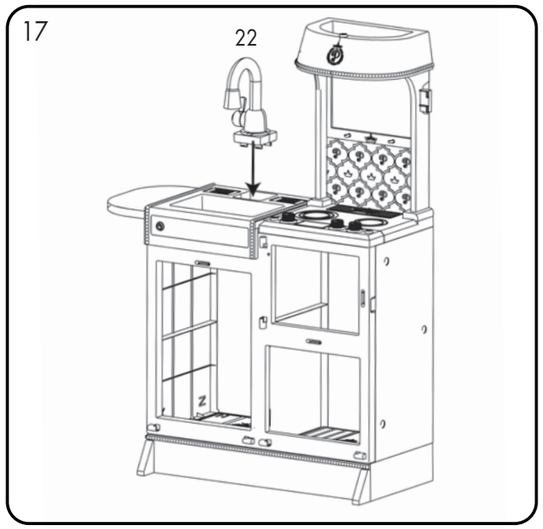

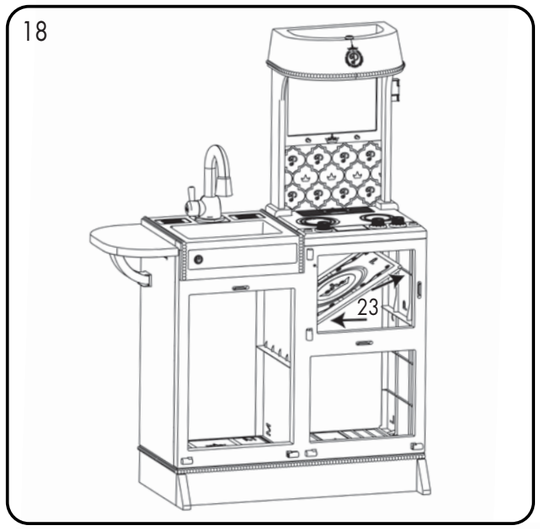


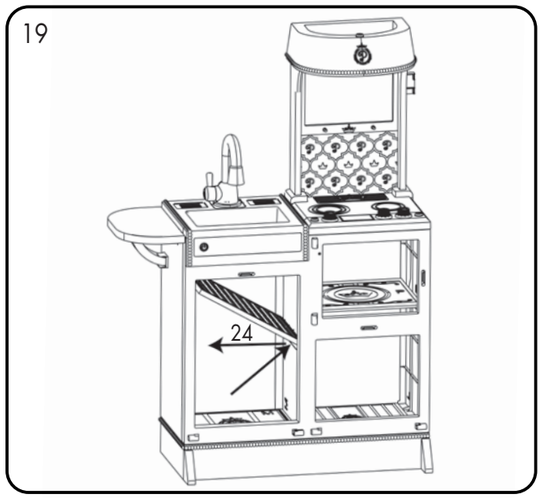

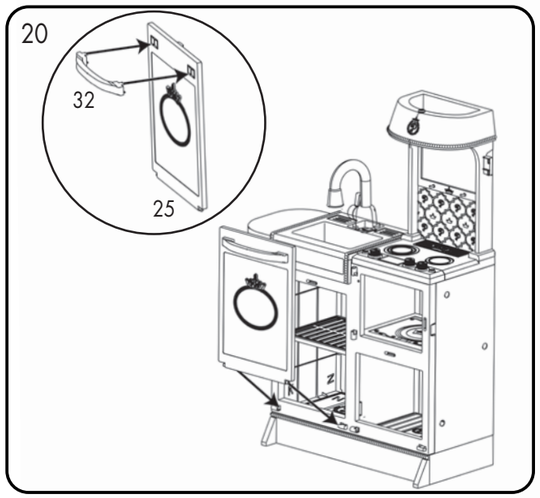


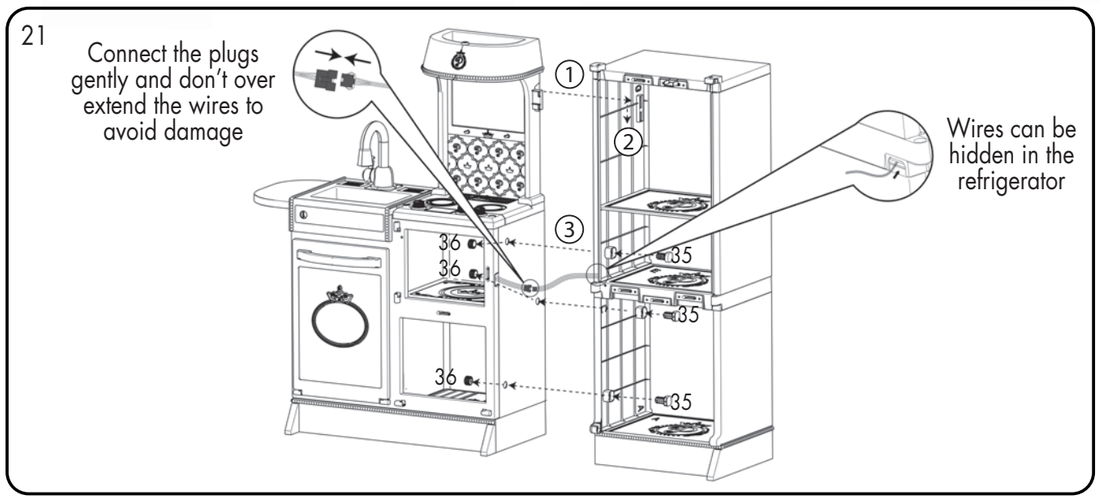


7

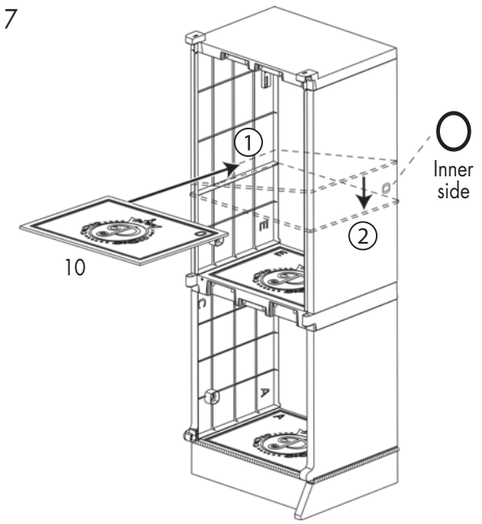


8

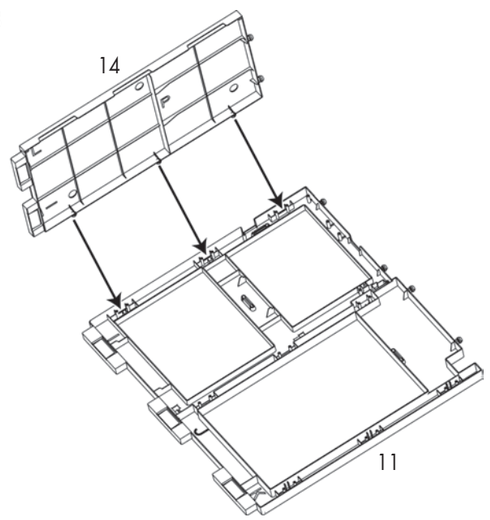


9

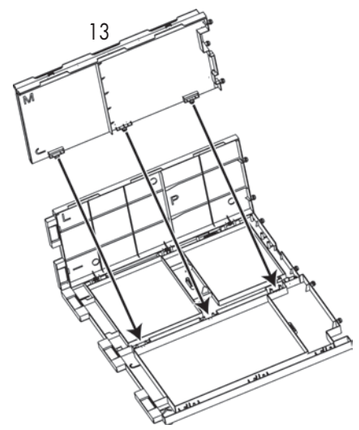


10

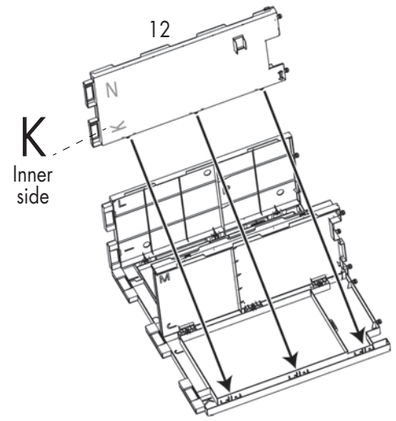


11

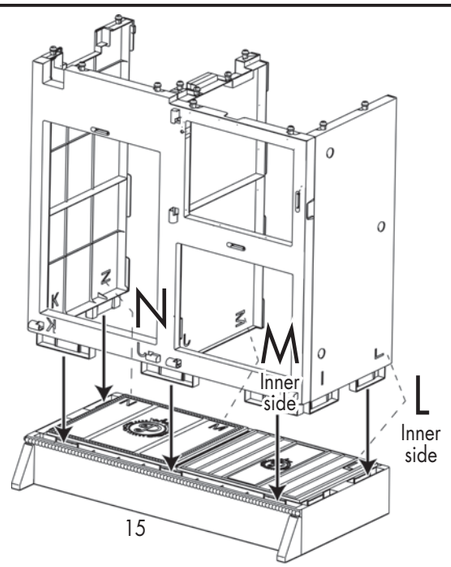


12

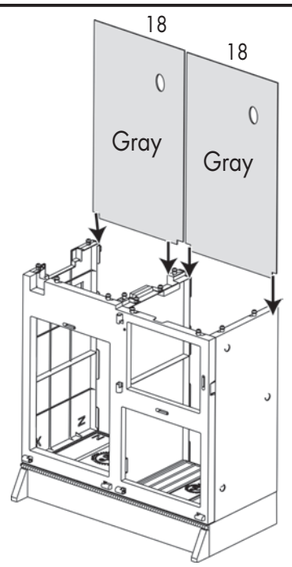


13

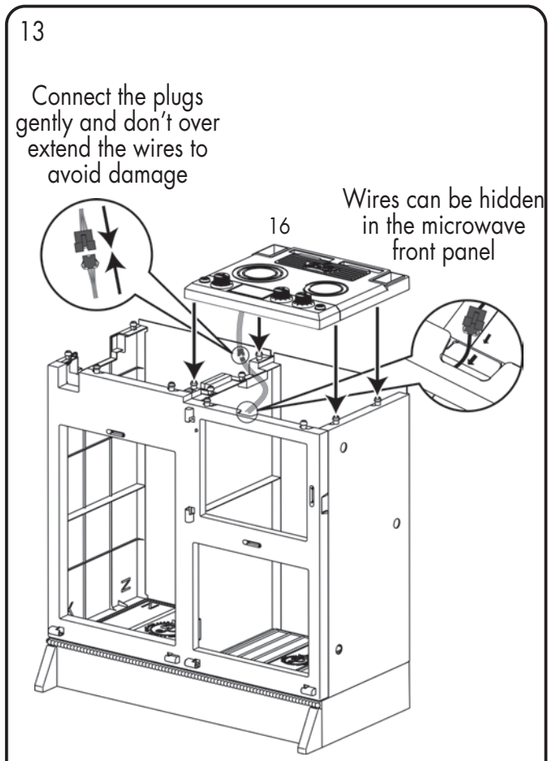

14

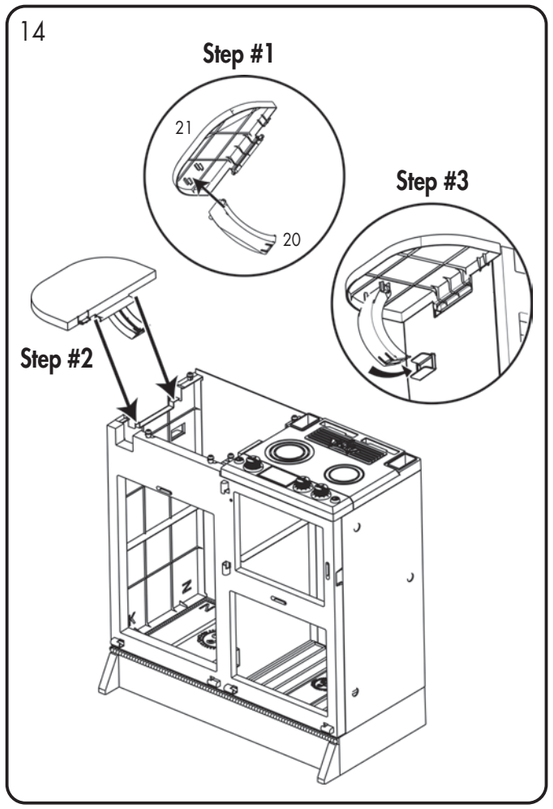

15

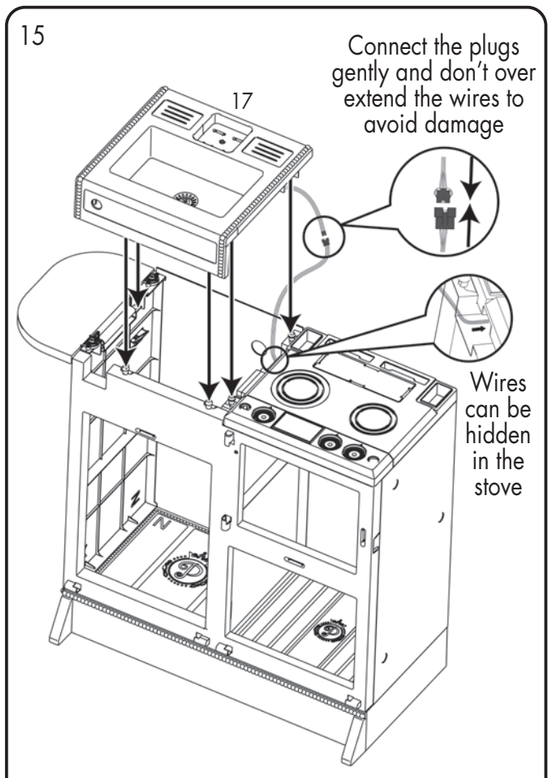

16

