SNUGPLAY

INTERACTIVE MUSIC PLUSH TOYS




Fun Play Modes & Quick Operation Guide

INSTALLATION STEPS


01

Open the zipper.

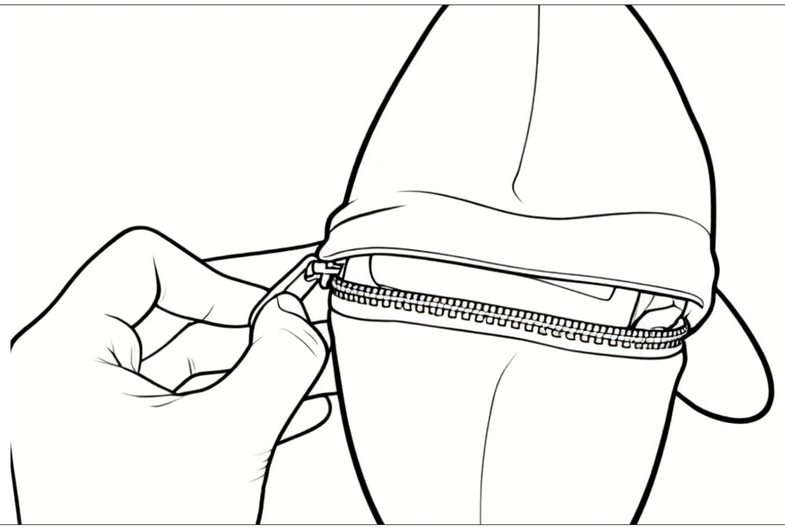

02


Use a screwdriver to remove the battery compartment cover.

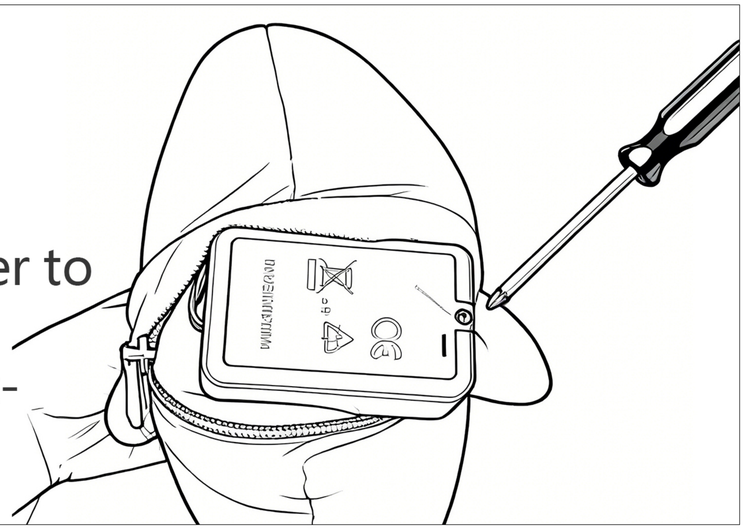

03

Insert the batteries.

(2*1.5V AA batteries)

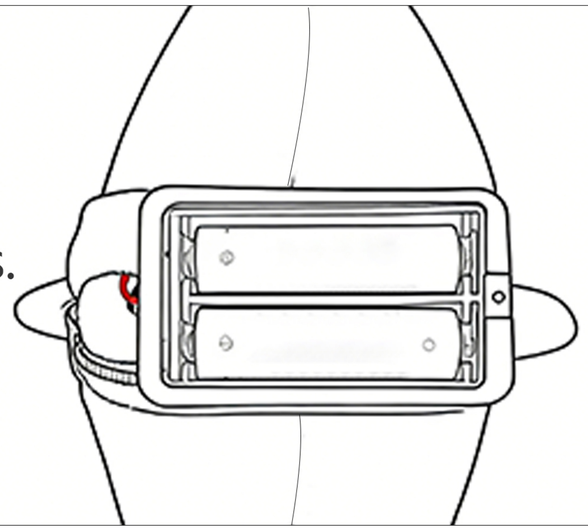


04

Tighten the screw securely.




05

Turn on the power switch.

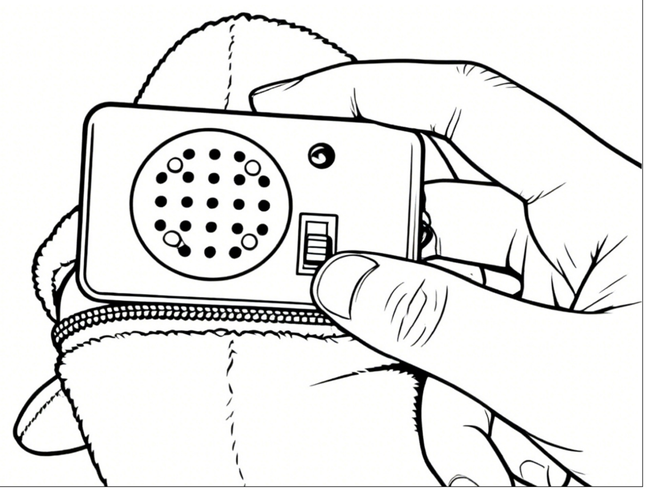


06

Close the zipper.
Installation is complete.

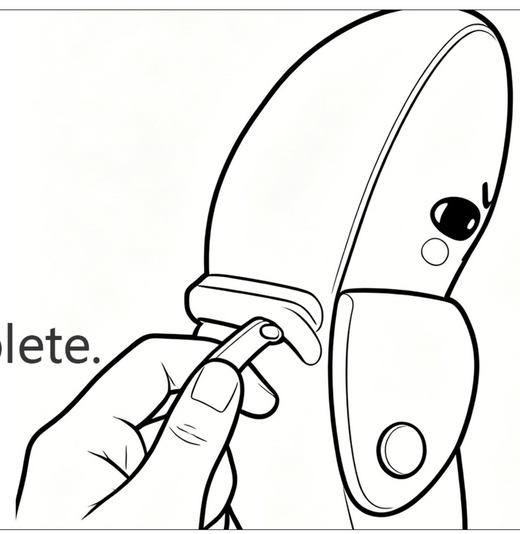

SENSOR DESCRIPTION

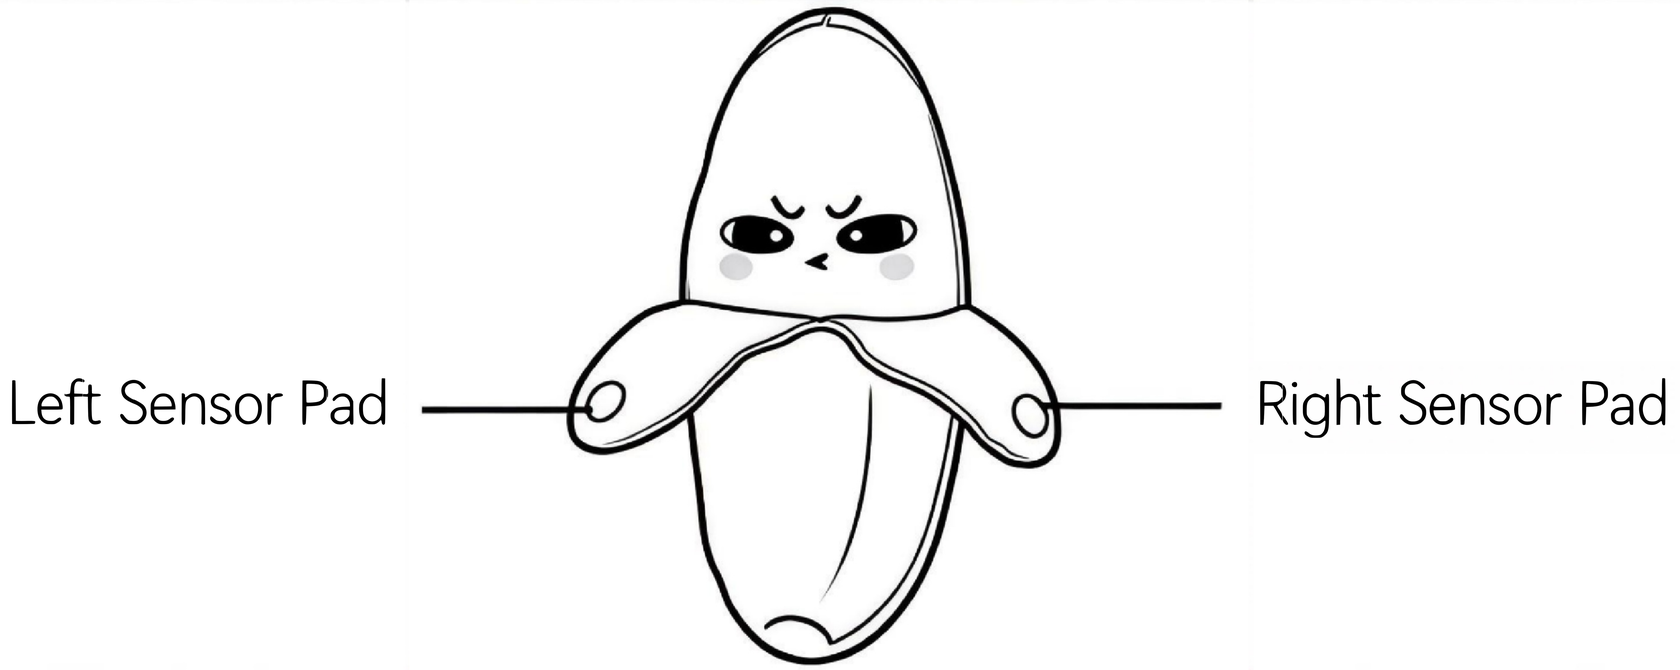

INSTRUCTIONS FOR USE

1 **Song Switching:** After powering on the device, gently tap the back of the plush toy to switch songs.

2 **Default Rhythm Mode:** After the device is powered on, when both users press and hold the sensor pads simultaneously, the device wil enter the rhythm playback mode of the first song by default.

3 **Pause Function:** To pause the musicuse, both hands to press and hold the two sensor buttons simultaneously.


! 4 **Important Note for Multi-Player Mode:**

- For multi-player use, every person participating in the game must wear shoes and stand on the floor during operation.
- If users are barefoot on conductive surfaces such as tile floors, the interactive effect shown in the advertisement may not be achieved.

THREE PLAY MODES

IMPORTANT NOTE FOR MULTI-PLAYER MODE

- For multi-player use, every person participating in the game must wear shoes and stand on the floor during operation.
- If users are barefoot on conductive surfaces such as tile floors, the interactive effect shown in the advertisement may not be achieved.

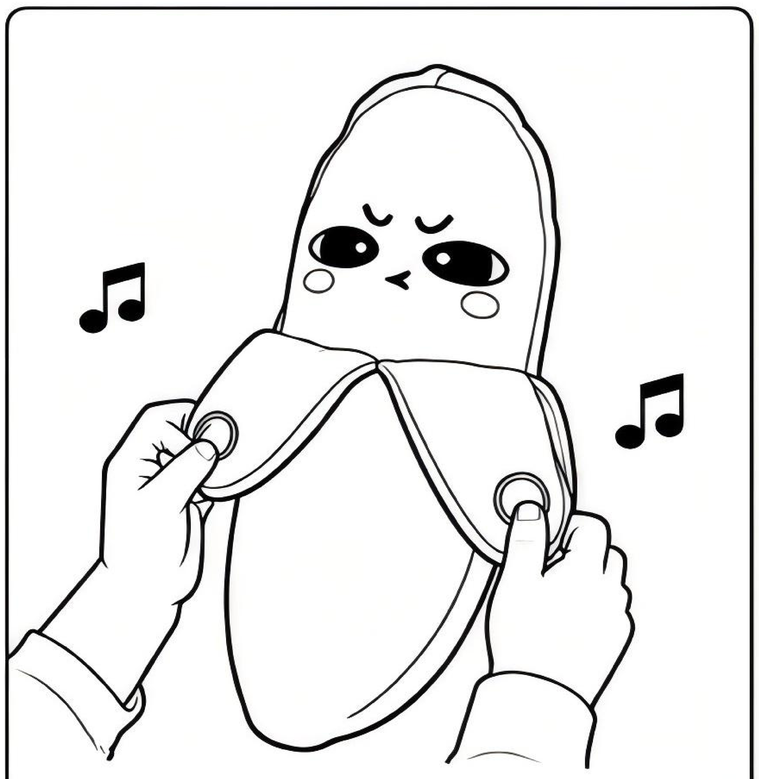

Single-Player Mode

Touch both sensor pads with your hands to produce sounds based on your rhythm.



Two-Player Mode

In Two-Player Mode, each player presses and holds one sensor pad while using the other hand to touch the other player's skin to produce sounds.



Multi-Player Mode

In Multi-Player Mode, players can produce sounds by touching each other's skin.

TROUBLESHOOTING GUIDE – NO SOUND OR MULTIPLAYER ISSUE

If the product does not work as expected, please follow the steps below:

❶ Basic Sound Function Check:

- Install the batteries correctly and make sure the power switch is turned on. Gently tap the toy to check whether it plays music.
- If the toy plays music normally, the basic sound function is working properly.
- If there is still no sound, please record a short video clearly showing the battery installation, the power switch, and the no-sound issue.
- Contact our customer service team through the store and send the video directly to them. After verifying the issue, we will provide an appropriate replacement, refund, or compensation solution.

❷ Multiplayer Function Check:

- If the toy can play music normally but the multiplayer function does not work, make sure both participants are wearing shoes and standing on the floor. Then have both participants test the multiplayer interaction together.

❗ **Note:** Playing barefoot on conductive surfaces, such as tile floors, may cause the multiplayer function to fail.

❸ Skin Contact Adjustment:

- If the multiplayer function still does not work, apply a small amount of hand lotion and test again.

❗ **Note:** Dry weather may reduce the conductivity of the human body and prevent the circuit from closing properly. This issue is especially common during winter.

CUSTOMER SUPPORT

If the product still does not function properly after completing the troubleshooting steps above, please contact our customer service team through the store and send us a short video clearly showing the issue. After confirming the problem, we will provide an appropriate replacement, refund, or compensation solution. We sincerely apologize for any inconvenience and truly appreciate your understanding and support.

SnugPlay






PLEASE
RECYCLE

- Requires 2 × AA batteries, not included.
- Battery installation by adults only.
- Insert batteries with correct polarity (+/-).
- Remove batteries when not in use for a long time.
- Do not wash. Wipe surface stains with a damp cloth.