
POPCHOSE

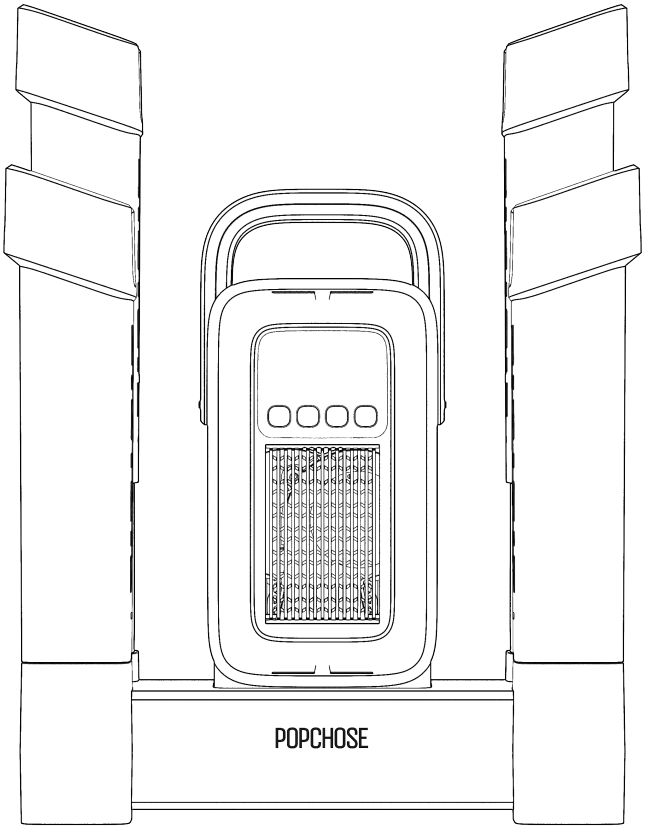

HEAVY-DUTY BOOT DRYER USER MANUAL

INSPECT UNIT BEFORE USE

READ AND SAVE THESE INSTRUCTIONS

TABLE OF CONTENTS

COMPONENTS • • • • • • • • 01

SAFETY • • • • • • • • • • • 02

OPERATION • • • • • • • • • 03

MAINTENANCE • • • • • • • 05

HELPFUL TIPS • • • • • • • • • 05

TROUBLESHOOTING • • • • • • 06

SPECIFICATIONS • • • • • • • • 06

COMPONENTS

Fig.1 • FRONT VIEW


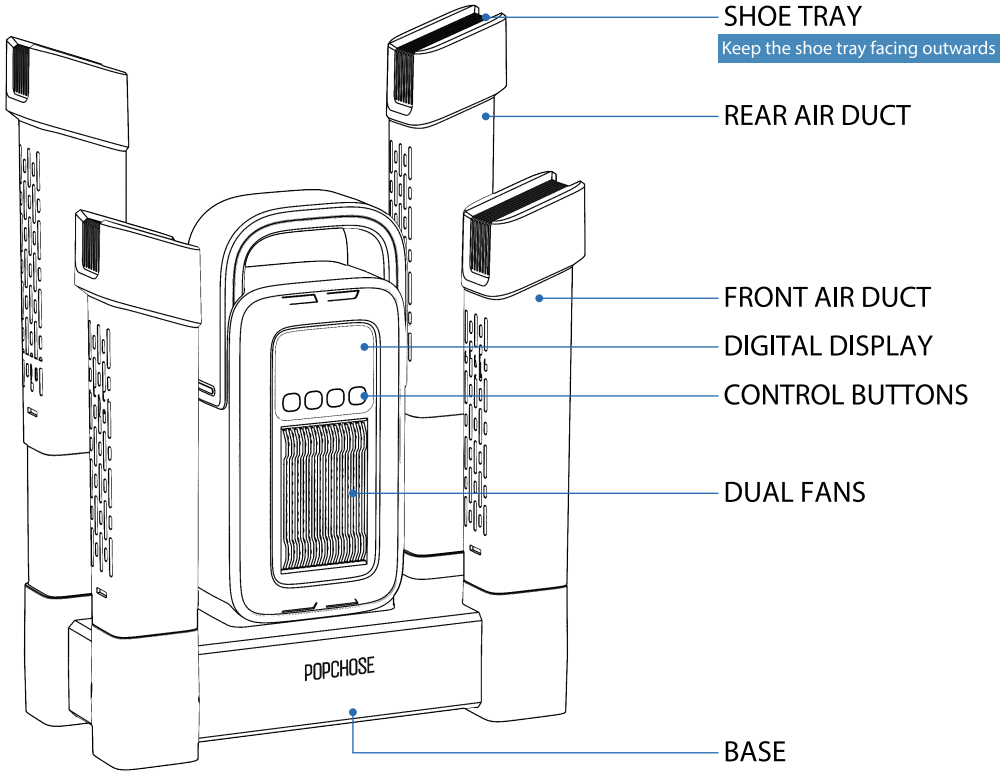


Fig. 2 • **BACK VIEW**

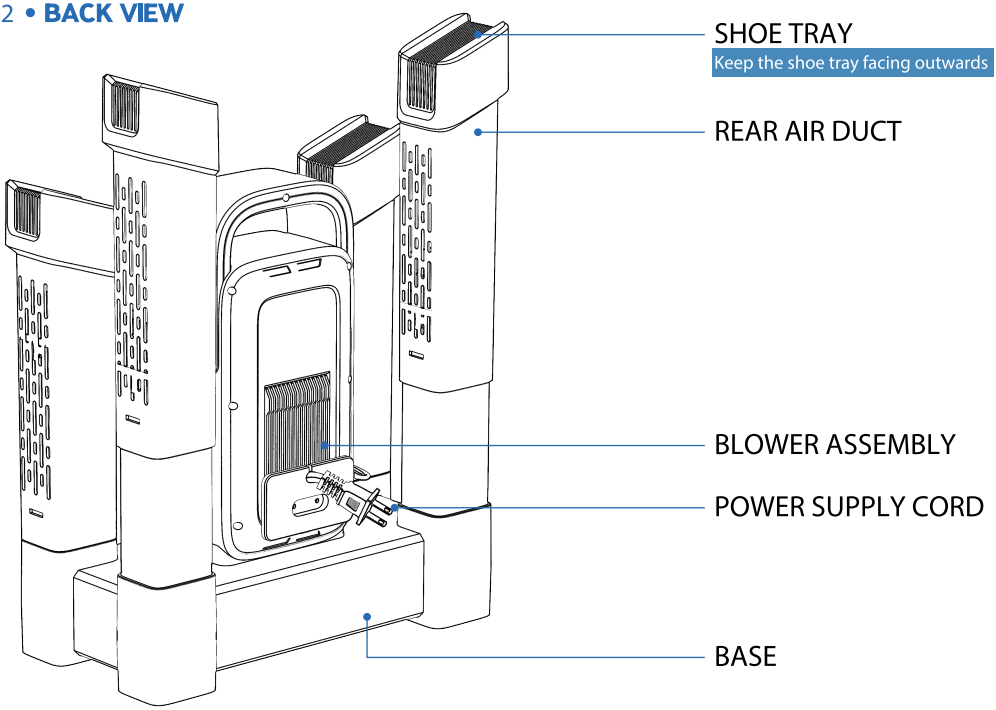

SAFETY

PLEASE READ CAREFULLY BEFORE USE & SAVE THESE INSTRUCTIONS

WARNINGS

1. ONLY FOR USE IN A WELL VENTILATED AREA.
2. DO NOT use on any carpeted surface.
3. Use this boot dryer only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or personal injury.
4. DO NOT immerse the dryer in water. Never clean this unit while it's plugged in. To disconnect, turn controls to the OFF position, then unplug it from the outlet.
5. DO NOT allow the inside of the dryer to become wet during operation or in storage. Always store in a dry area free from potential moisture.
6. DO NOT use if the power supply cord is damaged. If damaged, it must be replaced by the manufacturer, a certified service agent, or a similarly qualified person to avoid hazards and electrocution.

IF YOU HAVE ANY QUESTIONS OR CONCERNS, PLEASE EMAIL US AT

support@popchose.net

BASIC SAFETY PRECAUTIONS

SHOULD ALWAYS BE OBSERVED, INCLUDING THE FOLLOWING:

1. Thoroughly inspect the unit in its entirety for any cracks, chips, or damage that could cause the unit to malfunction. DO NOT use if damage is found.
2. Only a professional or authorized repairman should repair this appliance.
3. Keep the boot dryer and all of its packaging away from children and infants.
4. When touching the unit ensure your hands are dry to prevent electric shock.
5. Connect only the electric plug to a secure wall socket.
6. The unit is equipped with a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, plug into a secure wall socket only as intended. If the plug does not fit into the outlet, flip the plug 180 degrees and try again.
7. DO NOT block air intake in any manner.
8. Clean only as our maintenance. DO NOT clean with any other cleaning agents.
9. DO NOT overload with garments.
10. DO NOT use outdoors.
11. Do NOT operate in water.
12. DO NOT use or add any attachments to the unit that do not come with the unit.


OPERATING ENVIRONMENT

1. Place the unit on a firm, flat and dry surface, never carpeted.
2. DO NOT use this appliance in any kind of flammable environment.
3. Keep unit away from any heat source, i.e. heaters, furnaces, and avoid direct sunlight.
4. Industrial or household use only.


OPERATION

1. When you received this shoe dryer, the Drying Tubes are all facing inwards.


   Kind Tips: This is for packaging and transportation safety. Thank you for your understanding in advance!

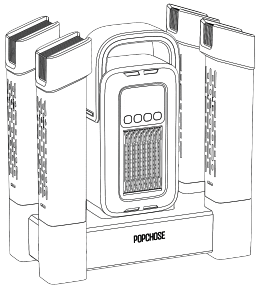


2 You need to pull out the Drying Tubes at first, then adjust the direction so that the shoe tray facing outwards.

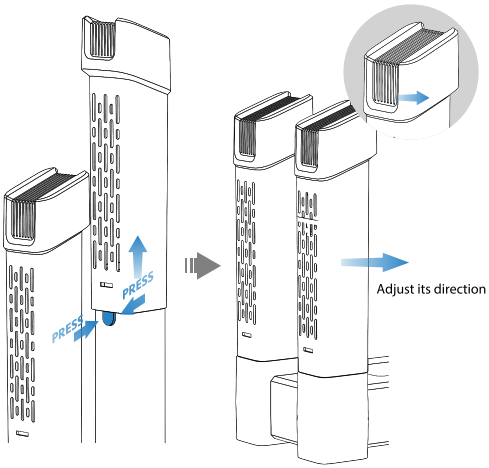

4 Plug the boot dryer into any standard 120 Volt 60 Hz electrical outlet.

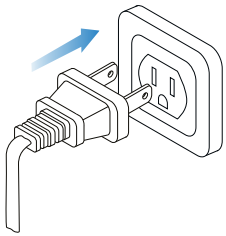


6 Slide boots or helmet upside down onto the back drying tubes. Be careful not to restrict airflow at the bottom or block airflow into the blower assembly.

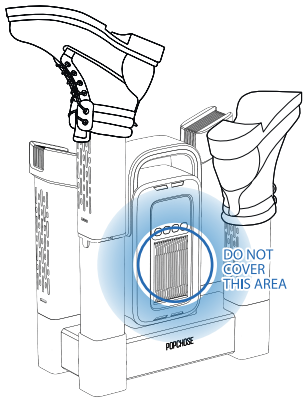


3 Keep the shoe tray facing outwards !

TIPS: Because the Dry Ducts air upwards, the toes of the boots face outwards to help water drip down. There is enough space for large-sized shoes, and you can dry your boots quickly.

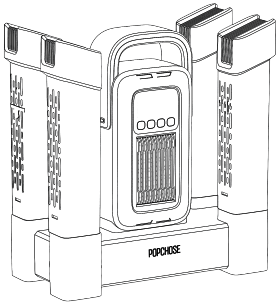


5 Adjust the height of the drying tubes:

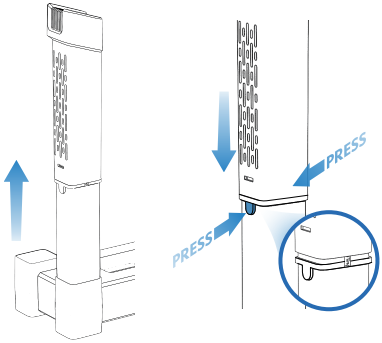


TO EXTEND
Pull the drying tubes up to adjust the height, accommodates boots up to 16 tall.

TO COMPACT
Press the two side locking buttons on the drying tube simultaneously and slide the drying tube down.


7 Press the power switch to turn on the boot dryer.

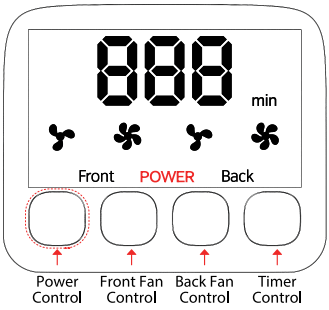

8 Press "Front Fan Control" button once for low speed, Front and light up at the same time; Press "Front Fan Control" button again for high speed, Front and light up at the same time; third time to pause boot dryer working, keep the power red light on. "Back Fan Control" also adjusts the speed in the same way.

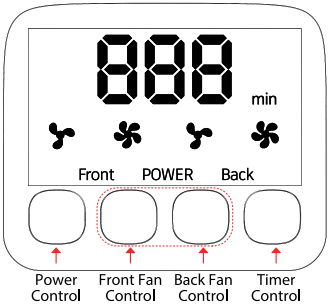

9 Press the timer button to set the working time: options include 30/60/120/180 minutes. The digital display will show the remaining time, and you can press the timer button to extend drying time at any time .

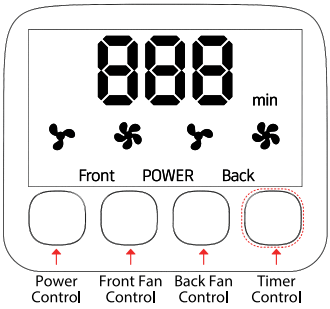

HELPFUL TIP:
Open all windows or doors to enhance air circulation whenever using this function.

OPTIONAL:
You can place gloves or a different pair of shoes on the front smaller drying tubes. The front drying tubes are specifically designed for drying tennis shoes, socks, gloves, hats, kids'shoes, or any other small-sized garment.

MAINTENANCE

1 Turn off and unplug the unit from the wall before cleaning. Use mild soap on a damp cloth to clean the external surface of the boot dryer and its components. Do not let any liquid get inside of the motor located on the main body of the unit.

2 **TO PROPERLY STORE THE UNIT:**

A. Wrap the power cord around the designated power cord system on the back of the unit.
B. Slide all drying tubes down to their original position.
C. Let the unit dry for 24 hours before storing. We suggest storing in a cool ventilated area away from small children and infants.

HELPFUL TIPS

1 The boot dryer only heats to a safe and gentle temperature to prevent damage to garments. It is not a hairdryer and is not designed to emit a powerful current of air through garments.

2 DO NOT cover air circulation whenever placing gloves, mittens, children's boots or shoes onto the drying tubes or drying nozzles. Always use attachments as instructed.

3 To prevent bacteria and fungus growth in your footwear, the primary cause of odor, make sure to dry after each use.

4 Smaller footwear and garments will take less time to dry.

5 Your energy-efficient boot dryer heats to a gentle temperature of around heats to a gentle temperature of around 140°F/60°C based on the room temperature and uses Forced Air technology to quickly dry wet garments, but it does not generate a forceful air stream that might damage or deform garments.

TROUBLESHOOTING

PROBLEM	PRIMARY CAUSE	SOLUTION
Unit doesn't sound like it is on.	Unit is on but may not seem like it.	Place the back of your hand near the drying tubes to feel the gentle warm air or place footwear and garments onto the drying tubes for 30-minutes then touch the inside of the garment to feel the gentle heat.
Back drying tubes are shaking.	The back tubes are in the extended position.	This is normal, the drying tubes are strong and durable and may shake slightly when extended.
Unit has an abnormal sound or burning odor.	You may have received a defective unit.	Shut it down immediately and disconnect the power plug. Any repairs must be done by a professional repairman.

SPECIFICATIONS

Model No.	SG-SD101
Voltage	110-120V 60Hz
Power	800w
Fan Speed	2250/4500RPM
Outlet Temp	60°C
Max Drying Time	180 Minutes

WARRANTY

We're pleased to offer an extended **1-Year Warranty** to our valued premium customers.

To register and activate your warranty, simply email us at **athankscard@126.com** — we're happy to help !

Email: athankscard@126.com

TO LEARN MORE ABOUT OUR PRODUCTS WE OFFER

www.popchose.net