



The Emerson logo is a trademark and a service mark of Emerson Electric Co.  
InSinkErator may make improvements and/or changes in the specifications at any time, in its sole discretion, without notice or obligation and further reserves the right to change or discontinue models.

© 2013 InSinkErator, a business unit of Emerson Electric Co. All Rights Reserved. Pat. <http://www.isepat.com>

El logotipo Emerson es una marca registrada y una marca de servicio de Emerson Electric Co.

InSinkErator puede realizar mejoras y/o modificaciones en las especificaciones en cualquier momento, y bajo su exclusivo criterio, sin previo aviso u obligación; además, se reserva el derecho de cambiar o suspender los modelos.

1.800.558.5700

[www.insinkerator.com](http://www.insinkerator.com)

© 2013 InSinkErator, una unidad comercial de Emerson Electric Co. Todos los derechos reservados.

Le logo Emerson est une marque de commerce et de service d'Emerson Electric Co. InSinkErator se réserve le droit, à son entière discrétion, d'apporter en tout temps des améliorations ou des modifications aux spécifications, et ce, sans préavis ou obligation de sa part, ou de modifier ou de supprimer des modèles.



44890 REV A

© 2013 InSinkErator, une unité commerciale d'Emerson Electric Co. Tous droits réservés.

insinkerator®  
INVOLVE™  
SERIES  
Instant Hot Water Dispenser

invite™  
SERIES  
INVITE CONTOUR™  
INVITE CLASSIC™  
INVITE HOT100™  
INVITE HOT150™



INVOLVE VIEW™



INVOLVE WAVE™



INVITE CONTOUR™



INVITE CLASSIC™



INVITE HOT100™



INVITE HOT150™



**EMERSON**  
Commercial & Residential Solutions



# Owner’s Manual

Dispensador de agua caliente instantánea

## Manual del usuario

Distributeur d’eau très chaude instantanée

## Manuel du propriétaire

### Installation, Care & Use

Instalación, cuidado y uso

Installation, soin et utilisation

To see a tutorial of this installation:

Para ver un tutorial de esta instalación ingrese a Pour voir un tutoriel de cette installation

<http://goo.gl/AZOHu>

We are delighted that you have chosen the InSinkErator® Instant Hot Water Dispenser to be a part of your home. This unique appliance will save you time and effort in the kitchen, and you’ll enjoy discovering new uses for it each day. That’s exactly why millions of people are now using an InSinkErator Instant Hot Water Dispenser.

We are confident that by following our step-by-step instructions, you’ll soon be enjoying the convenience of instant hot water.

### WHAT YOU SHOULD KNOW BEFORE YOU BEGIN

- ☐ For your satisfaction and safety, read all instructions, cautions and warnings before installing or using this instant hot water dispenser.
- ☐ This particular unit is not intended for commercial use.
- ☐ Make sure that all electrical wiring and connections conform to local codes.
- ☐ A standard 115-volt grounded electrical outlet is required under the sink for the dispenser’s electrical power.
- ☐ The wall outlet powering your dispenser must have power supplied to it continuously.
- ☐ This outlet must be fused and should not be controlled by the same wall switch that operates the disposer, unless you have a SinkTop Switch™ from InSinkErator®.

Faucet must be installed such that the outlet opening is greater than 1" above the overflow rim of the sink. It is recommended that a dedicated control valve be installed on the cold water line supplying water to this system.

If you suspect elevated levels of chlorine in your water, or your water has a rusty appearance before the installation of this unit, it is recommended to use our water filtration system.

This product contains stainless steel. The manufacturer cannot guarantee against rusty water because of the number of factors that are involved beyond the manufacturer’s control. However, the sudden appearance of rusty water discharged from the hot water dispenser may indicate the need for service or replacement of this product.

- ☐ The use of a water filter should NOT result in the water pressure to drop below 30 psi (207kPa).
  - ☐ If it does, this will prevent your unit from operating properly.
- Moving parts inside the tank causing a rattling noise is normal.

### WHAT YOU NEED TO GET STARTED

#### Equipment Required:

- |                           |                          |
|---------------------------|--------------------------|
| Drill                     | n Phillips and flat head |
| n T-fitting               | Pencil                   |
| n Dedicated control valve | n Tape Measure           |
| Adjustable wrench         | Level                    |

#### Equipment You May Need:

**AnswerLine®**  
1-800-558-5700

- ☐ Anchors for drywall Basin
- ☐ wrench
- ☐ Hole sawHole punch
- ☐

If you intend to use the sprayer hole in your sink for your dispenser, you may need a basin wrench and a 1/8" plug or a 1/4" cap (**not supplied**) for the faucet spray hose line. **See Step 1-B.**


If you need to cut a mounting hole in your stainless steel sink, you may need a 1-1/4" – 1-1/2" hole saw made for cutting stainless steel or a hole punch. Consult a professional if you are drilling into a surface other than stainless steel.



To see a tutorial of this installation:  
<http://goo.gl/AZOHu>

2


Identify the model of your instant hot water dispenser and record it here: \_\_\_\_\_

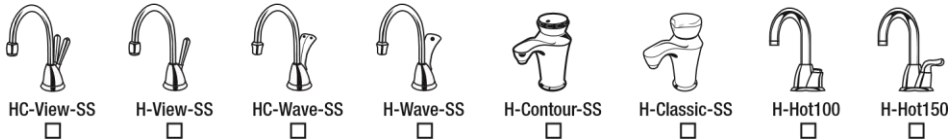

HOW TO USE THIS INSTRUCTION MANUAL

These instructions are separated into main sections, indicated by numbers, and subsections, indicated by capital letters. The manual is setup this way to allow you to take a break at any point after completing a section or subsection without affecting the installation process.

What you'll see in the instruc

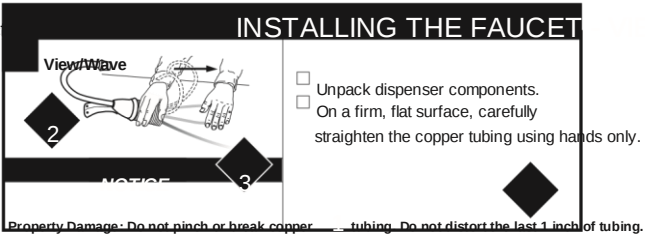

- 1

Provides a step-by-step narrative describing the installation step, with check boxes that can be marked as you progress through the installation.
- 2

Contains simple illustrations that provide visual instruction to support the narrative.
- 3


Important safety messages that will require your attention during the step.

|                  |                                                                                                          |
|------------------|----------------------------------------------------------------------------------------------------------|
| <b>⚠ WARNING</b> | Warning indicates a hazardous situation, which, if not avoided, could result in death or serious injury. |
|------------------|----------------------------------------------------------------------------------------------------------|

|                  |                                                                                                          |
|------------------|----------------------------------------------------------------------------------------------------------|
| <b>⚠ CAUTION</b> | Caution indicates a hazardous situation which, if not avoided, could result in minor or moderate injury. |
|------------------|----------------------------------------------------------------------------------------------------------|

|               |                                                                     |
|---------------|---------------------------------------------------------------------|
| <b>NOTICE</b> | Notice is used to address practices not related to personal safety. |
|---------------|---------------------------------------------------------------------|

OVERVIEW OF A COMPLETED SETUP


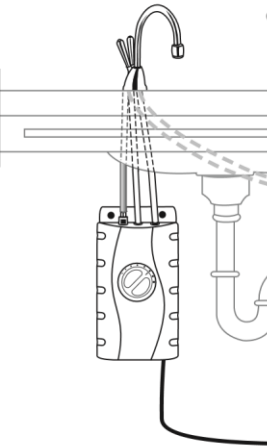


PREPARATION

a





Required minimum  
Maximum counter from

| center of hole<br>to wall | thickness (depth) |                                                                                                                                     |
|---------------------------|-------------------|-------------------------------------------------------------------------------------------------------------------------------------|
| C-View-SS .....           | 2-5/8"            | <input type="checkbox"/> Identify locations for the dispenser faucet, tank and filter (if applicable).                              |
| .....3"                   |                   | <input type="checkbox"/> Check to make sure there is proper clearance (see chart at left) for dispenser handles to be fully opened. |
| View-SS .....             | 2-5/8"            | <input type="checkbox"/> Check to make sure counter is not too thick (see chart at left).                                           |
| .....3"                   |                   | <input type="checkbox"/> Make sure there is a grounded electrical outlet under the sink.                                            |
| C-Wave-SS .....           | 2-5/8"            |                                                                                                                                     |
| .....3"                   |                   |                                                                                                                                     |
| H-Wave-SS .....           | 3/8"              |                                                                                                                                     |
| .....3"                   |                   |                                                                                                                                     |
| H-Contour-SS .....        | 2"                |                                                                                                                                     |
| .....3"                   |                   |                                                                                                                                     |
| H-Classic-SS .....        | 2"                |                                                                                                                                     |
| .....3"                   |                   |                                                                                                                                     |
| mt100 .....               | 2"                |                                                                                                                                     |
| .....2"                   |                   |                                                                                                                                     |
| mt150 .....               | 2"                |                                                                                                                                     |
| .....2"                   |                   |                                                                                                                                     |
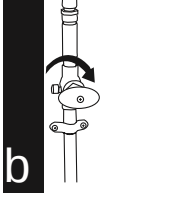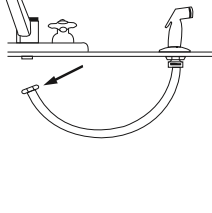
|                                                                                                                        |                                                                                                                          |
|------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------|
|                                     | <input type="checkbox"/> Turn off water supply.                                                                          |
|                                                                                                                        | <input type="checkbox"/> If using the sink sprayer hose hole, remove nut that connects sprayer hose at bottom of faucet. |
|                                     | <input type="checkbox"/> Using adjustable wrench, remove nut connecting sprayer washer flange in sprayer hole.           |
|                                                                                                                        | <input type="checkbox"/> Plug hose opening with either a 1/8" plug or a 1/4" cap ( <b>not supplied</b> ).                |
| <p><b>If you have to drill through sink or countertop, you may need to rent or purchase the appropriate tools.</b></p> |                                                                                                                          |

|                                                                                                     |                                                                                                                                                                                                                                                                                                                                                                                                                                |
|-----------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <div>C</div> <div>Required Hole Size</div> <div>1-1/4" – 1-1/2"</div> <div>Dependent on model</div> | <div>What if you don't have a sprayer hole or don't want to use it?</div> <div><input type="checkbox"/> Many homeowners replace the soap dispenser in their sink with an instant hot water dispenser.</div> <div><input type="checkbox"/> If drilling a hole into a stainless steel sink or counter top, you can cut a mounting hole for the dispenser with a hole saw for stainless steel, or you can use a hole punch.</div> |
|                                                                                                     | <div>Consult a professional before drilling into a surface other than stainless steel.</div>                                                                                                                                                                                                                                                                                                                                   |

# START HERE 1

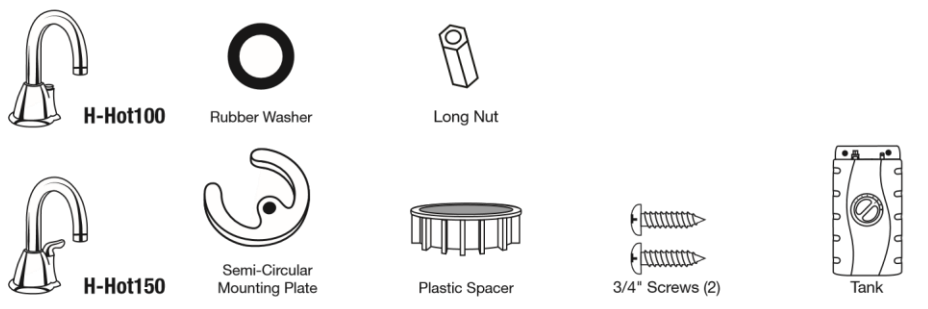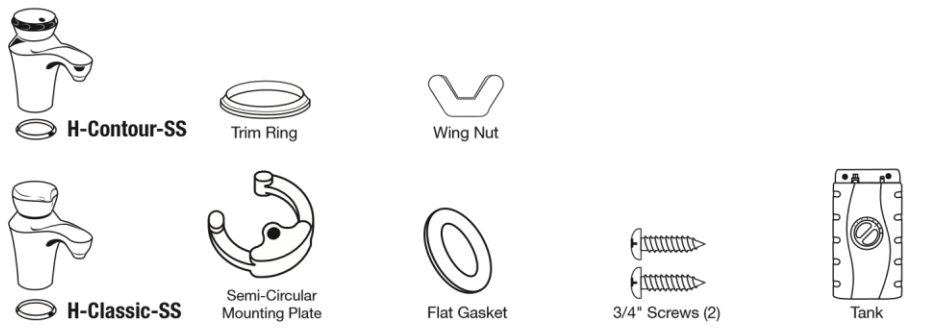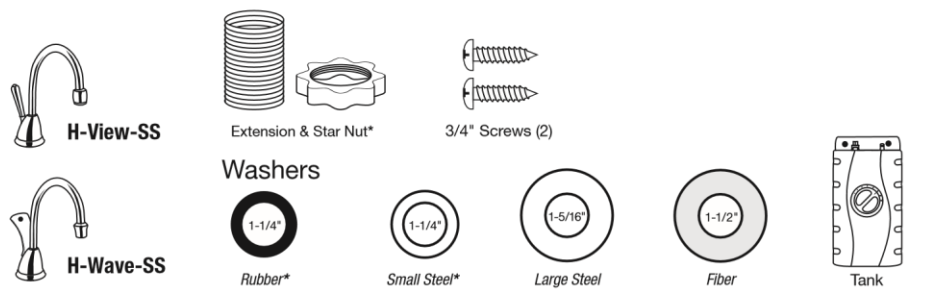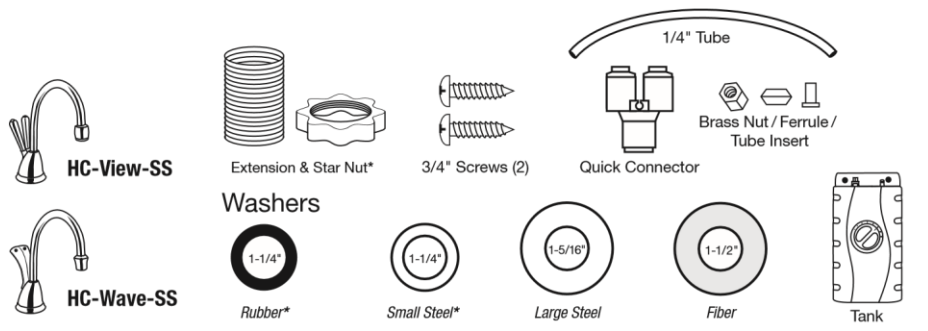

## COMPONENTS IN THIS PACKAGE

The wall outlet for your dispenser must have power supplied to it continuously and must be fused. It should not be controlled by the same wall switch that operates your disposer, unless using an InSinkErator SinkTop Switch™.


To see a tutorial of this installation: <http://goo.gl/AZOHu>

4 \*component parts pre-installed on dispenser

5

## INSTALLING THE FAUCET - View/Wave

a

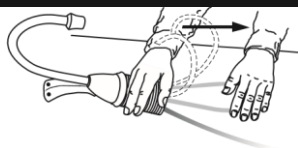

### View/Wave

- ☐ Unpack dispenser components.
- ☐ On a firm, flat surface, carefully straighten the copper tubing using hands only.


### NOTICE

**Property Damage: Do not pinch or break copper tubing. Do not distort the last 1 inch of tubing.**

2

## INSTALLING THE FAUCET - Contour/Classic

a

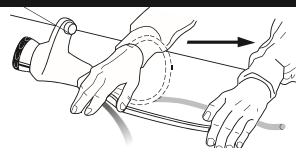


### Contour/Classic

- ☐ Unpack dispenser components.
- ☐ On a firm, flat surface, carefully straighten the copper tubing using hands only.


### NOTICE

**Property Damage: Do not pinch or break copper tubing. Do not distort the last 1 inch of tubing.**

C

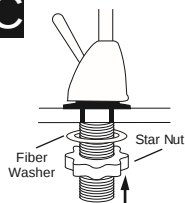

Hot & Cool models only



### View/Wave

- ☐ From under sink, slide 1-1/2" fiber washer over threaded extension. Thread star nut onto extension until snug.

### Hot & Cool models only

- ☐ Attach the quick connector to the ends of the copper tubes running from the dispenser.
- ☐ Install a **white** 1/4" tube into other end of quick connector.

**An assistant may be needed to hold the dispenser head in place while securing the dispenser.**

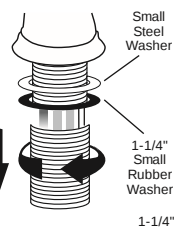


Figure 1

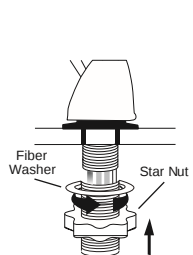


Figure 2



### Installing into hole smaller than 1-1/2"

- ☐ Unscrew and remove threaded extension from valve body. **Do not discard, as you will need this later** (See Figure 1).
- ☐ Leave small washers in place.
- ☐ Feed tubes down through the hole in the sink/counter until the base is at rest. Set faucet at desired angle.


2

If sink/counter thickness exceeds 3/4" a hole diameter of 1-1/2" is required.

From under sink, slide 1-1/2" fiber washer over faucet base. Reinstall threaded extension onto the base until snug. Thread star nut onto extension until snug (See Figure 2).

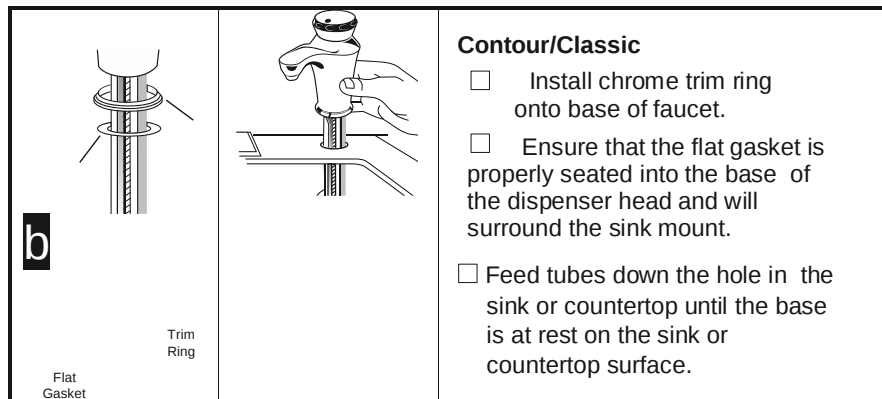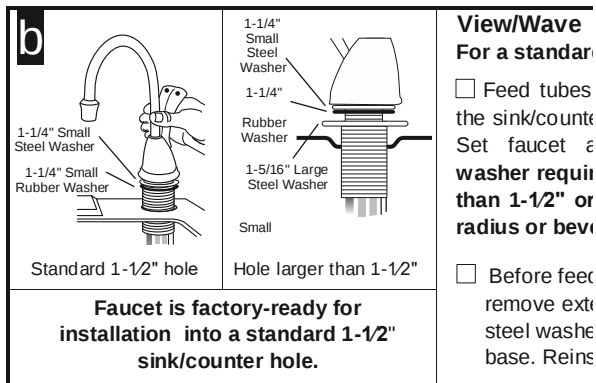

1/4" tube into other end of

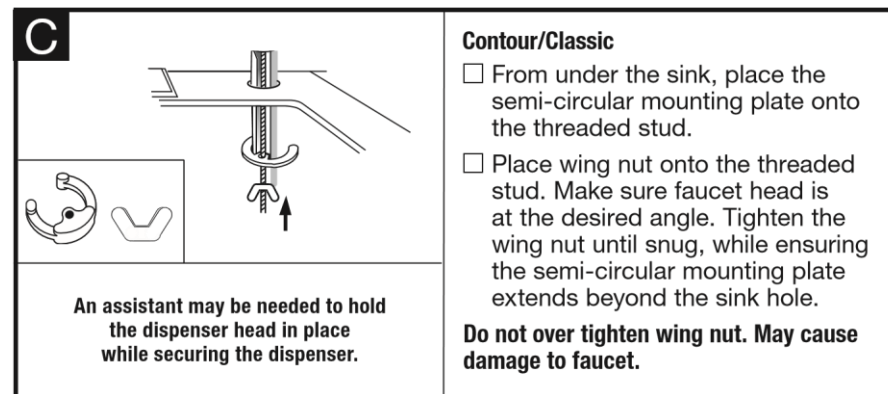

To see a tutorial of this installation:  
<http://goo.gl/AZOHu>


Make sure to use rubber gasket to ensure proper seal.

67

2

## INSTALLING THE FAUCET - Hot100/Hot150 a


Hot100/Hot150

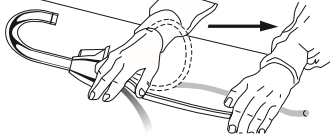

- ☐ Unpack dispenser components.
- ☐ On a firm, flat surface, carefully straighten the copper tubing using hands only.

### NOTICE


**Property Damage:** Do not pinch or break copper tubing. Do not distort the last 1 inch of tubing.

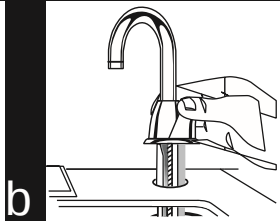

Hot100/Hot150

- ☐ Feed tubes down the hole in the sink or countertop until the base is at rest on the sink or countertop surface.

C

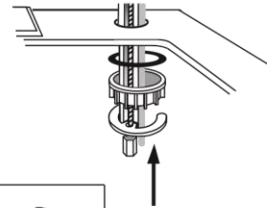

An assistant may be needed to hold the dispenser head in place while securing the dispenser.

Hot100/Hot150

- ☐ From under the sink, place the rubber washer, plastic spacer and semi-circular mounting plate onto the threaded stud.
- ☐ Place long nut onto the threaded stud. Make sure faucet head is at the desired angle. Tighten the long nut until snug, while ensuring the semi-circular mounting plate extends beyond the sink hole.

**Do not over tighten long nut. May cause damage to faucet.**

**For sinks thicker than 1" the plastic spacer is not required**



To see a tutorial of this installation:  
<http://goo.gl/AZOHu>

3

## MOUNTING THE TANK



Select a spot under the sink to mount the tank. Tank must be mounted level. Tank must be mounted vertically within reach of both hands to ensure plumbing and electrical connections.



The tank should be within 16" or less of faucet water lines and within 30" or less of a standard grounded outlet.

While holding tank in place on

**Property Damage:** Tank must be located the spot selected for installation, within 16" of faucet and within 30" or less use a pencil to mark locations for of a standard grounded outlet. DO NOT extend hanging screws. plumbing or electrical lines.

b

Leave 1/4" for hanging tank.

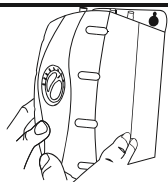

Screws provided are for use in wood studs or cabinets only. Use wall anchors (not supplied) for installation into drywall.

- ☐ Pre-drill 1/8" pilot holes at mark
- ☐ Turn screws into pre-drilled hole leaving 1/4" exposed.
- ☐ Hang the tank on the screws.
- ☐



4


Mount tank vertically in an area that allows clearance on the underside of the tank for drainage, if necessary.

**DO NOT over tighten screws.**

Tighten the screws with only 1/2 turn clockwise.

## CONNECTING FAUCET TO TANK

a

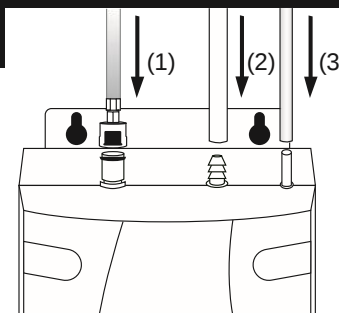

- ☐ Without depressing the gray button, place the snap-connect fitting at the end of the **blue** 1/4" tube onto the left fitting on the tank, pushing until it clicks into place. (1)
- ☐ Slip the flexible **white** 7/16" tube over barbed middle fitting and slide down approximately 1/2". (2)
- ☐ Slip the **clear** 5/16" tube over the far right smooth fitting and slide down approximately 1/2". (3)
- ☐ Visually check for pinched or crimped tubes.

### NOTICE

**Property Damage:** Pinched or blocked water lines may cause damage to the dispenser tank.

Check to make sure tubes are connected properly and are pushed down as far as possible.


Hose clamps are not needed for any of the connections.

To see a tutorial of this installation:

<http://goo.gl/AZOHu>

# FINAL WATER CONNECTION

a

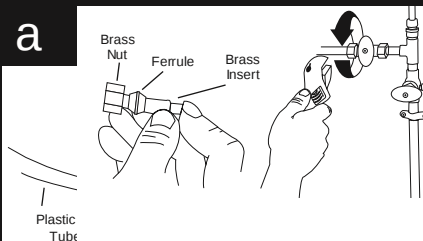

## NOTICE

**Property Damage:** Join remaining tube to cold water supply only.

### HC-View/HC-Wave

- ☐ Install a T-fitting (**not included**) onto the cold water supply line.
- ☐ Install dedicated water control valve with 1/4" compression fitting.
- ☐ At the end of the **white** 1/4" tube from the quick-connector, slide the supplied brass nut and ferrule over the tube and then push in the brass tube insert.
- ☐ Insert the **white** 1/4" tube into the 1/4" compression fitting and tighten.

or connect other type dispensers or valves to the tank. Use only the InSinkErator dispenser faucet supplied. Use only parts provided. Contact an authorized InSinkErator Service agent for repairs or replacement components.


**Fire Hazard:** To minimize possibility of fire, DO NOT store flammable items such as rags, paper or aerosol cans near the tank. DO NOT store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

**Leak Hazard:** Regularly inspect dispenser and plumbing fittings for leaks, which can cause property damage and/or could result in personal injury. **Property Damage:** To avoid water damage, replace any loose or split tubing.

Periodically inspect the unit for any signs of leakage and immediately remove from service any unit suspected of leaking.

*An instant hot water dispenser, like any water heater, has a limited life and will eventually fail. To avoid possible property damage and personal injury, this instant hot water dispenser should be regularly examined for leakage and/or corrosion and replaced when necessary. A drain pan, plumbed to an appropriate drain or outfitted with a leak detector, should be used in those applications where any leakage could cause property damage. To check for corrosion, examine the appearance of the dispensed water in a clear glass once every three (3) months. If there is any discoloration or rusty appearance, unplug and drain unit as described in the Seasonal Storage/Drainage section on page 13 of this manual. If the water discoloration remains after draining and refilling unit, discontinue use and contact an authorized InSinkErator service agent.*

b

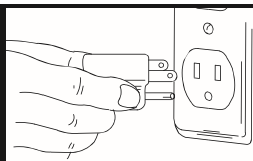

## ⚠ WARNING

- ☐ Check all connections to ensure they are tight and that there are no leaks.
- ☐ Plug in instant hot water tank.

**Water will be cold at first.**  
**Allow 12-15 minutes for water to reach target temperature.**

# IMPORTANT SAFETY INSTRUCTIONS

This appliance must be grounded.

## ⚠ WARNING

**Electric Shock Hazard:** Using an ungrounded or improperly connected appliance can result in serious injury or death from electrical shock.

This instant hot water dispenser is equipped with a cord that has a grounding conductor and a grounding pin. The plug must be connected to an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances. Do not modify the plug provided with the appliance – if it will not fit the outlet, have a proper outlet installed by a qualified electrician. Check with a qualified electrician or serviceman if you are in doubt as to whether the instant hot water dispenser is properly grounded.

**Personal Injury:** This tank is a non-pressurized tank. DO NOT modify this system. DO NOT close vent tube

a

|                                                                               |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|-------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                                               | <h3>H-View/H-Wave/Contour/Classic/Hot100/Hot150</h3> <ul style="list-style-type: none"> <li><input type="checkbox"/> Install a T fitting (<b>not included</b>) onto the cold water supply line.</li> <li><input type="checkbox"/> Install dedicated water control valve with 1/4" compression fitting (<b>not included</b>).</li> <li><input type="checkbox"/> At the end of the <b>copper</b> 1/4" tube, slide the brass nut and ferrule provided with the control valve over the tube. Insert the copper tube into the 1/4" compression fitting and tighten.</li> </ul> |
| <h2>NOTICE</h2>                                                               |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <p><b>Property Damage:</b> Join remaining tube to cold water supply only.</p> |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |

# FILL TANK & THEN CONNECT POWER

a

|  |                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|--|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <ul style="list-style-type: none"> <li><input type="checkbox"/> Turn on the cold water supply.</li> <li><input type="checkbox"/> Depress the dispenser's <b>HOT</b> handle or button and hold it until water flows from the spout (approximately 1 to 2 minutes).</li> <li><input type="checkbox"/> Run the water for at least 2 minutes to flush lines (both the hot and cold handles independently if applicable).</li> </ul> |
|--|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

6

Electric Shock Hazard: A standard grounded outlet within 30" of the dispenser is required under the sink. Do not use an extension cord set with the dispenser.

Scalding Hazard: The faucet dispenses near-boiling (200°F) water which can instantly cause scalds or burns. Use care when operating this appliance.

Gurgling or hissing is normal during the initial heating cycle.

# IN-HOME FULL SERVICE LIMITED WARRANTY

View/Wave/Contour/Classic  
Hot100/Hot150

3-year warranty  
1-year warranty

This limited warranty is provided by InSinkErator, a business unit of Emerson Electric Co., (“InSinkErator” or “Manufacturer” or “we” or “our” or “us”) to the original consumer owner of the InSinkErator product with which this limited warranty is provided (the “InSinkErator Product”), and any subsequent owner of the residence in which the InSinkErator Product was originally installed (“Customer” or “you” or “your”). InSinkErator warrants to Customer that your InSinkErator Product will be free from defects in materials and workmanship, subject to the exclusions described below, for the “Warranty Period”, commencing on the later of: (a) the date your InSinkErator Product is originally installed, (b) the date of purchase, or (c) the date of manufacture as identified by your InSinkErator Product serial number. You will be required to show written documentation supporting (a) or (b). If you are unable to provide documentation supporting either (a) or (b), the Warranty Period commencement date will be determined by Manufacturer, in its sole and absolute discretion, based upon your InSinkErator Product serial number.

## Permitted Uses

You may use your InSinkErator Product hot/cold water tank and filter system in combination with any genuine InSinkErator Product instant hot water dispensers and component parts and/or Authorized OEM Products. “Authorized OEM Products” mean those hot or hot/cold water dispensers and component parts that have been manufactured by an authorized InSinkErator original equipment manufacturer (“Authorized OEM”) and which have documentation expressly stating that such Authorized OEM Products are compatible with the InSinkErator Product(s). Authorized OEMs may change from time to time. A list of Authorized OEMs is available to you upon request or at: [www.insinkerator.com/](http://www.insinkerator.com/) oem. Use of your InSinkErator Product in combination with any products other than Authorized OEM Products will void this warranty.

## What is Covered

This limited warranty covers defects in materials or workmanship, subject to the exclusions below, in InSinkErator Products used by a consumer Customer for residential use only, and includes all replacement parts and labor costs. **YOUR SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE LIMITED TO REPAIR OR REPLACEMENT OF THE INSINKERATOR PRODUCT, PROVIDED THAT IF WE DETERMINE IN OUR SOLE DISCRETION THAT NEITHER REMEDY IS PRACTICABLE, WE MAY PROVIDE YOU A REFUND OF YOUR PURCHASE PRICE OR A CREDIT TOWARDS ANOTHER INSINKERATOR PRODUCT.**

## What is not Covered

This limited warranty does not extend to and expressly excludes:

- Losses or damages or the inability to operate your InSinkErator Product resulting from conditions beyond the Manufacturer’s control including, without limitation, accident, alteration, misuse, abuse, neglect, negligence (other than Manufacturer’s), failure to install, maintain, assemble, or mount the InSinkErator Product in accordance with Manufacturer’s instructions or local electrical and plumbing codes.
- Wear and tear expected to occur during the normal course of use, including without limitation, cosmetic rust, scratches, dents or comparable and reasonably expected losses or damages.
- Losses or damages caused by any product or component part used with the InSinkErator Products, including both Authorized OEM Products and other products and components.

In addition to the above exclusions, this warranty does not apply to InSinkErator Products installed in a commercial or industrial application.

## No Other Express Warranty Applies

This limited warranty is the sole and exclusive warranty provided to the Customer identified above. No other express warranty, written or verbal, applies. No employee, agent, dealer, or other person is authorized to alter this limited warranty or make any other warranty on behalf of Manufacturer. The terms of this limited warranty shall not be modified by the Manufacturer, the original owner, or their respective successors or assigns.

## What we will do to Correct Problems

If your InSinkErator Product does not operate in accordance with the documentation provided to you, or you have questions concerning your InSinkErator Product or how to determine when service is needed, please call the toll free InSinkErator AnswerLine® at 1 (800) 558-5700, or visit our website at [www.insinkerator.com](http://www.insinkerator.com). You may also notify us at: InSinkErator Service Center, 4700 21st Street, Racine, Wisconsin 53406 USA.

The following information must be provided as part of your warranty claim: your name, address, phone number, your InSinkErator Product model and serial number, and if necessary, upon request, written confirmation of either: (a) the date shown on your installation receipt, or (b) the date shown on your purchase receipt.


Manufacturer or its authorized service representative will determine, in its sole and absolute discretion, if your InSinkErator Product is covered under this warranty. You will be given the contact information for your closest authorized InSinkErator Service Center. Please contact your InSinkErator Service Center directly to receive in home warranty repair or replacement service. Only an authorized InSinkErator service representative may provide warranty service. InSinkErator is not responsible for warranty claims arising from work performed on your InSinkErator Product by anyone other than an authorized InSinkErator service representative.

If a covered claim is made during the Warranty Period, Manufacturer will, through its authorized service representative, either repair or replace your InSinkErator Product. Cost of replacement parts or a new InSinkErator Product, and cost of labor for repair or installation of the replacement InSinkErator Product are provided at no cost to you. Repair or replacement shall be determined by Manufacturer or its authorized service representative in their sole discretion. All repair and replacement services will be provided to you at your home. If Manufacturer determines that your InSinkErator Product must be replaced rather than repaired, the warranty on the replacement InSinkErator Product will be limited to the unexpired term remaining in the original Warranty Period.

This instant hot water dispenser is covered by Manufacturer’s limited warranty. This limited warranty is void if you attempt to repair the InSinkErator Product. For service information, please visit [www.insinkerator.com](http://www.insinkerator.com) or call, toll free, 1-800-558-5700. **Limitation of Liability**  
TO THE EXTENT PERMITTED BY LAW, IN NO EVENT SHALL MANUFACTURER OR ITS AUTHORIZED SERVICE REPRESENTATIVES BE LIABLE FOR ANY INCIDENTAL, SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, INCLUDING ANY ECONOMIC LOSS, WHETHER RESULTING FROM NONPERFORMANCE, USE, MISUSE OR INABILITY TO USE THE INSINKERATOR PRODUCT OR THE MANUFACTURER’S OR ITS AUTHORIZED SERVICE REPRESENTATIVE’S NEGLIGENCE. MANUFACTURER SHALL NOT BE LIABLE FOR DAMAGES CAUSED BY DELAY IN

## ADJUSTING THE THERMOSTAT

Factory temperature pre-set is approximately 200°F. ☐ Adjust the thermostat slowly, turning the dial clockwise to increase temperature or counter clockwise to decrease

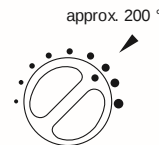

temperature, then activate faucet handle for 20 seconds to bring in fresh water to be heated at the new setting. Allow 5-7 minutes for water to reach new temperature.

**To reset the thermostat to 200°, turn the indicator two notches to the right of vertical.**

## ⚠ WARNING

**Scalding Hazard:** Do not allow water to boil. May result in severe burns.

PERFORMANCE AND IN NO EVENT, REGARDLESS OF THE FORM OF THE CLAIM OR CAUSE OF ACTION (WHETHER BASED IN CONTRACT, INFRINGEMENT, NEGLIGENCE, STRICT LIABILITY, OTHER TORT OR OTHERWISE), SHALL MANUFACTURER’S LIABILITY TO YOU EXCEED THE PRICE PAID BY THE ORIGINAL OWNER FOR THE INSINKERATOR PRODUCT.

The term “consequential damages” shall include, but not be limited to, loss of anticipated profits, business interruption, loss of use or revenue, cost of capital or loss or damage to property or equipment.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you. This limited warranty gives you specific legal rights and you may also have other rights which vary from state to state.

## CARE AND USE

## ⚠ WARNING

**Electric Shock Hazard:** To prevent electrical shock, disconnect power before servicing unit. Use only a properly grounded and polarized electric outlet.

## CLEANING THE FAUCET AND TANK

- ☐ Only use mild cleaners to clean the faucet and plastic components.
- ☐ Cleaners with acids, abrasives, alkaline or organic solvents will result in deterioration of the plastic components and void the warranty.

## PROPERTY DAMAGE

- ☐ Regularly inspect the unit for any signs of leakage. If there are signs of water damage, immediately remove the unit from service.
- ☐ To avoid water damage from leakage, replace all cut, loose or split tubing. A drain pan, plumbed to an appropriate drain or outfitted with a leak detector, should be used in those applications where any leakage could cause property damage.

| SEASONAL STORAGE/DRAINAGE                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | PERSONAL INJURY                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>Anytime the instant hot water dispenser is not used for extended periods of time, unplug and drain unit. If it is below freezing you will need to unplug the unit and drain it.</p> <ul style="list-style-type: none"> <li>❑ Disconnect power from unit (unplug unit). Push hot water dispenser faucet lever and allow water to flow until it is cool.</li> <li>❑ Shut the cold water supply off at the valve.</li> <li>❑ Disconnect tubes from the tank. Unhook tank from wall.</li> <li>❑ Hold tank upside down and drain the water into the sink.</li> <li>❑ Towel dry any water drippings from tank area.</li> <li>❑ Reinstall tank to wall and reconnect tubes. Remove and discard filter cartridge, if applicable.</li> </ul> <p>To put back into working order, install new filter cartridge (if applicable) and turn on cold water supply at valve. Depress the hot water dispenser faucet lever and hold until water flows from the spout. Reconnect the electrical cord.</p> <p>(Refer to Page 10, Step 6B)</p> | <div> <div> <input type="checkbox"/> Regularly check for signs of corrosion by examining the appearance of the dispensed water.           <input type="checkbox"/> If there is any discoloration or rusty appearance, unplug and drain unit as described in the Seasonal Storage/Drainage section on this page of the manual.           <input type="checkbox"/> If the water discoloration remains after draining and refilling unit, discontinue use and contact an authorized InSinkErator service agent.         </div> <div>  <p>For fresher tasting water, add filtration to your instant hot water dispenser system.</p> </div> </div> <p>InSinkErator offers water filtration systems designed exclusively for instant hot water dispensers. For more information, visit <a href="http://www.insinkerator.com">www.insinkerator.com</a> or <a href="http://shop.insinkerator.com">shop.insinkerator.com</a>.</p> <div> <div>12</div> <div>Water is dripping from the spout/vent intermittently.</div> </div> <div> <div></div> <div>Water is dripping from the spout/vent constantly.</div> </div> <div> <div></div> <div>Divided stream.</div> </div> |  | <div>  </div> <div> <div>13</div> <div>heated at the new setting. Allow 5-7 minutes for water to reach new temperature.</div> </div> <ul style="list-style-type: none"> <li>• Outlet tube is blocked.      • Check that outlet tube is not kinked, twisted or pinched.</li> <li>• Unscrew spout end piece and clean out any debris.</li> <li>• The expansion chamber isn't      • Unplug the unit. If the dripping doesn't stop after a draining properly due to low few minutes, check the supply valve to ensure that water pressure. is fully open and there are no obstructions in the</li> <li>• The spout is blocked.      water line reducing the pressure below 30 psi (i.e., a poorly mounted saddle valve, a clogged water filter, or a partially opened shut-off valve).</li> <li>• Unscrew spout end piece and clean out any debris.</li> </ul> <ul style="list-style-type: none"> <li>• Debris in the water line may      • Unscrew spout end piece and clean out any debris. be in the faucet valve seat</li> <li>• Activate faucet lever 7-10 times to flush faucet &amp; lines. causing a slow water leak.</li> <li>• Debris in the end piece.      • Unscrew spout end piece and clean out any debris.</li> <li>• Mounting nut too tight.      • Loosen mounting nut, 1/4 turn at a time, until</li> <li>• Mounting washers not      shut-off occurs. installed properly • See page 6, Step 2B to check proper mounting washer installation.</li> </ul> | <div>  <p>INVOLVE VIEW™</p> </div> <div>  <p>INVOLVE WAVE™</p> </div> <div>  <p>INVITE CONTOUR™</p> </div> <div>  <p>INVITE CLASSIC™</p> </div> <div>  <p>INVITE HOT100™</p> </div> <div>  <p>INVITE HOT150™</p> </div> |
| <div> <div>Water and steam</div> <div>spits forcefully from</div> <div>spout without</div> <div>turning on the</div> <div>dispenser faucet.</div> </div> <div> <div>Water is not hot.</div> <div>Water is too hot or not hot enough.</div> <div>Water comes out the vent instead of spout.</div> </div>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | <div> <div>Water continues to run after releasing lever. (View/Wave)</div> <div>Water discoloration/ rusty appearance.</div> </div> <div> <div> <div>• Unit is boiling.      • Activate faucet lever to release some water from the tank. <i>May be normal during initial setup.</i></div> <div>• Adjust water temperature using dial on tank front. <i>Remember that at higher altitudes, water boils at lower temperatures.</i></div> </div> <div> <div>• The unit is unplugged.      • Make sure the unit is connected to a properly grounded electric outlet.</div> <div>• The electric outlet is inoperative.</div> <div>• Make sure the circuit breaker or fuses are functioning properly.</div> <div>• Check that the outlet is not switched off.</div> </div> <div> <div>• Thermostat is not adjusted to      • Adjust the thermostat slowly, then activate faucet your needs. lever for 20 seconds to bring in fresh water to be</div> </div> </div>                                                                                                                                                                                                                                                                                  |  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | <div>  </div>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |

|                                                                                                                                                                                                                                                                       |                                                                                                    |  |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------|--|
|                                                                                                                                                                                                                                                                       |                                                                                                    |  |
|                                                                                                                                                                                                                                                                       |                                                                                                    |  |
| <ul style="list-style-type: none"><li>• Corrosion of unit.<ul style="list-style-type: none"><li>• Unplug and drain unit as described in the Seasonal Storage/Drainage Section on page 13 of this manual. If the water discoloration remains after</li></ul></li></ul> | draining and refilling unit, discontinue use and contact an authorized InSinkErator service agent. |  |



INVOLVE VIEW™  
INVOLVE WAVE™



INVITE CONTOUR™  
INVITE CLASSIC  
INVITE HOT100™  
INVITE HOT150™



Para ver un tutorial de esta instalación ingrese a <http://goo.gl/AZOHu>

**Please read Troubleshooting Guide and/or visit  
[www.insinkerator.com](http://www.insinkerator.com)**