

ARMITRON®

M1179B/M1185A

LIMITED WARRANTY & INSTRUCTIONS MANUAL

VISIT US AT OUR WEBSITE
WWW.ARMITRON.COM

LAST UPDATE 12/10/2017



NOTES:

FEATURES

- Time Telling Mode (Hours, Minutes, Seconds, and Day of the Week)
- Calendar Mode (Month and Date)
- 24 Hour Alarm
- Chronograph Mode: Hours, Minutes, Seconds and 1/100th of a Second with Lap Operation
- 12/24 Hour (Military Time)
- US/European Calendar
- Water Resistant as indicated on the watch

SELECTING FEATURES

1. Time Telling Mode displays Hours, Minutes, Seconds, and Day of the Week.
2. From Time Telling Mode, press and hold '**C**' Calendar Mode appears and the Month and Date are displayed. Release '**C**' to return to Time Telling Mode.
3. From Time Telling Mode, press '**B**' once. Chronograph Mode appears. Press '**B**' again to return to Time Telling Mode.
4. From Time Telling Mode, press and hold '**B**' Alarm Mode appears and the Hours and the Monday Indicator flash. Release '**B**'; then press '**B**' twice to return to Time Telling Mode.

SETTING THE TIME AND CALENDAR

1. From Time Telling Mode, press and hold '**B**'; Alarm Hours and the Monday Indicator flash. Release '**B**' then press '**B**' again. Seconds and the Tuesday indicator flash. Press '**A**' to zero out the Seconds.

NOTE: Zeroing out 30 or more seconds automatically adds one minute to time.

2. Press '**C**' Minutes flash. Press '**A**' to advance the Minutes.

*NOTE: Pressing and holding '**A**' will advance digits rapidly.*

3. Press '**C**' Hours flash. Press '**A**' to advance the Hour.

*NOTE: When 12 Hour Format is selected, '**A**' indicates 'a.m.' times. '**P**' indicates 'p.m.' times.*

NOTES:

LIMITED WARRANTY

This EGC Watch is warranted to you, the owner, for your lifetime against all defects in material or workmanship. This warranty does not apply to normal wear and tear or abuse and excludes batteries, case, strap, crystal, or bracelet. In the event of a defect or malfunction of the movement within this period it will be repaired or replaced, at our option, provided that it is returned prepaid with a check or money order for $9.95 to cover the cost of handling and return postage. This charge does not apply to California residents. (This is not a repair charge.) DO NOT SEND CASH. No additional charge will be made unless additional servicing is necessary for reasons beyond our control such as accident, misuse, neglect or replacement of parts not warranted is required such as case, crystal, strap, bracelet or batteries in which event a moderate charge will be made.

The movement of any timepiece requires periodic cleaning/timing which is not a defect and, as such not warranted. After one year from the date of purchase each cleaning/timing will be performed as required without charging a fee in excess of the specified $9.95 handling charge. The above remedy is exclusive, EGC shall not be liable for any incidental or consequential damages. Should any other part of your watch require repair, please use our Service Center for quick and inexpensive repairs on your watch. This warranty gives you specific legal rights and you may also have other rights which may vary from state to state. Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. In the event of a problem with warranty service or performance, you may be able to go to Small Claims Court, a State Court or a Federal District Court.

CALIFORNIA RESIDENTS ONLY!!

There is no handling charge for in warranty service. Charges apply only for NON-WARRANTY ITEMS such as cleaning after one year and other routine maintenance.

4. Press **'C'**. The Month flashes. Press **'A'** to advance the Month.
5. Press **'C'**. The Date flashes. Press **'A'** to advance the Date.
6. Press **'C'**. The Day of the Week flashes. Press **'A'** to advance the Day of the Week.
7. Press **'B'** to end set sequence and return to Time Telling Mode.

12/24 HOUR (MILITARY) TIME

1. From Time Telling Mode, press and hold **'A'**. Press **'B'** to select either 12 Hour or 24 Hour (Military) Time.

*NOTE: The letters **'A'** (for 'a.m.' times) or **'P'** (for 'p.m.' times) indicate 12 Hour Format is selected.*

2. Release **'A'** to return to Time Telling Mode.

CHANGING THE BATTERY

Change the battery when the watch becomes slow, the readout darkens or does not appear, or the backlight fails. Before removing the old battery, be sure to denote its polarity so that the new battery is installed in exactly the same way. Replace with the same kind or equivalent only. This watch contains precise electronic components and should only be opened by a qualified watch technician. However, it is not necessary to return your watch to the manufacturer for battery replacement. It is recommended that you bring your timepiece to a local jeweler.

WATER RESISTANCE

This is a WATER RESISTANT watch. Do not operate push buttons below the surface of the water. Should water or condensation appear in the watch, immediately have the watch checked. Water can corrode electronic parts inside the case.

CHRONOGRAPH

1. From Time Telling Mode, press **'B'** once to enter the Chronograph Mode.
2. Press **'C'** to start timing.
3. Press **'C'** again to stop timing.
4. Press **'A'** to reset to zero.
5. Press **'B'** to return to Time Telling Mode.

LAP OPERATION

1. While in the Chronograph Mode, press **'C'** to start timing.
2. Press **'A'** to measure Laps.
3. Press **'C'** to stop timing at the end of the event.
4. Press **'A'** to reveal the final Lap Time.
5 Press **'A'** again to reset to zero.
6. Press **'B'** to return to Time Telling Mode.

EUROPEAN CALENDAR

1. From Time Telling Mode, press and hold **'C'**. Press **'A'** to select either US Calendar or European Calendar.
2. Release **'C'** to return to Time Telling Mode.

SETTING 24 HOUR ALARM

1. From Time Telling Mode, press and hold **'B'** to enter the Alarm Mode. Alarm Hours flash.
2. Press **'A'** to advance the Alarm Hour.
3. Press **'C'**. Alarm Minutes flash. Press **'A'** to advance the Alarm Minutes.
4. Press **'B'** to end sequence and return to Time Telling Mode.

ACTIVATING THE ALARM AND THE HOURLY CHIME


1. From Time Telling Mode, press and hold **'A'**. Press **'C'** to activate the Hourly Chime. The Hourly Chime symbol appears to indicate the Hourly Chime will sound every hour on the hour.
2. Press **'C'** again to activate the Alarm. The Alarm Symbol appears to indicate the Alarm will sound at the preset Alarm Time.
3. Press **'C'** again to deactivate the Hourly Chime.
4. Press **'C'** again to deactivate the Alarm.
5. Release **'A'** to return to Time Telling Mode.

EL LIGHT FEATURE


1. Press **'D'** in any mode to illuminate the watch face. The backlight will remain lit for 2 to 3 seconds.

NOTE: EXCESSIVE USE OF LIGHT WITH SHORTEN BATTERY LIGHT

TO CHANGE YOUR STRAP

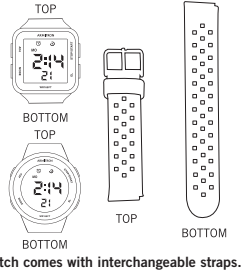

1. The watch comes with interchangeable straps. First locate the top and bottom straps you wish to use.

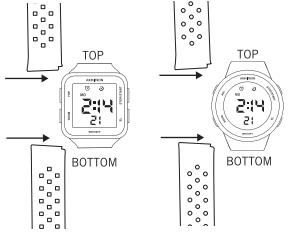

2. Slide the straps from the left side. Make sure it's securely in.

USE OUR NATIONWIDE SERVICE CENTERS. YOU CANNOT RETURN WATCH FOR SERVICE WHERE IT WAS PURCHASED.

If your watch requires cleaning, lubrication, battery changing, or needs a crystal replaced, Armitron approved Service Centers are available in your area. These repair facilities use Armitron parts and components to assure quality and future performance. Free estimates are available in advance, should you need servicing or repairs not covered under the warranty. Repairs covered under the warranty may require proof of purchase, so retain the purchase receipt.

TO RETURN YOUR WATCH FOR SERVICING:

Please call (718) 482-4195 for a listing of all approved and authorized service centers and locations, or visit our website at WWW.ARMITRON.COM.

YOUR WATCH SHOULD NOT BE RETURNED TO THE PLACE OF PURCHASE.

Carefully pack your watch in a sturdy box (do not send in a gift box for same will not be returned) and mail to the nearest approved authorized service station. Because of possible loss, we recommend that you insure the watch, return receipt requested, when using the mail. If you do not receive a receipt within a reasonable time, start a tracer through the originating post office. Never include a special watch band or any other article of personal value in your shipment.