GameSir T4w Wired Controller

User Manual



We hope this manual answered any questions you may have.
If you have any further questions, please contact us:

GameSir Facebook: https://www.facebook.com/myGamesir
Twitter: https://twitter.com/mygamesir
Customer Service: cs@gamesir.hk

NOTICE: Please read this Precautions carefully before using the product.

- CONTAINS SMALL PARTS. Keep out of reach of children under the age of 3. Seek immediate medical attention if swallowed or inhaled.
- DO NOT use the product near fire.
- DO NOT expose to direct sunlight or high temperatures.
- DO NOT leave the product in a humid or dusty environment.
- DO NOT impact the product or cause it to fall due to strong impact.
- DO NOT touch USB port directly or it might cause malfunctions.
- DO NOT strongly bend or pull cable parts.
- Use a soft, dry cloth while cleaning.
- DO NOT use chemicals such as gasoline or thinner.
- DO NOT disassemble, repair or modify.
- DO NOT use for purposes other than its original purpose. We are NOT responsible for accidents or damage when used for non-original purposes.
- DO NOT look directly at the optical light. It might damage your eyes.
- If you have any quality concerns or suggestions, please contact GameSir or your local distributor.

PRODUCT DESCRIPTION

GameSir T4w Wired Controller is designed for a strengthened gaming experience. It is compatible with Windows 7 or above through wired connection. GameSir T4w Wired Controller has LB & RB buttons, D-pad, silicone anti-skid 3D joystick and sensitive triggers. Dual motors bring strong vibration feedback. Ergonomic handles are unevenly engraved and designed for anti-skid handhold. The product has translucent design with LED ABXY buttons on the right.

PACKAGE CONTENTS

GameSir T4w Wired Controller
Instruction Manual

SYSTEM REQUIREMENT

Windows 7/8/10

REGISTRATION

Register your GameSir ID at https://gamesir.hk/ to get real-time information on your product's warranty status and series of GameSir exclusive benefits.

WHAT YOU'LL GET

* 12 months limited manufacturer's warranty
* Free online technical support at https://gamesir.hk/ (Supports English and Japanese)

DEVICE LAYOUT



A BACK Button B START Button C Turbo Button D HOME Button
E A/B/X/Y buttons F Backlight loop G LED light indicators H D-Pad

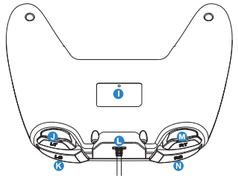

I Reset J LT Button K LB Button L USB Cable M RT Button N RB Button

CONNECTION

PC Dinput Wired Connection Mode Setup:

1. Plug in USB cable into PC USB port.
2. If LED1 + LED3 stay on, Dinput mode is connected succesfully. Long press Home key for 5 seconds to switch mode.

PC Xinput Wired Connection Mode Setup:

1. Plug in USB cable into PC USB port.
2. If LED1 + LED4 stay on, Xinput mode is connected succesfully. Long press Home key for 5 seconds to switch mode.

Dinput Mode: LED1+LED3 indicators stay on.
Xinput Mode: LED1+LED4 indicators stay on.


(Dinput Mode)


(Xinput Mode)

TURBO FUNCTION

a. Press the key where you want to set turbo function, press TURBO key simultaneously, then back light turns into red and Turbo function is successfully set.
b. Press the key that is successfully set for Turbo function, press TURBO key simultaneously, then back light turns into red and Turbo function is successfully canceled.

* The following buttons can be used to set for Turbo function: A, B, X, Y, LB, RB, LT, RT.

LIGHTING AND MOTOR VIBRATION INTENSITY ADJUSTMENT

Lighting adjustment:

Hold LT, RT, R3 simultaneously then press up or down of D-pad to adjust lighting. The lowest level is light off among 5 levels of lighting.

Motor vibration intensity adjustment:

Hold Turbo then press up or down of D-pad to adjust vibration. The lowest level is vibration off among 5 levels of vibration.

RESET

Stick a slender pin into the Reset button on the back of GameSir T4w Wired Controller to reset. The controller will turn off and reboot.

GameSir • Gaming is Winning.™

© 2018 GameSir Inc. All rights reserved.
Product may vary slightly from those pictures.

GameSir T4w コントローラー

取扱説明書

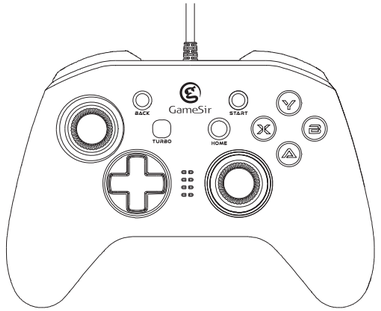

GameSir Facebook: https://www.facebook.com/myGamesir
Twitter: https://twitter.com/mygamesir
Customer Service: cs@gamesir.hk

このたびは、弊社製品を買い上げいただき誠にありがとうございます。
ご使用になる前に、この取扱説明書をよくお読みのうえ、本品を安全にご使用ください。
お読みになったあとは、いつでも見られるように、大切に保管してください。

⚠ ご注意:保護者の方へ必ずお読みください。

- 小さいな部品がありますので3歳未満のお子様には絶対に与えないでください。
- 乳幼児の手の届くところに置かないでください。万一飲み込んだ場合は、すぐに医師に相談してください。
- 火気のある場所では絶対に使用しないでください。
- 長時間直射日光当てたり、高温となる場所に置かないでください。
- 本品を湿気やホコリの多いところに置かないでください。
- 本品に物を当てたり、落下させるような強い衝撃を与えないでください。
- 故障の原因になりますので、USB端子を直接手で触ないでください。
- ケーブル部を強く曲げたり引っ張ったりしないでください。
- お手入れの際には、乾いた柔らかい布を使用してください。
- ベンジン、シンナーなどの薬品は使用しないでください。
- 分解や修理、改造は絶対にしないでください。
- 本来の目的以外には使用しないでください。本来の目的以外に使用した場合の事故や損害に対し、弊社は一切その責任を負いません。
- 光学式ライトの光を直接見ないでください。強い光より、目を痛める可能性があります。

＊ 品質上の問題または提案がある場合に販売元またはアフターサービス担当者に連絡してください。

製品概要

GameSir T4w コントローラーは、e-スポーツゲーム体験を強化するように設計されています。有線接続を介して、Windows7以降のデバイスと互換性が高いです。手触りが良いLB＆RBボタンとDパッド及びにシリコンアンチスキッド3Dジョイスティックと敏感なトリガーを擁しています。デュアルモーターが内蔵し、強力なバイブレーションをもたらします。ゲームを操作するテンションも高めるようになります。半透明で設計され、右側のABXYボタンもジョイスティックもカラフルなLEDライティングを付いております。人間工学に基づいて設計されたグリップ及びに背面の滑り止めレーザー刻印は、GameSir T4wコントローラーの操作性を向上させます。

パッケージ内容

GameSir T4w コントローラー
取扱説明書

システム要件

Windows7以降

ユーザー登録

https://gamesir.hk/にてGameSir IDを作成して、ご購入の製品を登録すると、当製品の品質保証の状態に関するリアルタイム情報と、GameSir会員専用のメリットを得ることができます。

登録による特典

12ヵ月のメーカー限定保証（コントローラー本体のみ）
https://gamesir.hk/でのマニュアルの閲覧と無料オンラインテクニカルサポート（英語/日本語対応）

各部の名称



Ⓐ BACK ボタン　Ⓑ START ボタン　Ⓒ TURBO ボタン　Ⓓ HOME ボタン
Ⓔ A/B/X/Y ボタン　Ⓕ ジョイスティック　Ⓖ LEDインジケータライト　Ⓗ 方向キー

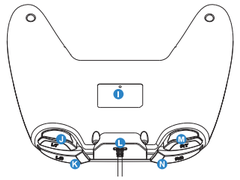

Ⓘ Reset ボタン　Ⓙ LT ボタン　Ⓚ LB ボタン　Ⓛ USBケーブル　Ⓜ RT ボタン　Ⓝ RB ボタン

機能説明

PCへの接続ステップ（Xinpuモード）

a. GameSir T4w コントローラーのケーブルをPCのUSBポートに差し込んでから、自動的に起動します。
b. GameSir T4w コントローラーのLEDインジケータライト(LED1+LED4)が点灯になりますと、接続成功です。
c. PCは自動的に対応するドライバをダウンロードしてインストールします。
d. ゲームを楽しみましょう。
＊ HOMEボタンを5秒押すと、GameSir T4w コントローラーはXinpuモードとDinputモードを切り替えることができます。LED1 + LED4インジケータライトが点灯する場合はXinpuモードになり、LED1 + LED3インジケータライトが点灯する場合はDinputモードになります。


（Dinpuモード）


（Xinpuモード）

連射機能

TURBOボタンを押しながら連射させたいボタンを押すと連射になります。(バックライトループはレッドになります。)
連射させたボタンを押しながらTURBOボタンを押すと、連射機能を解除します。(バックライトループはブルーになります。)

シャットダウン

ホームボタンを2秒長押しするとコントローラーがオフになり、すべてのライトが消灯します。

自動シャットダウン

GameSir T4w コントローラーが接続済みの状態で180秒以上操作されない場合は、自動的にシャットダウンします。
GameSir T4w コントローラーが接続なしの状態（接続待ち）で30秒以上接続されない場合は、自動的にシャットダウンします。

調節/ボタンの消灯

LT+RT+R3を同時に押しながら、方向キーのUp/Down ボタンを押すとボタンライトの明るさを調節できます。
LB + RBボタンを5秒押すと、ボタンライトをオン/オフに切り替えます。

モーター振動の強さの調節

Turboボタンを5秒押し、方向キーのUp/Down ボタンを押すとモーター振動の強さを調節できます。

リセット（Reset）

GameSir T4wコントローラーの裏面の穴に針を差し込んで押すと、コントローラーがオフになり、その後再起動します。

GameSir - Gaming is Winning.™ゲームサー、プレイが勝つを。™
© 2018 GameSir Inc. All rights reserved.
Product may vary slightly from those pictured.