W-KING®



User Manual

W-KING H10 Karaoke Party Speaker

W-KING ® is a registered trademark in the US and European Union. All rights reserved.

Like our product?
Share your experience with other customers on our page!

Having troubles?
Contact us: support.amazon@w-king.com

NOTE: Please charge the device regularly to guarantee the battery a longer lifetime.

Package

- H10 Speaker x1
- DC 15V/1.6A Charger x1
- Wireless Microphone x1
- Type-C Charging Cable x1
- Remote Control x1
- 3.5mm AUX Cable x1
- Live Streaming Cable x1
- User Manual x1

Product Diagram

Speaker Dimensions: 14.74*5.85*9.91 inches

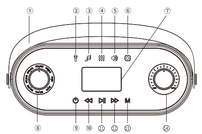

① Leather Strap
② Microphone Priority
③ Instrumental
④ Equalizers
⑤ Microphone Circumstances
⑥ Recording
⑦ LED Screen
⑧ Function Manual Knob
⑨ Power ON/OFF
⑩ Previous Track
⑪ Play/Pause
⑫ Next Track
⑬ Mode
⑭ Volume Adjusting Knob



① 6.5mm Wired Microphone Port
② Reset Port
③ 6.5mm Guitar Port
④ USB Port
⑤ TF Card Slot
⑥ Live Streaming Port
⑦ Earphone Monitoring Port
⑧ AUX Port
⑨ DC 15V/1.6A Charging Port
⑩ Charging Indicator

Wireless Microphone

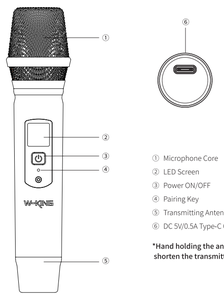

① Microphone Core
② LED Screen
③ Power ON/OFF
④ Pairing Key
⑤ Transmitting Antenna
⑥ DC 5V/0.5A Type-C Charging

***Hand holding the antenna may shorten the transmitting range.**

Remote Control

*Note: Two LR03/AAA batteries needed. Please make sure to point the remote control to the front of the speaker.



Specifications

- Output: 120W (150W MAX)
- Speaker Battery Capacity: 7500mAh (at 10.8V)
- Speaker Charging Period: 4-5 Hours
- Bluetooth Version: 5.0
- Bluetooth Name: W-KING H10
- Supported Bluetooth Profiles: A2DP V1.2; AVRCP V1.4; GAVDP V1.2; AVDTP V1.2; SPP V1.2; AVCTP V1.2
- Microphone Battery Capacity: 1600mAh
- Microphone Charging Period: 3-4 Hours
- Remote Control Range: > 15ft
- TF Card/ USB Drive Support Audio Format: MP3 WAV WMA FLAC APE etc.
- Frequency Range: 50Hz- 20KHz

*Above is the W-KING Lab test data, the actual use time may differ by environment and use habits, for reference only.

Operating Instructions

*All operations might need a short second to react.

Basic Functions

Function	Operation	Status	Note
Power On	Press "⏻" for 2-3 seconds	LED Screen turns on, shows " load " on the screen	/
Power Off	Press "⏻" for 2-3 seconds	LED Screen turns off	/

Function	Operation	Status	Note
Play/Pause	Press "⏯" on the speaker or "⏯" on the remote control	/	Works as Mute when in AUX mode
Previous Track	Press "⏮" on the speaker or "⏮" on the remote control	/	This doesn't function when in AUX mode
Next Track	Press "⏭" on the speaker or "⏭" on the remote control	/	This doesn't function when in AUX mode
Track Choosing	Press the Numbers on the remote control	LED Screen shows the track number and the track plays	Works on TF Card Mode and USB Mode
Speaker Volume Adjusting	Turn the Function Manual knob to VOLUME and turn the Volume Adjust Knob	VOLUME indicator on the LED screen light on	Volume level 0-30
Speaker Treble Adjusting	Turn the Function Manual knob to TREBLE and turn the Volume Adjust Knob	TREBLE indicator on the LED screen light on	Treble level -6- +6
Speaker Bass Adjusting	Turn the Function Manual knob to BASS and turn the Volume Adjust Knob	BASS indicator on the LED screen light on	Bass level -6- +6
Guitar Volume Adjusting	Turn the Function Manual knob to GTR-VOL and turn the Volume Adjust Knob	GTR-VOL indicator on the LED screen light on	Volume level 0-20
Play Mode	Press" ↻" on the remote control to switch the play mode	Single Loop Mode- LED screen shows ONE Shuffle Mode- LED screen shows RAN List Repeat Mode- LED screen shows ALL	Works on TF Card Mode and USB Mode
Mode Switch	Press " M " on the speaker or "MODE" on the remote control	/	Switches in Bluetooth- TF Card- USB- AUX order

Function	Operation	Status	Note
Low Battery Alarm	/	Alarm tone rings once at 20% battery remaining and once at 10%	/
Resetting	Press the Reset button once	Speaker turns off when successfully reset	/
Speaker Charging	Plug in the adapter	Charging Indicator red light on when charging, light off when charging is completed	Fast Charging not supported
Microphone Charging	Plug in the Type-C charging cable and an adapter (NOT included)	Battery sign on the LED screen flashes when charging	Fast Charging not supported

Main Features

Function	Operation	Status	Note
TWS Pairing	Long press " ⏯ " on one of the speakers when both are in Bluetooth mode and not paired to other devices	LED screen fast flashes when pairing	/
Equalizers	Press "🎚" on the speaker	Indoor mode: IN-D indicator on Outdoor mode: OUT-D indicator on	/
Vocal Reduce	Press "🎤" on the speaker or "🎵" on the remote control	ACMP indicator on	/
Live streaming Function	Connect the speaker and the mobile phone that live streams using the Live streaming cable	All audio that goes out from the speaker (music, microphone output audio, etc) would be played simultaneously through the live stream	Works at Bluetooth mode and AUX mode

Function	Operation	Status	Note
Earphone Monitoring	Plug the earphone in the MONITOR port to monitor the track and the microphone output, long press "⚙" on the speaker to turn on/off the speaker output	LED screen shows ON when the speaker output is on, OFF when the speaker output is off	/

Modes

Function	Operation	Status	Note
Bluetooth Pairing	Press " M " on the speaker or "MODE" on the remote control and switch to Bluetooth mode	LED screen slowly flashes, BT indicator on the screen light on	/
Bluetooth Connected	Select the device on your mobile phone and pair	/	Bluetooth Name- W-KING H10
Bluetooth Disconnect	Long press "⏮" and "⏭" at the same time	LED screen slowly flashes after disconnect	Automatically connect to the last device when switching back to Bluetooth mode
AUX Mode	Plug in the AUX cable	Automatically goes into AUX mode	/
TF Card Mode	Insert a TF card/ microSD card	Starts playing automatically	LED screen shows the remaining time of currently playing track
USB Mode	Insert an USB drive	Starts playing automatically	LED screen shows the remaining time of currently playing track

Recording Function

Function	Operation	Status	Note
Recording	Insert a TF card or an USB drive, short press "⏺" on the speaker or " REC " on the remote control to start/ stop recording	REC indicator on the LED screen flashes when recording	Switch to Bluetooth Mode or AUX mode before recording.
Play Record File	Long press "⏺" on the speaker, or short press " REPEAT " on the remote control	REC indicator on the LED screen stays on	Recording files do not mix with the track list in the TF card/USB drive.
Delete Record File	Long press " ⏯ " on the speaker or " ▶II " on the remote control when recording file is playing	LED screen shows "dele"	/
Exit Recording Mode	Press " M " on the speaker or "MODE" on the remote control	/	/

Microphone

Function	Operation	Status	Note
Microphone Power On/Off	Long press the power button on the microphone	Power On- LED screen on Power Off- LED screen off	
Microphone Pairing	Microphone power on, then long press the Pairing Key. After the microphone enters pairing mode, turn on the speaker and short press the Pairing Key after a few seconds	When the microphone enters pairing mode, the LED screen would flash. After the short press, LED screen stops flashing.	Keep the speaker off until the microphone enters pairing mode. Wait until the speaker finishes loading then short press the Pairing Key to finish pairing.
Microphone Frequency Change	Short press the Pairing Key	The frequency changes, show on the LED screen	/

Function	Operation	Status	Note
Microphone Circumstances	Press "⚙" on the speaker or "⚙" on the remote control	Switches among Original- Professional- Pop- Reverb	/
Microphone Voice Effect Switch	Press "CRACK" on the remote control to switch among 4 voice effects	LED screen shows VC01- VC04	VC01- Manly Voice VC02- Girly Voice VC03- Monster Voice VC04- Child Voice
Microphone Priority	Press " 🎙 " on the speaker or " 🎙 " on the remote control	MIC-1ST indicator on the LED screen light on, music stops playing	Put the microphone close and speak loud enough for the microphone to recognize
Canned Sound Effects	Press the 7 Canned Sound Effect buttons on the remote control	/	Turning the knob to MIC-VOL to adjust the volume of the effect
Microphone Volume Adjusting	Turn the Function Manual knob to MIC-VOL and turn the Volume Adjust Knob	MIC-VOL indicator on the LED screen light on	Volume level 0-20
Microphone Treble Adjusting	Turn the Function Manual knob to MIC-TRE and turn the Volume Adjust Knob	MIC-TRE indicator on the LED screen light on	Treble level -6- +6
Microphone Bass Adjusting	Turn the Function Manual knob to MIC-BAS and turn the Volume Adjust Knob	MIC-BASS indicator on the LED screen light on	Bass level -6- +6
Microphone Reverb Adjusting	Turn the Function Manual knob to ECHO and turn the Volume Adjust Knob	ECHO indicator on the LED screen light on	Reverb level 0-20

Product Care& Use

Keep away from liquids, extreme heat, and strong magnetic fields. Do not use this speaker at high volume for extended periods, as this may cause permanent hearing damage or loss.

Warranty& Customer Support

For questions, support, or warranty claims, contact us at: support.amazon@w-king.com.
Please include your Amazon order number and product model in the e-mail.

*Note: W-KING can only provide after-sales service for products purchased directly from our official Amazon store. Products ordered from a different seller are not covered by the warranty.

Notice for the US

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:
1.This device will not cause harmful interference.
2.This device accepts any interference received including other Bluetooth interference that may cause undesired operation.

FCC Rules

This equipment had been tested and found to comply with the limits for Class B digital devices, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.