尺寸：240*320mm
材质：双面彩色印刷

PIX-LINK®
Quick Installation Guide

Config Repeater Mode

REPERTER MODE

Connect your devices to the Repeater wirelessly or via an Ethernet cable, then enjoy the internet.



1 POWER ON

Plug the Repeater into a power outlet next to your router.



2 SET UP

Method 1: Via a Web Browser

Step 1

1. Connect your computer or smartphone to the Repeater's network: PIX-LINK-2.4G/PIX-LINK-5.8G, Default Password is 12345678. If you are using a computer, unplug the Ethernet cable if any. The default wireless name can be viewed on the bottom label of the repeater.

Step 2

2.Launch a web browser,and enter http://192.168.7.1 or setup.pix-link. net in the address bar. Then enter password:admin to login.
Note: If the login window does not appear, refer to FAQ-1.

Step 3

3. Follow web instructions to complete the setup.
a. Click Repeater Mode.

b. The system will automatically scans the surrounding wireless networks.

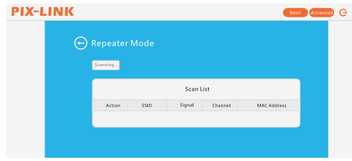

c. Select the SSID of the master router and enter Repeater SSID and the Password . The default Repeater SSID is set to be xxxx-2.4G-EXT / xxxx-5.8G-EXT (xxxx indicates The master router's wireless network name). Then click Apply to complete setup.
Note: The Password is the same as your master router.

d.The Repeater LED should turn blue solid on,indicating successful connection to your router.
Note: If the LED does not turn solid on, refer to FAQ-2.

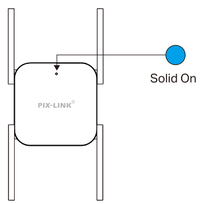

e. Connect your devices to the Repeater wirelessly or via an Ethernet cable, then enjoy the internet.

3 Relocate

1. Plug in the Repeater about halfway between your router and the Wi-Fi dead zone. The location you choose must be within the range of your router.
2. Wait for about 2 minutes until the Signal LED turns solid blue. If it doesn't, relocate the Repeater closer to the router to achieve better signal quality.



Config AP Mode

AP MODE

Raditional wired router realize wireless function: This repeater can connect to uplink router's LAN port by wired connection,convert wired signals to wireless signals,user terminal can connect to this router by wireless connection.



1 POWER ON

Plug the Repeater into a power outlet next to your router.

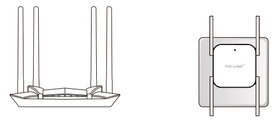

2 SET UP

Method 1: Via a Web Browser

Step 1

1. Connect your computer or smartphone to the Repeater's network: PIX-LINK-2.4G/PIX-LINK -5.8G,Default Password is 12345678. If you are using a computer, unplug the Ethernet cable if any. The default wireless name can be viewed on the bottom label of the repeater.

Step 2

2.Launch a web browser,and enter http://192.168.7.1 or setup.pix-link. net in the address bar. Then enter password:admin to login.
Note: If the login window does not appear, refer to FAQ-1.

Step 3

3. Follow web instructions to complete the setup.
a. Click AP Mode.



b. Enter SSID and Password , click apply to complete the Settings.

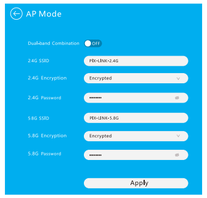

c. Connect the Repeater to the Lan port of your router with an Ethernet cable.

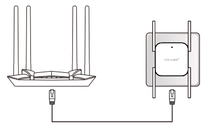

d. Connect your devices to the Repeater wirelessly, then enjoy the internet.

Method 2: Via the WPS Button

Step 1

1. Press the WPS button on your router.



The WPS button might look like one of these:

Step 1

2. Within 2 minuters, oress the WPS button on the repeater for 1 second. The rpeater LED should charge from red and blue blinking alterna tely to blue solid on,indicating successful connection.
Note:If the repeater LED does not turn blue solid on,try again or use method 1 or 2.

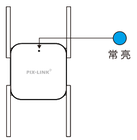

Frequently Asked Questions (FAQ)

1.Unable to access administration page?
Please make more detailed checks as following:

- Computer wired configuration: Ensure your computer gets the address automatically. Ensure your computer is connected to the router's LAN port with the cable , and the network indicators on both sides are lit.
- Mobile phone or computer wireless configuration: Please make sure that the connected WIFI is the WIFI of this device, and the password is entered correctly.
- Please open your browser and make sure that you have entered the correct IP address or domain name.
- Please relaunch your browser or try another browser (such as firefox or chrome).
- Please replace the network cable, or replace another computer and try again Please reset the device factory default and repeat the above steps again if the issue still exists.

2.After the "Repeater Mode" configuration of the device is completed, the SYS light not blue light always on, and the relay signal cannot be connected to the Internet.
The SYS light of the device not blue always on to indicate that the Repeater is not successfully paired, which is usually caused by the following problems:

- When filling in the wireless router, the password is entered incorrectly. When setting, open the small eye behind the password box to check whether the password is correct.
- The original signal received by the set device is too weak. Please install the mobile device to an area where the Wi-Fi signal is relatively good. (For example, the wireless router is in the living room and the bedroom signal is poor. Then we set it up. The repeater is placed on the socket outside the bedroom, between the bedroom and the living room. Do not use it in the bedroom) this can ensure the network speed of the relay signal and expand the coverage of the Wi-Fi signal.
- Reset the device and then configure it

3.Under what circumstances can't the relay be successful?

- The original wireless router Wi-Fi name or password has special symbols;
- A small number of telecommunications optical modems (Chinanet), mobile optical modems (CMCC-), and Unicom optical modems (Unicom) are relayed due to their own limitations or weak signals, which may cause problems such as unsuccessful relaying.
- If the client fails to obtain the address after the relay optical modem is successful, please restore the device to factory settings and follow the steps below: Login→Advanced→System Management →Enforce DHCP→ON→Apply, and then relay the optical modem again, the client can connect.

4.The cell phone, tablet or laptop cannot associate to the WIFI network?
Please make more detailed checks as following

- Ensure the WIFI function on the mobile device works normally, for example, the WIFI switch is turned on, and the wireless signal can be scanned.
- Ensure the router is set up correctly.
- Please make sure that the wireless name selected and the wireless Pass Phrase entered are correct (case sensitive) when establishing the wireless association.
- Please reset the device factory default and repeat the above steps again if the issue still exists.

5.How to restore the device to the factory default?

- Press and hold the "Reset" button on the back of the device for more than 5s until the SYS led red light quick blinking.
  Note: All configurations will be cleared and you need to reconfigure your device after set factory default.