DOSS

Bluetooth®

Stereo Wireless Bluetooth Speaker

Model No.: SoundBox Pro
User Manual

1. Introduction

Thank you for purchasing the DOSS SoundBox Pro, the true wireless stereo Bluetooth speaker. We advise you to read, follow and keep the following instructions in order to be able to correctly set up the speaker and enjoy all of its features to the fullest.

2. Packing content

- 1 x DOSS SoundBox Pro
- 1 x Micro USB charging cable
- 1 x 3.5mm auxiliary cable
- 1 x User manual

3. Specifications

Bluetooth version: V4.2+EDR
Range: 20 m/66 ft
Output: 10W x 2
Input: 5V⎓2A
Battery: Li-ion 7.4V⎓2200mAh
Weight: 630g
Unit dimension: 7.74 x 2.94 x 2.95 inches
Play time: Up to 12 hours (varies by volume level and content)
Warranty: One-year limited

4. Product overview

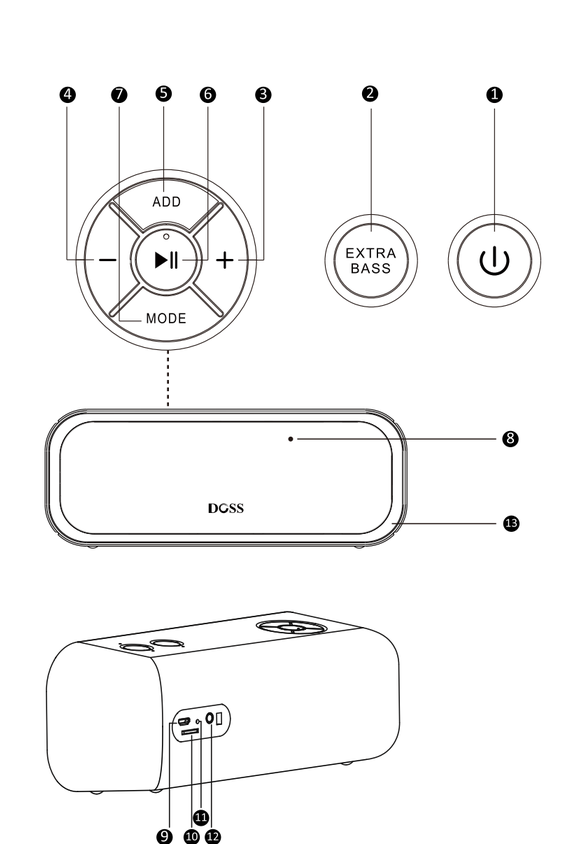

5. Buttons and controls

NO.	Buttons	You want to	How to
❶		Turn on/off	Press
❷		Add extra bass Cancel extra bass	Press
		Change the party light mode between flashing, solid, and off	Press and hold
❸	+	Volume up Skip to next track	Press Press and hold
❹	−	Volume down Go to previous track	Press Press and hold
❺	ADD	Enter into TWS mode	Press and hold
❻	▶II	Play/Pause Answer/End a call Reconnect with the last device	Press
		Disconnect the device Reject a call	Press and hold
❼	MODE	Switch modes Change the party light color	Press Press and hold
❽		Use handsfree function	Speak to the MIC
❾		Charge the speaker	Insert the charging cable
❿		Play via Micro SD card	Insert the Micro SD card
⓫		Reset the speaker	Use a needle to poke
⓬		Play via AUDIO in	Plug in Aux cable

6. Indicators

Indicator view	Indicator state	System state
Power	Rapidly flashing Blue Solid blue Solid red Solid green Light goes off	Bluetooth pairing Bluetooth paired Audio in mode Micro SD card mode Power off
EXTRA BASS	Solid white Light goes off	Extra bass mode Cancel extra bass
ADD	L(left) and R(right) rapidly flashing white alternately L(left)/R(right) solid white	Stereo pairing Stereo paired
Charging port	Solid red Light goes off	Charging Fully charged

7. Multi-color party light

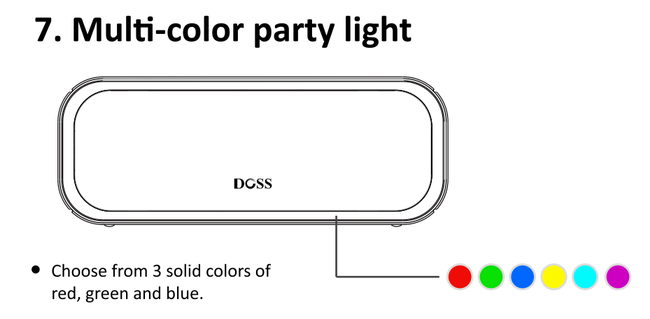

- Choose from 3 solid colors of red, green and blue.
- light blue, yellow and pink are available in the color changing option only.

8. Getting started

Charging the speaker

The SoundBox Pro comes pre-charged, but you may need to charge it before the first use, in case it is low on battery. It will take 3.5-4 hours to fully charge.

- Using the charging cable provided by DOSS, or a cable from a qualified manufacturer to charge your speaker.
- When the DOSS SoundBox Pro is running low on battery the music volume automatically drops down 15%, and a prompt tone will remind you to plug in the speaker.



Turning ON the speaker

- The party light (see 13 at product overview) will go slowly flashing after turning on.

Pairing your mobile device

1. Enable the Bluetooth feature on your smart device and search for devices.
2. Select SoundBox Pro on the Bluetooth list.
3. Once paired, you can see the connected status on your device.

- The speaker will auto power off after 15 minutes without any media input.
- The music volume will drop down 15% automatically when the speaker is on low battery.

Having problems connecting?

- Make sure that your device is within 1 meter from the speaker.
- Press and hold the Play/Pause button for 5 seconds.
- Clear the Bluetooth pairing list on your device.
- Try the pairing steps again.
- Still has a problem? Contact DOSS customer service at **support@dossav.com** for assistance.

Connect your device with the speaker via audio in cable

- When using the audio input mode, control audio playback via the connected device.
- When aux cable is plugged, play mode will automatically switch to AUDIO IN mode.



Play music from a Micro SD card

Card capacity: should be 32G or below, if your micro SD card is larger than 32G, please format it to FAT32 or FAT.
Support files: mp3, flac, wav, wma.
Play in order: music will play in the download/copy order.

- While playing from a Micro SD card in stereo pairing mode, only the speaker with the Micro SD card inserted will play.
- The Micro SD card should be inserted as seen in the diagram below.
- When the Micro SD card is inserted, the play mode will automatically switch to Micro SD card mode.



9. How to set up true wireless stereo pairing

Start the first speaker

- Turn on the speaker, press and hold the ADD button for 3s.



Start the second speaker

- Turn on the speaker, press and hold the ADD button for 3s.



- The party light of first and second speaker (see 13 at product overview) will go rapidly flashing alternately after turning on.
- Start the second speaker within 60S, otherwise, the stereo pairing settings of first speaker will be cancelled.
- While stereo pairing, the speaker will reconnect with the device if they used to be connected. Press and hold the Play/Pause for 5 seconds, to disconnect from the device and enter into stereo pairing mode again.
- When you are listening to music from one speaker and want to set up the stereo pairing, press and hold the ADD button for 3 seconds, to enter into stereo pairing mode.

Stereo paired



- The speaker with the left led turned solid white is the Master. The speaker with the right led turned solid white is the Slave.

Pairing your mobile device

1. Enable the Bluetooth feature on your device and search for devices.
2. Select SoundBox Pro on the Bluetooth list.
3. Once paired, you can see the connected status on your device.

- The (max) Bluetooth range between the master and the slave is of 10m/33ft
- In stereo paired mode, you can control the audio functions from any of the two speakers.
- If you turn off the slave (speaker with R led solid white), the master (speaker with L led solid white) will continue playing.

10. Stereo pairing reconnection

- To reconnect stereo pairing the SoundBox Pro's, turn on both speakers, then press and hold the ADD button of either of the two. The pairing will be done automatically.
- If one or both speakers are turned off without disconnecting from the stereo pairing mode, the speakers will reconnect automatically when turned back on.

11. Trouble shooting

Symptom	Solutions
No power(battery)	• Battery may be in protection mode or drained. Plug in and charge the speaker.
Low battery prompt tone	• Please recharge the speaker. For a full charge the speaker will take 3.5-4 hours.
Battery does not charge	• Make sure you are using a USB cable provided by DOSS or from the qualified manufacturer. • Use a different USB cable.
Speaker does not pair with the mobile device	• On your mobile device, turn the Bluetooth feature off and on. Remove your speaker from the Bluetooth list on your device. Pair your device again. • Pair to different device. • Clear your speaker's pairing list. Pair your device again. • Reset your speaker.
DOSS SoundBox Pro Speakers do not pair together manually	• Disconnect the Bluetooth, press and hold the "ADD" button separately until it flashes white. Wait for auto pairing.
No sound	• Please select SoundBox Pro as the default playback device. • Increase the volume on your speaker, and on your device/music source. • Make sure the sound prompts are on. Press the Bluetooth button to hear the prompt tone. Make sure you are using the correct device. • Use a different music source. • Pair a different device. • If two devices are connected, pause your other device.

No sound from a cabled device	• Make sure the device is on and playing music Increase the volume on your speaker and device. • Make sure the device is properly connected through the cable. • Try using a different cable. • Try connecting to a different device.
Poor sound quality/ buzzing sound	• Try using a different music source. • Try pairing a different device. • If there are two devices connected, disconnect the second device. • Increase the volume on device. • Check the device's audio settings. • Charge your speakers until fully charged.
The laptop reminds to install driver.	• This driver is not special for SoundBox Pro, it's for your laptop Bluetooth function, please the customer service of laptop or windows for help.
Can't turn off the speaker	• Use the needle to press and hold the "RESET" button in the reset port.
Auto power off	• Contact DOSS customer service at **support@dossav.com** to disable auto power off by firmware upgrade.

12. Warning

- Do NOT drop, hit or shake the device.
- Do NOT disassemble, repair or modify the speaker.
- Do NOT use cleaning products that contain benzene, solvents or alcohol.
- Do NOT expose the speaker to excessive heat or direct sunlight for prolonged periods of time.
- Do NOT store the device in a place with high humidity or dust.
- Do NOT place heavy objects on top of the speaker.
- Do NOT use the speaker near a microwave oven or wireless LAN products.

DOSS

For updates, promotions, and experience sharing, join our customer community.

@dossav
@dossfans

@dossdirect

www.dossaudio.com

support@dossav.com

1-833-275-3677 Mon-Fri 9AM-5PM PDT（USA）