TempPro

Indoor Humidity/Temperature Monitor
Instruction Manual

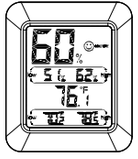

50-V20250917 EN

General Warning

⚠ DANGER!

This device contains electronic components
which operate via a power source (power supply and/or batteries). Do not let children use the device while unattended. Only use the device as described in the manual, otherwise you run the risk of an electric shock.

⚠ DANGER!

Do not expose the device to high temperatures.
Use only the recommended batteries.
Do not shortcircuit the device or batteries, or throw them into a fire. Excessive heat or improper handling could trigger a short-circuit, a fire or an explosion!

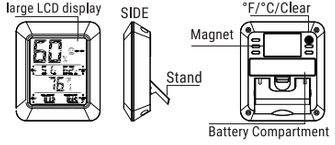

1. Display: Displays the current humidity and tem-perature, and record maximum and minimum humidity/temperature.
2. °C/°F/Clear Button: Press once to change the temperature display to either °C or °F. Press and hold for 2 seconds to clear the record maximum and minimum humidity/temperature readings.
3. Battery Compartment: Holds 1 x AAA battery to power the unit.
4. Comfort Level: 3 icons(😐, ☺, 😐)
   If humidity is below 30%: ☹ (Dry)
   If humidity is between 30% to 60% AND temperature is between 68°F ~ 79°F(20°C ~26°C): ☺ (Comfort)
   If humidity is above 60%: 😐 (Wet)
   If none of these conditions are met: No Icon
5. Totally wireless tabletop and magnet mountable design.

Before First Use

1. Insert or Replace Battery: Insert 1 x AAA battery with correct polarity (+) and (-) as indicated.
2. Do not immerse product in water.
3. The humidity and temperature monitor is now ready to use.

Care of Your Humidity/Temperature Monitor

- Do not leave exposed to extreme high or low temperatures since this may cause damage to electronic parts and plastics.
- Remove battery if planning to store for more than four months

Specifications

1. Temperature range: -58°F ~ 158°F (-50°C ~ 70°C)
2. Humidity range: 10% ~ 99%
3. Comfort display: DRY, COMFORT, WET
4. Temperature display unit: °C/°F selectable
5. Temperature Resolution: 0.1°C/°F
6. Humidity Resolution: 1%
7. Refresh rate: 10 seconds
8. Power supply: 1 x AAA 1.5V battery

Disposal



Meaning of the "Dustbin" Symbol

- Protect our environment: do not dispose of electrical equipment in the domestic waste.
- Please return any electrical equipment that you will no longer use to the collection points provided for their disposal.

- This helps avoid the potential effects of incorrect disposal on the environment and human health.
- This will contribute to the recycling and other forms of reutilisation of electrical and electronic equipment
- Information concerning where the equipment can be disposed of can be obtained from your local authority.



CAUTION: Batteries/rechargeable batteries must not be disposed of with household waste!

- The batteries must be removed from the appliance
- Take spent batteries to the appropriate collection point or to a dealer.
- Your town or local authority can provide information about public collection

points.This symbol can be found on batteries/rechargeable batteries which contain hazardous:



- Pb = contains lead
- Cd = contains cadmium
- Hg = contains mercury
- Li = contains lithium

Limited One-year Warranty

TempPro warrants this product to be free of defects in parts, materials and workmanship for a period of one year, from date of purchase.

Should any repairs or servicing under this warranty be required, contact Customer Service by phone or email for instructions on how to pack and ship the product to TempPro.

This warranty gives you specific legal

rights and you may also have other rights which vary from state to state.

Customer Service

Call or Text: 1-877-515-7797
(USA & Canada only)
Email: service@temppro.com
Hours: Weekdays 8:00 AM-8:00 PM EST
(USA & Canada only)