Parts drawing

Armrest

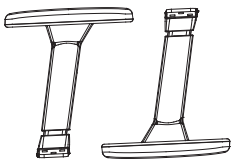

Base

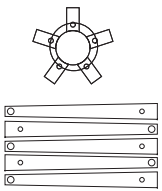

Tilt mechanism

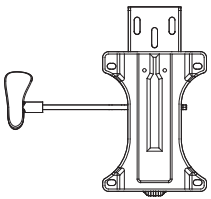

Footrest

(Cette fonction n'est pas disponible pour les repose-pieds)

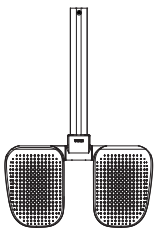

Gas cylinder



Wheels



Headrest



decorative cover



Backrest support



Seat cushion



Backrest

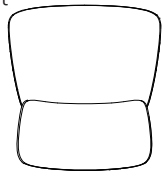

A L-wrench x1



B Screws of armrest (M6x35) *6



C Screws of tilt mechanism (M6×20) *4



D Screws of backrest (M8×25) *3



E Backrest support screw (M6×16) *4



F Foot support fixing screw (M6×20) *2



G Screws of Base (M6×12) *5



01 Display of installation steps

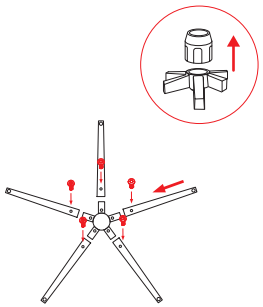

1. Pull up the decorative cover first, then insert the chair legs into the base core, and then tighten with the G screws.



2. Insert the wheels into the assembly holes of the chair legs, and the insertion can be assisted by rotating the wheels.

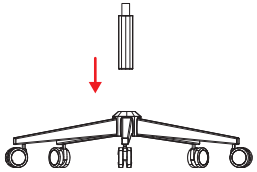

3. Install the base decorative cover first, and then insert the gas cylinder into the assembly hole of the chair foot.

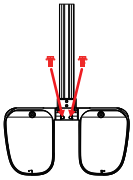

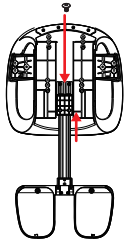

4. Assemble the footrest rod and footrest with two F screws

5. Screw out the pre installed screws on the footrest slide bar, then place the slide bar into the limit piece, and fix them by the screw
(ignore this step for models without foot rest)

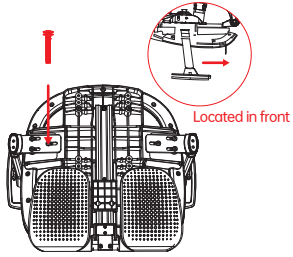

6. Distinguish between the left and right armrests, tilt the armrest handle towards the front of the seat cushion, and use B screws to fix the armrest on the seat cushion

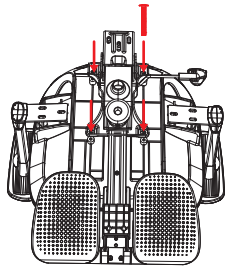

7. Place the tilt mechanism on the cushion and secure it with C screws

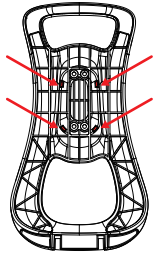

8. Press the decorative cover inward with your hand

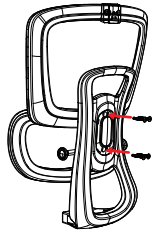

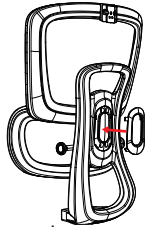

9. Lock tightly against the back component with 4 E screw. Press the decorative cover into the backrest

01 Display of installation steps

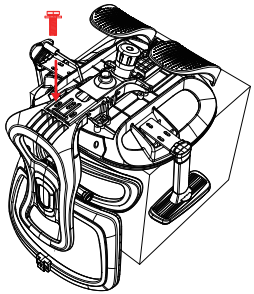

10. Use D screws to fix the backrest on the tilt mechansim

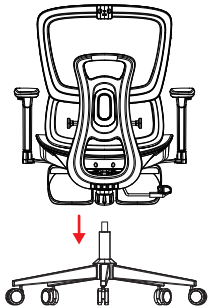

11. Insert the cylinder into the tilt mechanism hole

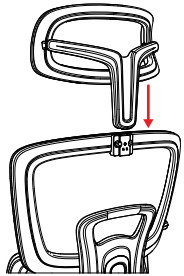

12. Align the headrest with the slide and push it in



13. Finish the installation.

02 Function description

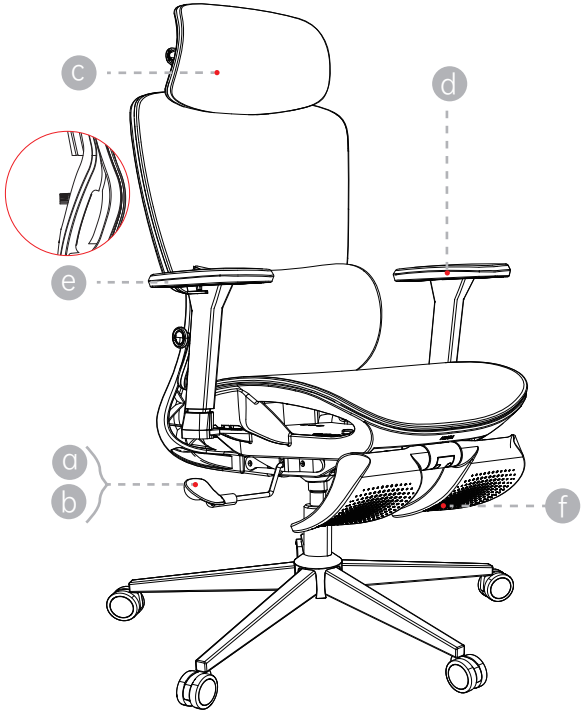

a Seat height adjustment function

Instead of sitting on the cushion, rotate the right operating lever upward to raise it; Sit on the chair and rotate the operating lever upward to lower it.



b Backrest function

Sitting on a chair, lean back and pull out the right operating lever at the same time. The chair leans back and can be inserted into the operating lever to fix the angle; Pull out the operating lever and force the back backward to spring back the seat back.



c Headrest lifting rotation function

Pull up and press down to realize the lifting function of the headrest; Turn the head restraint back and forth to realize the rotation function.

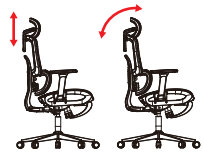

d Armrest moving up and down

Press and hold the button while pulling the handle, and the armrest can be raised and lowered.

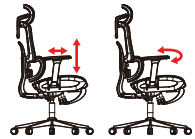

e Lumbar up, down, forward and backward movement function

Rotate the adjustment button behind the backrest to realize the forward and backward movement of the lumbar support; Hold the adjustment button and pull the backrest up and down to realize the up and down movement function.



f Footrest function

Pull out the footrest and turn it clockwise.

(This function is not available for footrest)



03 Precautions

1. When cleaning, please use a soft cloth to wipe.
2. For the use of product functions, please follow the instructions on the product display.
3. Please avoid using it in damp or pyrotechnic places, and avoid direct sunlight for a long time.
4. Please do not step on the chair or use the chair as a ladder, which may cause rollover.
5. Please note that this product can only be used by one person. More than two people will damage the stability of the product, which is dangerous
6. For your safety, it is strictly forbidden to disassemble the air bar.
7. To prevent falling, please ensure that the chair is evenly stressed during use.
8. To avoid damage and safety, please do not pull the chair quickly or forcibly, and do not sit on the arm of the chair
9. If any part of the chair is lost or damaged, please stop using it immediately.
10. It is prohibited for minors to install and adjust the product functions, which need to be installed and used under the supervision of adults.

04 Handling and storage

1. Move and place the furniture gently, and do not drag or push it hard to avoid loosening or breaking the foot rest and roller.
2. There should be an outer package for handling with care.
3. During reinstallation, furniture shall be properly adjusted after being placed to maintain normal use.
4. If it is not stored for a long time, it shall be covered with dust-proof and strong light proof packaging materials and stored in a dry and ventilated indoor environment.

05 Product Maintenance Guide

Tips for first-time use:

1. Because the product is packaged in a closed environment, it is normal to have a slight smell when it is first assembled and used.
2.You can eliminate the odor by putting some lemons, orange peels, tea leaves, etc., ventilate for 1-2 days, and use professional leather bag fragrances, which can also help to remove the odor as soon as possible.
3.When using the chair, it is necessary to minimize the use in extreme environments such as exposure and humidity. In order to prolong the service life of the chair, it is recommended to use it in a dry, room temperature room.

The maintenance method of the mesh cloth surface:

1. If there is dust on the mesh cloth, you can blow it with a hair dryer for 1-2 minutes;
2. If the mesh cloth is dirty, it is recommended to use a wet towel, drop a drop of detergent, and lighten the dirty place Gently wipe for 1 minute.

Leather fabric maintenance precautions:

1. When cleaning the chair, you can use a soft damp cloth to gently wipe it, and then use a soft dry cloth to dry the clean part. If the dirt is stubborn, you can use a neutral detergent such as leather cleaner to clean it;
2. Do not use bleach, corrosive liquids, disinfectants, organic solvents (such as gasoline, alcohol, paint and detergents, etc.) to wipe
3. When using this product in clothes that are easy to fade, it is recommended to add an external seat cushion to avoid staining the product.

Periodic Maintenance and Disassembly Instructions

1. Place the computer chair on a flat ground, and keep the ground clean, especially to remove the cords and hair on the ground in time to prevent the wheel from running poorly
2. In order to have a better user experience, it is recommended that you re-tighten the chassis screws, armrest screws and backrest connecting screws of the chair when the chair is used for 6 months to avoid the problem of abnormal noise and shaking due to loose screws.
3. When abnormal noise occurs in the chassis, it is recommended that you use lubricating oil on both sides of the bearing, such as butter (calcium-based grease), bearing oil.

06 Troubleshooting

Fault phenomenon	Cause analysis	Exclusion method
The furniture is unstable for a long time	Loose parts	Tighten the link fittings
The chair lift and recline functions fail	The top position may not be reached or locked	Check the top position and lock position
Difficult to deal with surface stains	Strong stain adhesion	Wipe with Tianna water

07 Tips

1. In case of any abnormality during receiving, please contact the online customer service and take photos on the spot. In case of any dispute, the receiving photos shall prevail.
2. After unpacking, please check the number of accessories according to the instructions. If you find that the accessories are missing, please carefully check every corner of the packaging box. If you still don't have any, please contact the online after-sales customer service, and we will arrange to send them back; If the parts are damaged, please take a picture on the spot and contact the online after-sales customer service. After confirmation, the problem parts will be sent back according to the information provided by the customer service, and we will arrange to replace the parts and resend them after we receive them.

08 Special instructions

his manual does not contain any position expression or other implication, it is only used as a service guide. For this reason, our company reserves the right to modify the manual, which may be updated at any time without notice. If you need the latest product information of our company, you can call our company directly.