

INSTRUCTIONS TO REWIRE A ROTARY DRIER

EQUIPMENT REQUIRED

Scissors

Measuring Tape (optional to check arm distance)



1) Choose appropriate length line.



2) Position Handgrip to second position.
For Variable Heights 9 visible holes
between Top & Bottom Handgrip.




3) To start wiring loop wire around end cap and leave a tail around 4 inches.




4) Proceed to next Arm and loop twice
Following same procedure until you have
come back to the first Arm. Loop once.




5) Using other end of wire. Thread line
through next hole arm and continually in
a spiral fashion to centre of dryer.

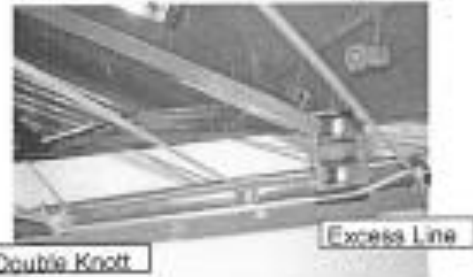

6) Tie off centre initially. To tension pull
line through until desired tension is
achieved and tie.

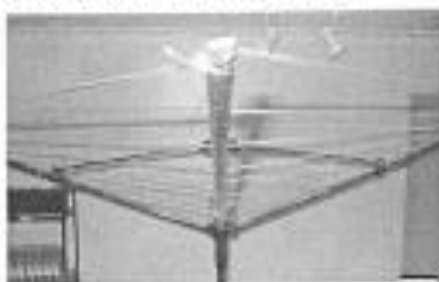

7) Returning to the first arm tie off the 4"
tail and cut to suit.

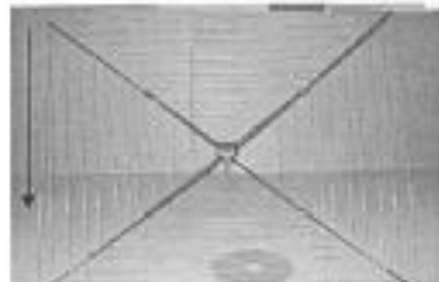

8) Aerial view showing completed line.
Note: Arms correctly aligned when wired.