




# Item NO:HB-BZ567M-A

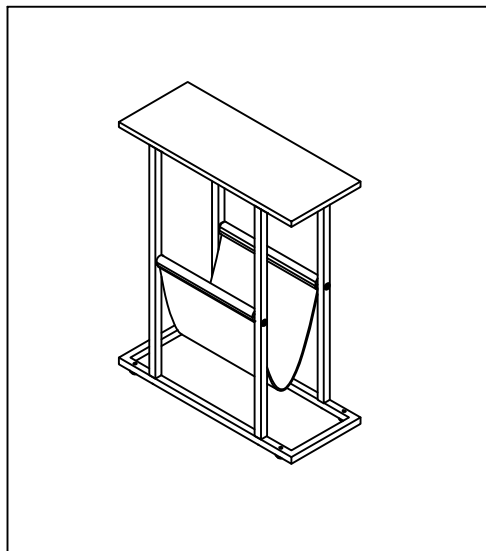

1. Please read this assembly instructions carefully before assembling the product;
2. Cut surfaces might be sharp, do not touch the cut surface of the tube;
3. Keep your product away from sulfuric acid, and hot or burning sources; do not expose the product directly to sunlight.

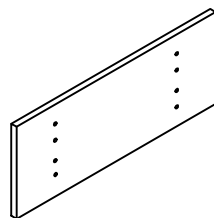

**A**  
1PC

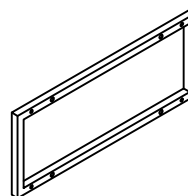


**B**  
1PC




**C**  
4PCS



**D**  
2PCS

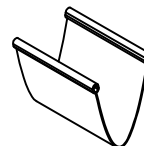

**E**  
1PC




**a**  
8PCS



**b**  
8PCS




**d**  
4PCS



## Step 1

**A\*1**  
**C\*4**  
**b\*8**


When assembling, hold it down with your hands so that it lines up without gaps

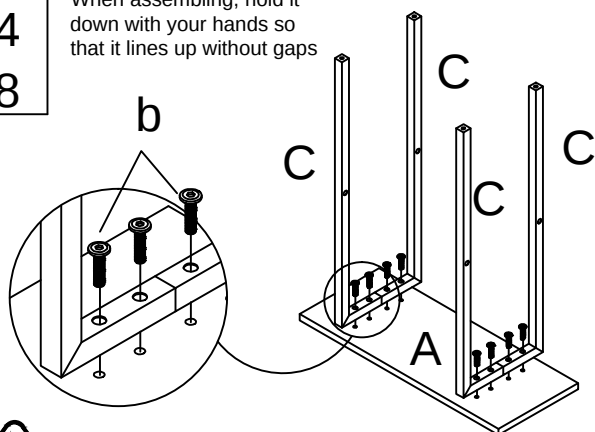

Do not lock the screw too tightly to prevent the tube lock from being dented


## Step 2

**D\*2**  
**E\*1**  
**a\*4**

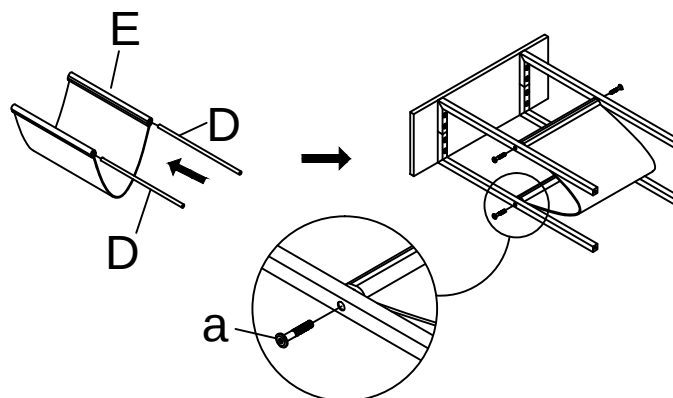


## Step 3

**B\*1**  
**a\*4**  
**d\*4**

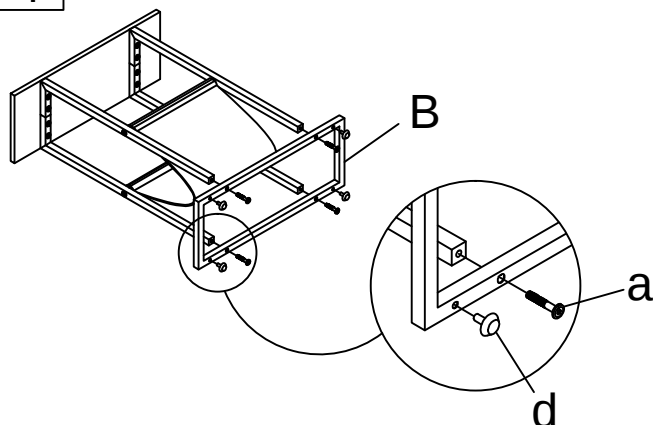

## Step 4

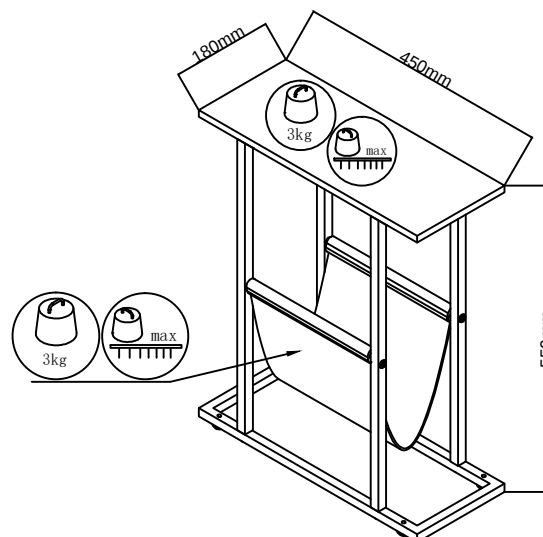

MADE IN CHINA