

1. Remove the Factory Third Brake Light from Your Car



2. Pull out the three halogen bulbs from the factory 3rd brake light

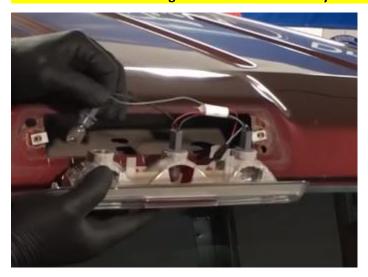

3. Remove the three halogen bulbs from plugs

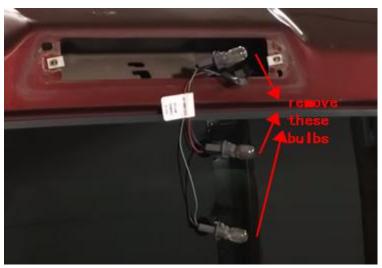

4. Plug our third brake light into where the halogen bulb was removed



Finally install the new 3rd brake light back to your vehicle with the factory screws

If still have difficulties on installing, please watch this video: https://www.youtube.com/watch?v=V43CdrR_ial