


Core board upgrade instructions

1: Find a U disk and format it into FAT32.

2: Unzip the upgrade file and copy it to the root directory of this USB flash disk, as shown in Figure 1 below, and plug the USB flash disk into the USB port of the machine.

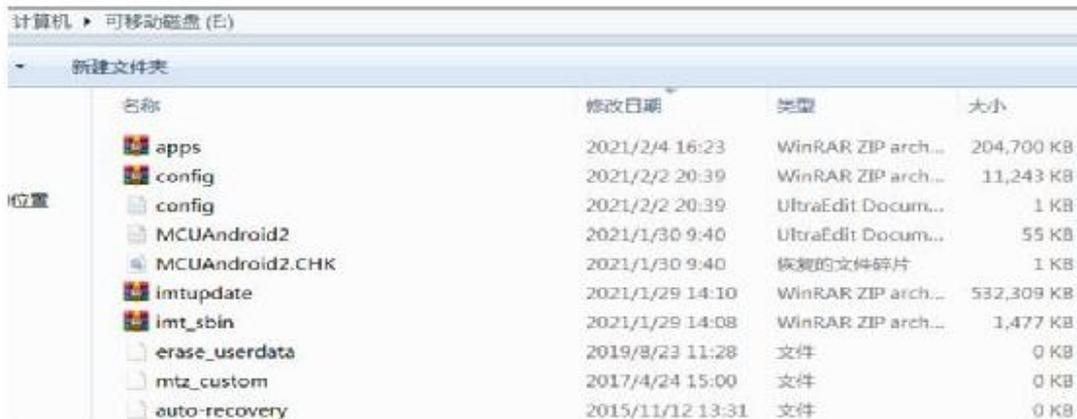

Picture 1

3: Click: Vehicle settings ---> General ---> version information ---> upgrade the core board, then wait for the machine to restart and complete the upgrade automatically, as shown in Figure 2 below.

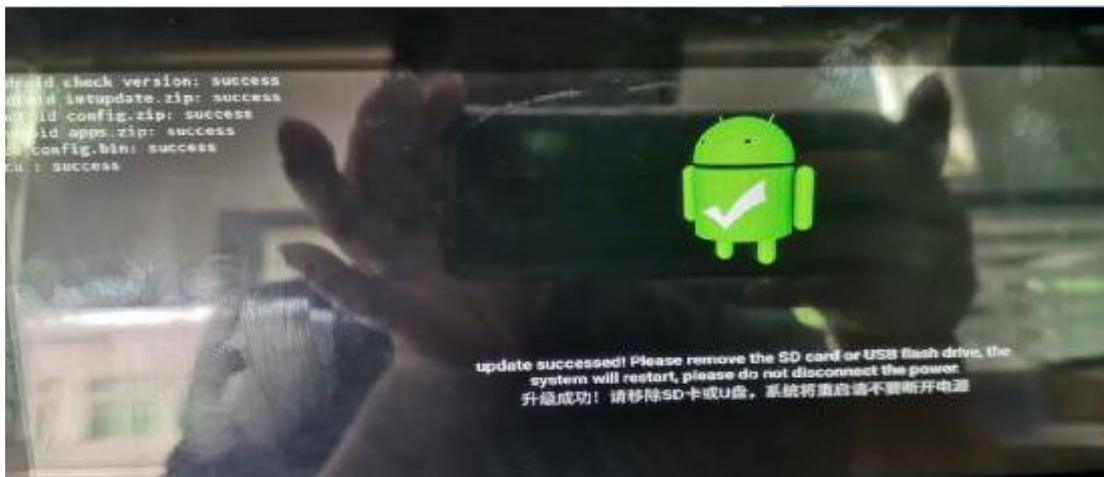


Figure 2

4: Then unplug the U disk and wait for a period of time before the machine starts automatically.

5: If there is a car model in the machine, you don't need to copy it again. Click file manager > built in disk HD to check whether there is teshila in the root directory of the disk_ car_ The car model folder corresponding to the car color of XXX (Note: the name of the car model folder corresponding to each color is different, and the corresponding relationship is shown below). If not, proceed to the next step.

White car	teshila_car_white
Red car	teshila_car_red
Blue car	teshila_car_blue
Black car	teshila_car_black
Silver car	teshila_car_silver

6: Copy the car model folder to the U disk, then insert the U disk into the machine, and copy the car model folder in the U disk to the root directory of the machine disk through the file manager, as shown in Figure 3 and Figure 4 below.



Figure 3



Figure 4