


Quick Start (Assembly Instruction)



1. Using the 5 mm Allen Wrench loosen the handlebar clamp.

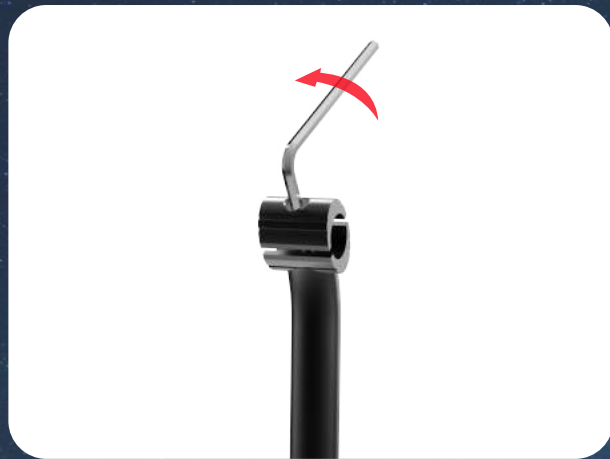

2. Insert the handlebar.



3. Tighten the screw.