



A small wooden block may need to be added with some drawer styles as shown above.

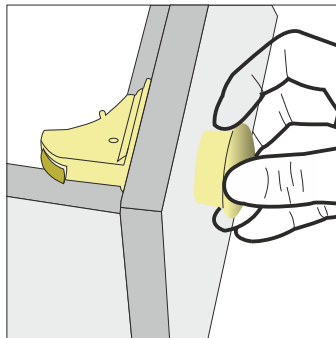

The magnetic lock can be attached as shown above if the dresser has enough clearance. The lock can also be mounted vertically if needed and will still operate normally.

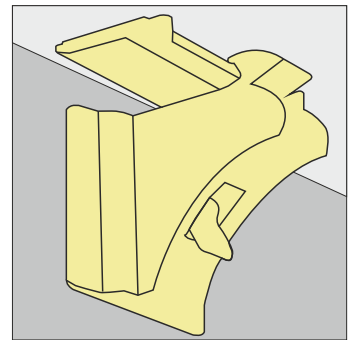

The magnetic lock and striker plate can be installed in several different positions as needed.