


WALL STUD INSTALLATION

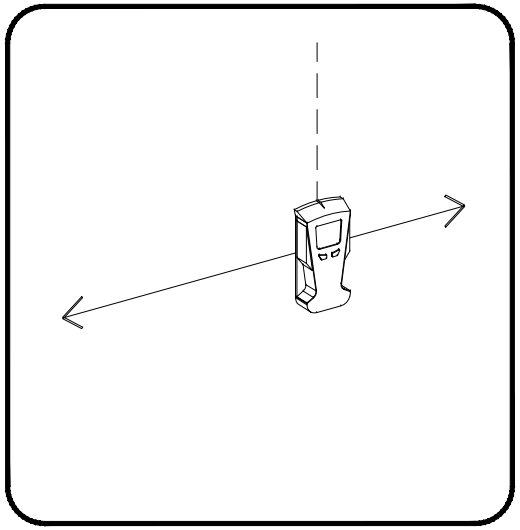


STEP 1: LOCATE A STUD USING STUD-FINDER TOOL

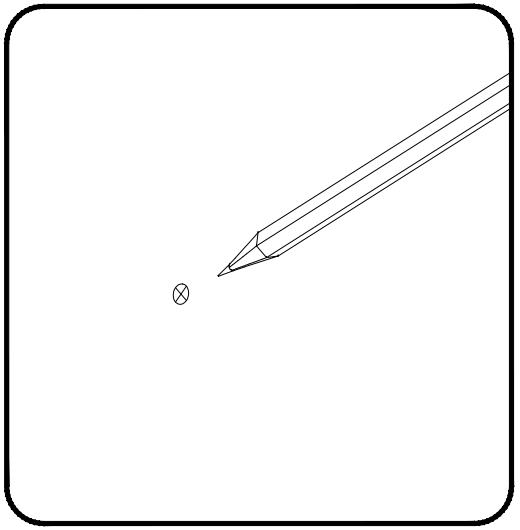


STEP 2: MARK THE STUD

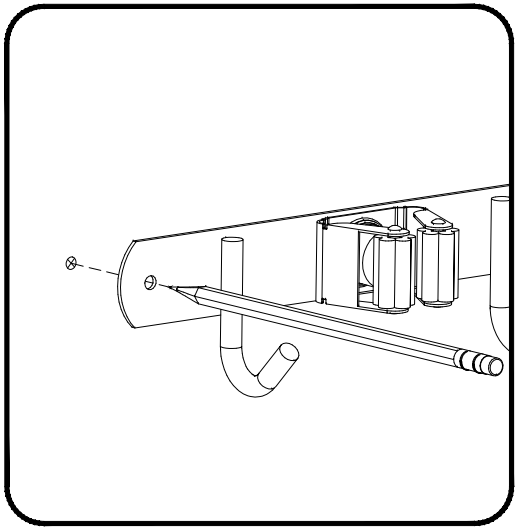


STEP 3: ALIGN BROOM HOLDER TO THE MARKED HOLE AND MARK ALL OTHER HOLES

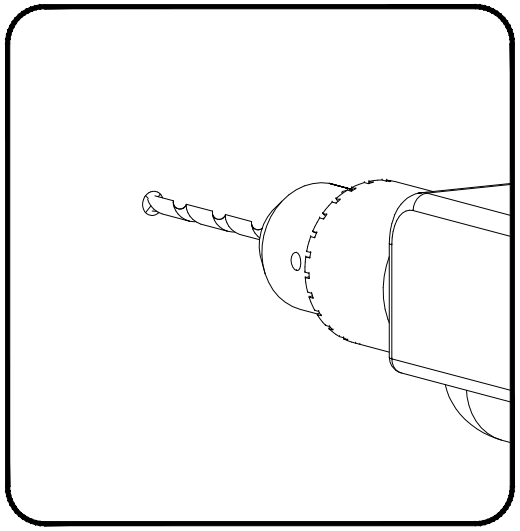

STEP 4: DRILL ALL 4 ENTRY HOLES

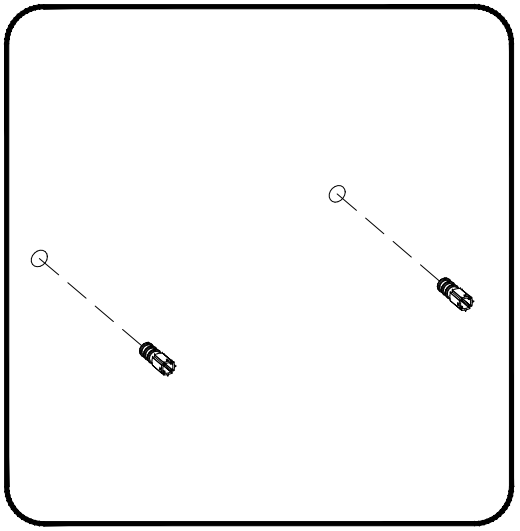


STEP 5: INSTALL 2 CENTER DRYWALL ANCHORS

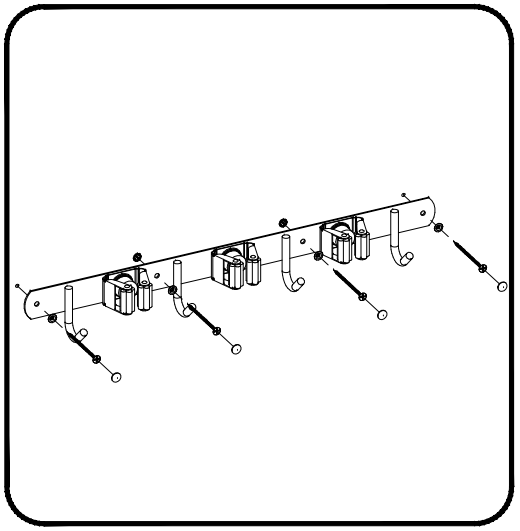


STEP 6: INSTALL THE BROOM HOLDER WITH THE SCREWS AND SCREW COVERS


INSTALL ON DRYWALL

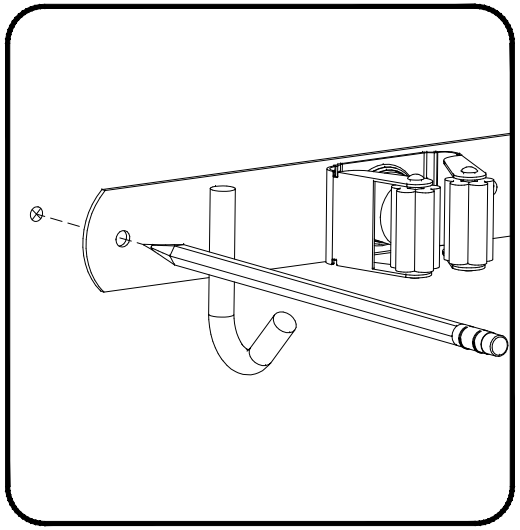


STEP 1: USE THE PRODUCT TO MARK ALL 4 HOLES

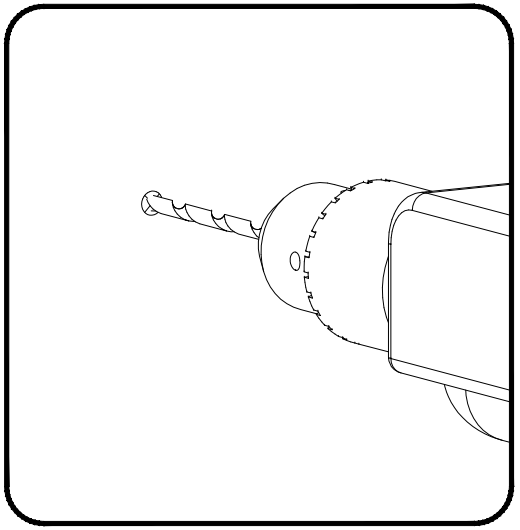

STEP 2: DRILL HOLES ON THE MARKED POINTS

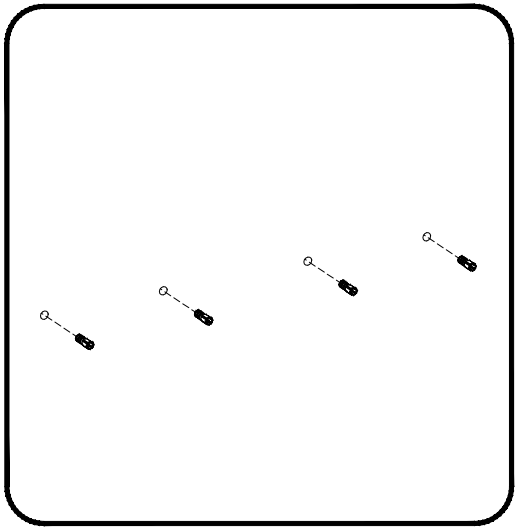


STEP 3: HAMMER IN THE DRYWALL ANCHORS

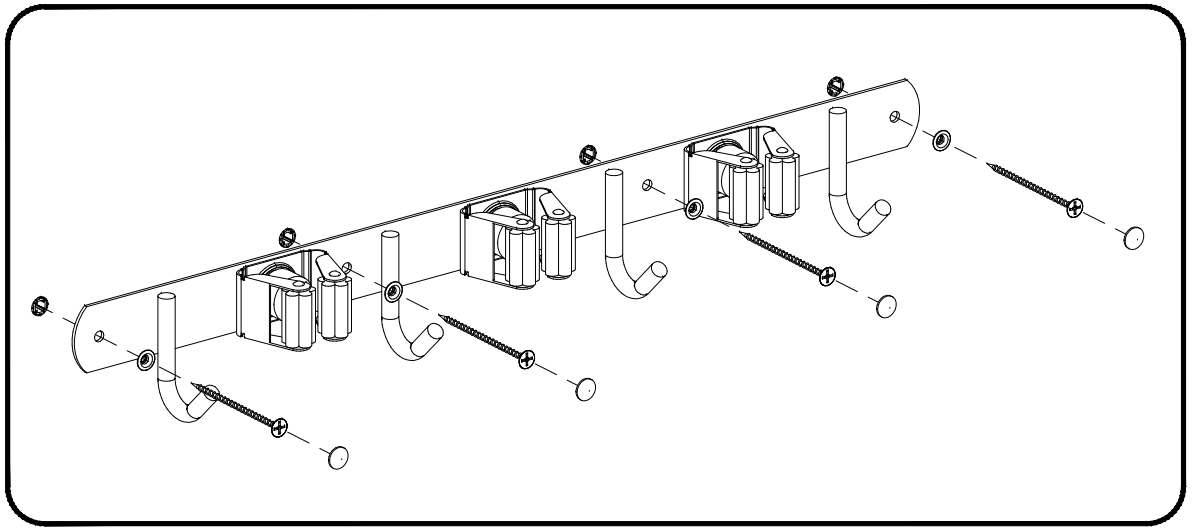


STEP 4: INSTALL THE BROOM HOLDER WITH THE SCREWS AND SCREW COVERS

INSTALL ON OTHER


NOTE: ONLY USE WHEN HARDWARE IS INAPPLICABLE (IE. ON CERAMIC TILES). RECOMMENDED FOR LIGHTER ITEMS ONLY. ADHESIVE HAS A SMALLER HOLDING CAPACITY THAN HARDWARE.

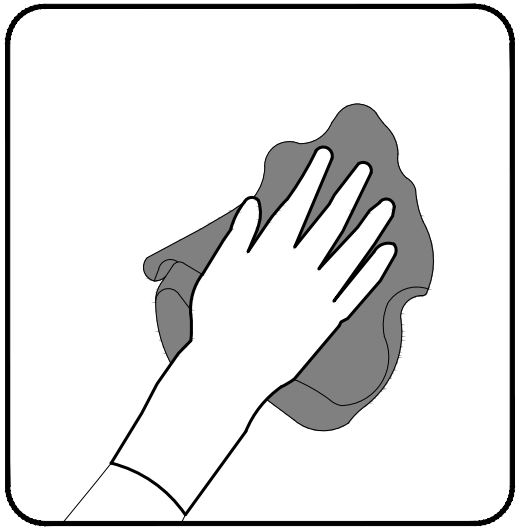


STEP 1: CLEAN THE SURFACE WHERE THE ADHESIVE WILL BE APPLIED

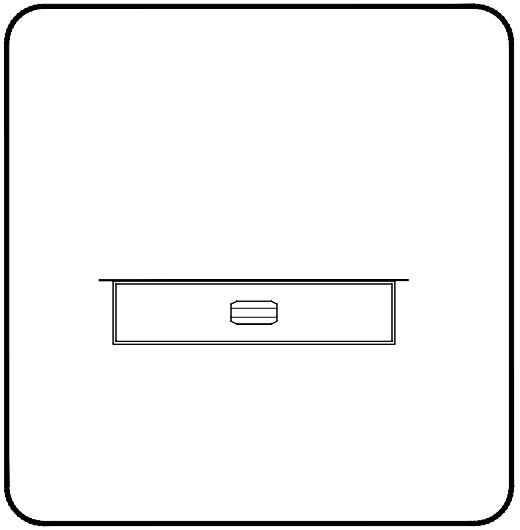


STEP 2: DRAW A LEVEL LINE AT THE LOCATION OF INSTALLATION

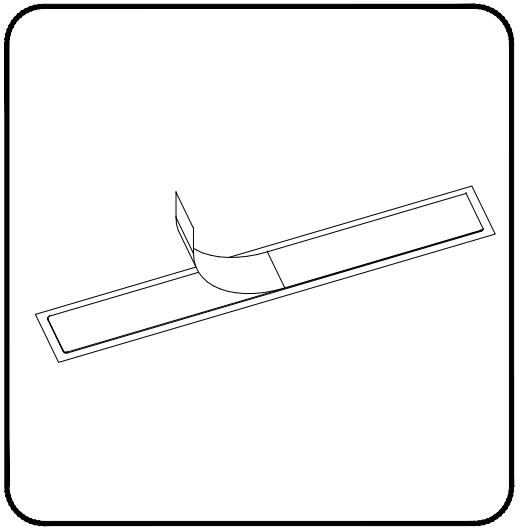


STEP 3: REMOVE THE THICK BACKING FROM THE ADHESIVE STRIP

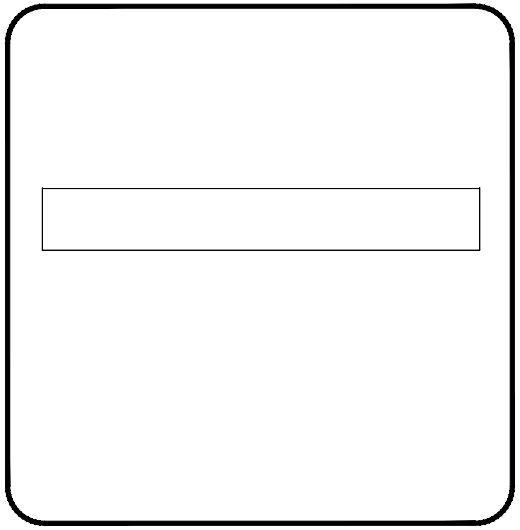

STEP 4: STICK THE ADHESIVE PARALLEL TO THE LEVEL LINE

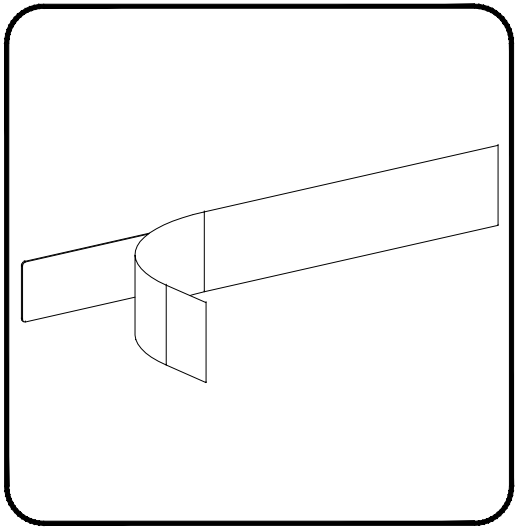

STEP 5: REMOVE THE THINNER BACKING

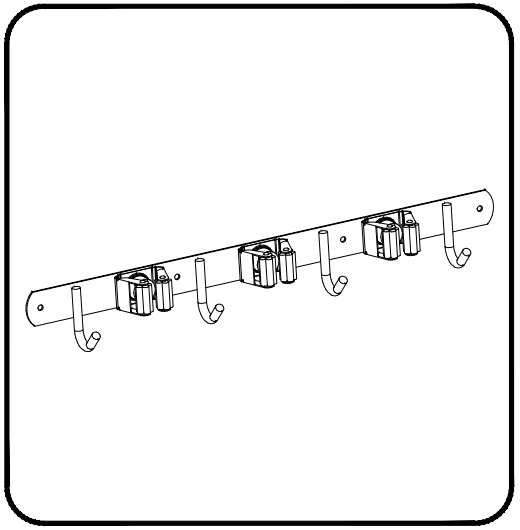

STEP 6: ATTACH THE BROOM AND MOP HOLDER AND WAIT 48 HOURS BEFORE USING