


Insert **TubShroom**
into the drain.
Installs in seconds

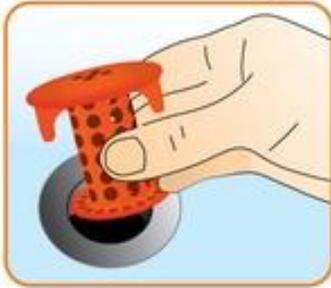

The hair wraps up
neatly around
the cylinder



All the hair is in
one place and
ready for clean up



Remove the hair
with one
effortless move



SPECIAL INSTRUCTIONS



Not Compatible With
Walk-in Shower Drains.
Look for ShowerShroom™
in 2017



Make Sure Your Drain
is a Standard 1.5" in
Diameter and Equipped
with Crossbar.



Clear the Drain
if Clogged
Before Installation



TubShroom® Must
Sit Raised about 0.5"
For Optimal Performance
as Illustrated