



INSTRUCTION


Letting you have a comfortable and artistic home is our consistent pursuit. Our products include accent chair, office chair, ottoman, dining chairs and more.

 SherryFurniture@outlook.com

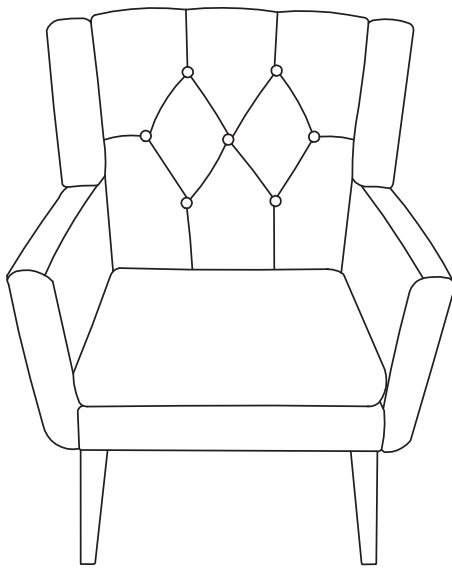

This single chair may take up to 15 minutes to install, please read the instructions below to familiarize yourself with the parts and pre-assembly steps.

NO	DESCRIPTION		QTY
A	Chair Front Leg		2
B	Chair Back Leg		2
C	Left Chair Arm		1
D	Right Chair Arm		1
E	Chair Back		1
F	Chair Seat		1
①	Bolts	(M8X60MM) 	8
②	Allen Wrench		1
③	Washer	(M8X22MM) 	8
④	Lock Washer		8
⑤	Butterfly Nut	(M8*60) 	1
⑥	Washer	(M8*28MM) 	1

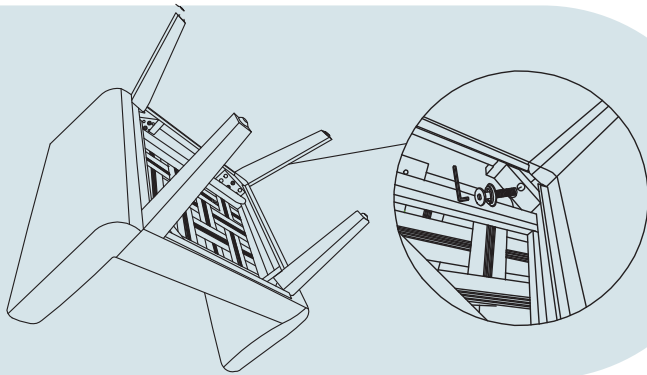


1

Place the chair seat (F) on a clean, undamaged surface with the bottom facing up, as shown above. Take the chair front legs (A) out of the side. Secure the legs with bolts (①), washers (③), lock washers (④). Then use the Allen Wrench (②) to tighten the bolts. Repeat the same steps to install the chair back legs (B).


Place the chair face up and test for stability. Add or remove washers(③) where needed for stability.

NOTE: The use of washers is optional to help relieve minor shaking.

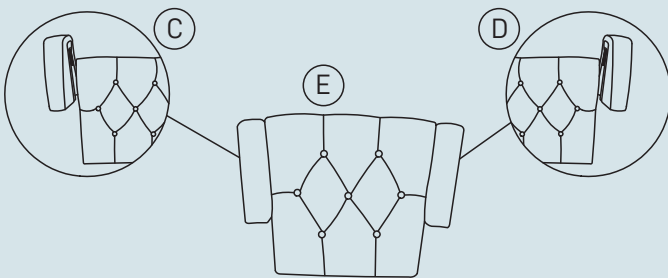


2

Take out the chair arms (C) and (D) and fix the chair arm from top to bottom respectively

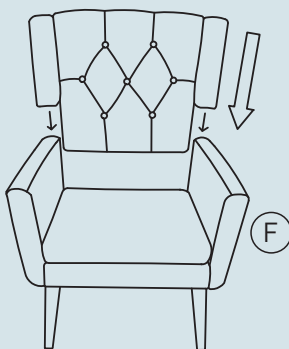

3

Insert the chair back with chair arms (picture 2) installed into the chair seat (picture 1) and push back

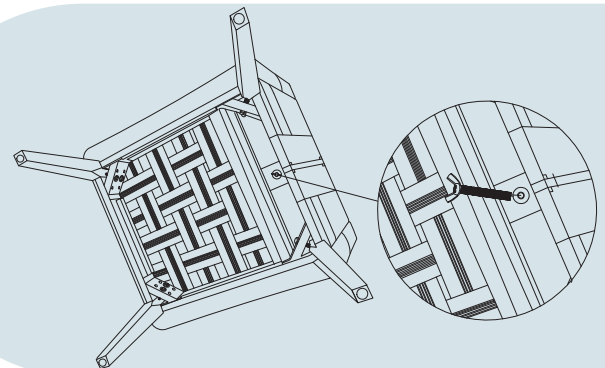

4

Turn the chair upside down and install butterfly nut (⑤) to secure the chair back(E) and chair seat(F), add washers (⑥) for stability.