




Instruction


MODEL: FS008-40

Package Contents:

Tools Required (Not included): Drill, Hammer, Screwdriver, Pencil


A Bracket  2PCS	B Board  2PCS	C Wall Anchor  14PCS	D Wall Screw  14PCS	E Shelf Screw  4PCS	F Level  1PC
---	---	--	---	---	--

Step1 Mark Holes Location

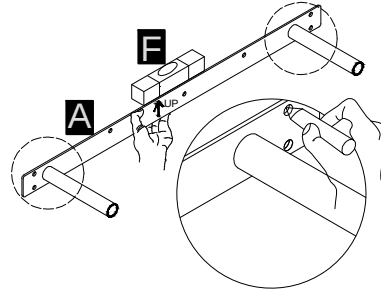




WARNING:
The arrow symbol (↑) on the bracket [A] upward.

Step2A For Wood Studs

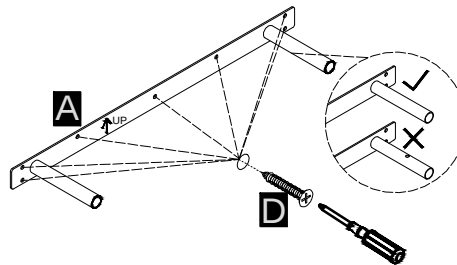


WARNING:
Wall anchors [C] are NOT necessary for this step.
Screw the bracket to the wall with arrow symbol (↑) upward.

Step2B For Concrete or Brick Walls

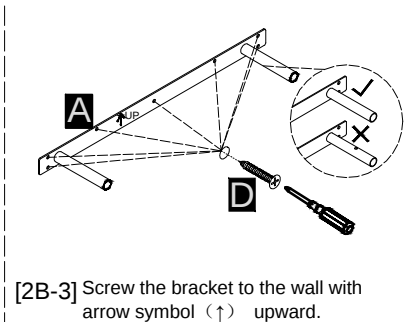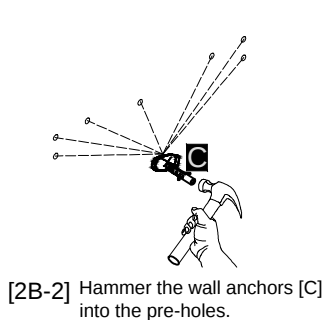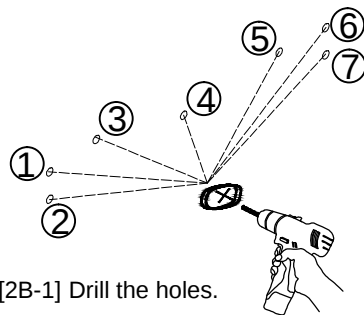


Step3 Slide the Board [B] Into Bracket [A]

WARNING: The holes on the boards facing down.

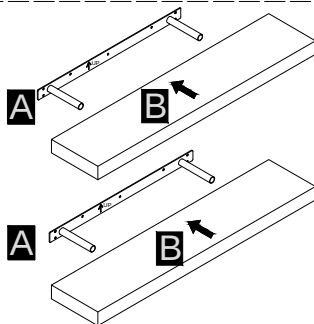

Step4 Use Short Screw [E] Fixed the Boards.

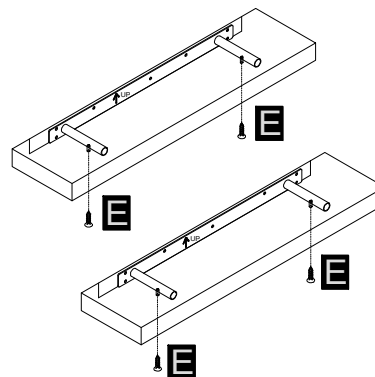

IMPORTANT SAFETY INFORMATION

NOT all parts and hardwares included will be used.

Each set additional included 1 screw and 1 anchor as backup.

DO NOT exceed weight capacity. We cannot be liable for damage or injury caused by improper mounting, incorrect assembly or in appropriate use.

Any concerns or questions, please feel free to contact our customer service. Thank you.