



Updated Installation Guide--2021. 11. 20

STEP 1

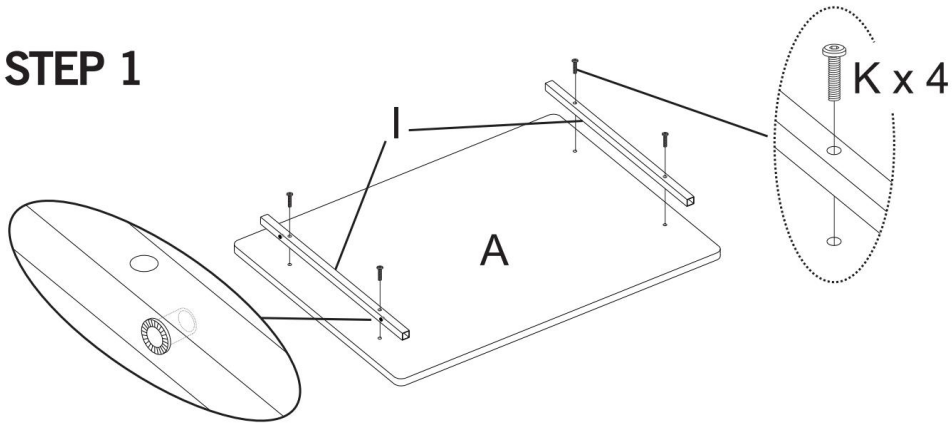


Install the tubes (letter I) to the top plate A. (Note: place the metal nuts facing outward left and outward right.)

STEP 2

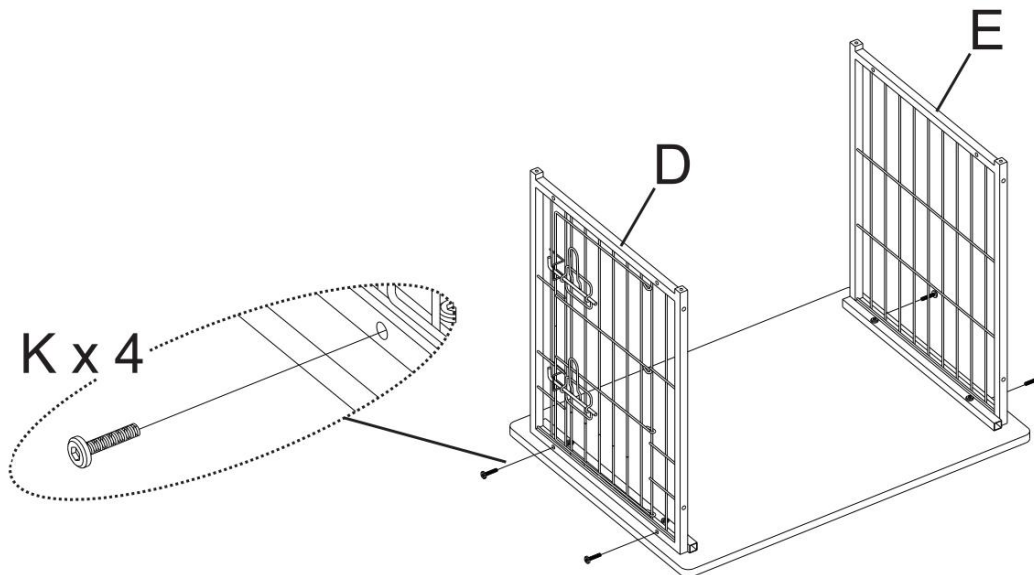


Install panel D and E on the tubes (letter I); (Note: Do not swing panel D or E.)

STEP 3

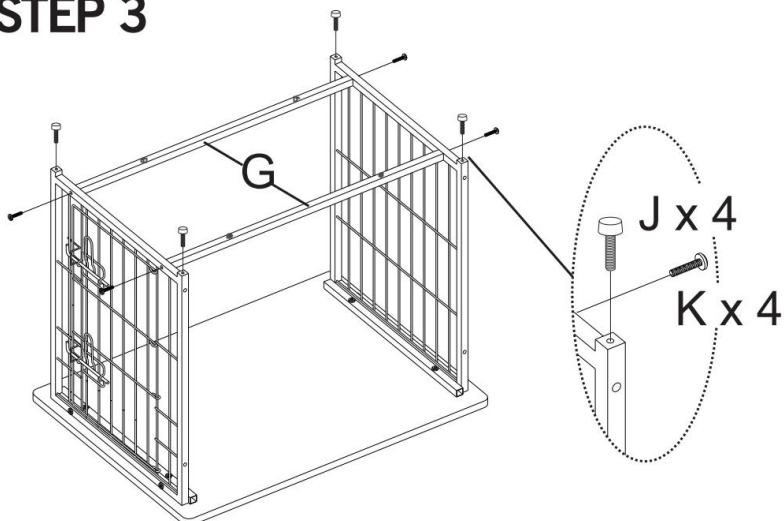



Connect panel D and E with tubes (letter G), then install leveling feet. (Note: hold tube G with one hand, screw with the other hand, install one tube first, then the other, and finally tighten the 4 screws.)

STEP 4

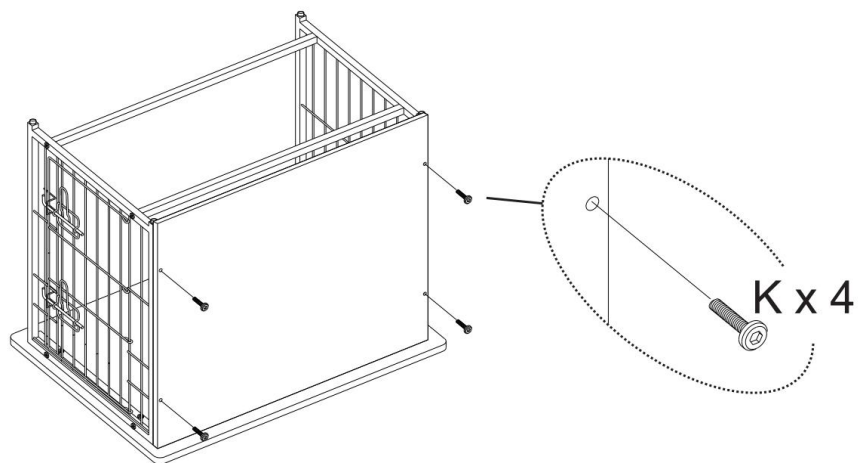


Connect panel D and E with backplane B. (Note: Because panel B has a corrective effect, so please align the 4 holes with 4 screws first and then tighten the 4 screws).

STEP 5

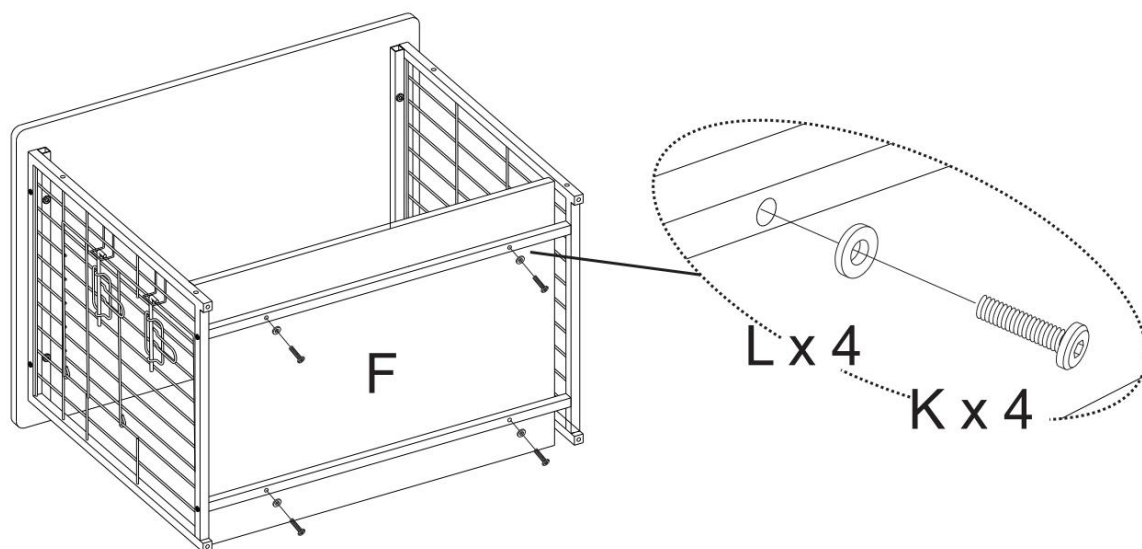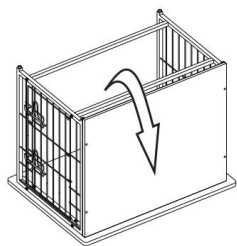


Rotate 90° to put the product down and install the base plate F to the tube G. (Note: Because panel F has a corrective effect, so please align the 4 holes with 4 screws first and then tighten the 4 screws.)

STEP 6

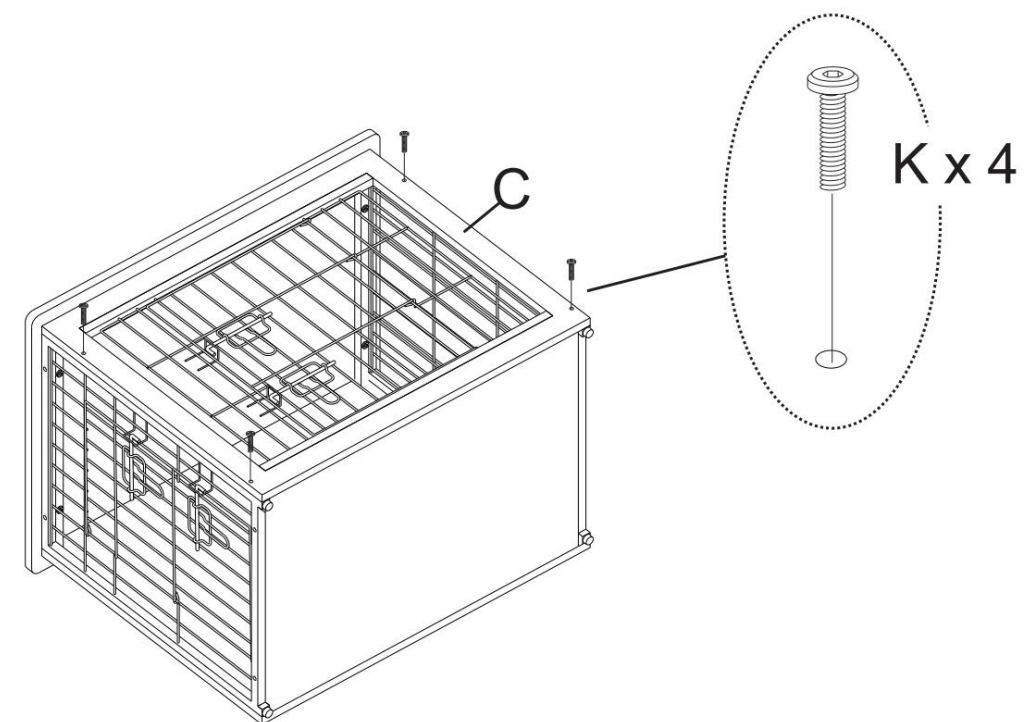

Connect panel D and E with front panel C. (Note: Because panel C has a corrective effect, so please align the 4 holes with the 4 screws first, then tighten the 4 screws.)

STEP 7

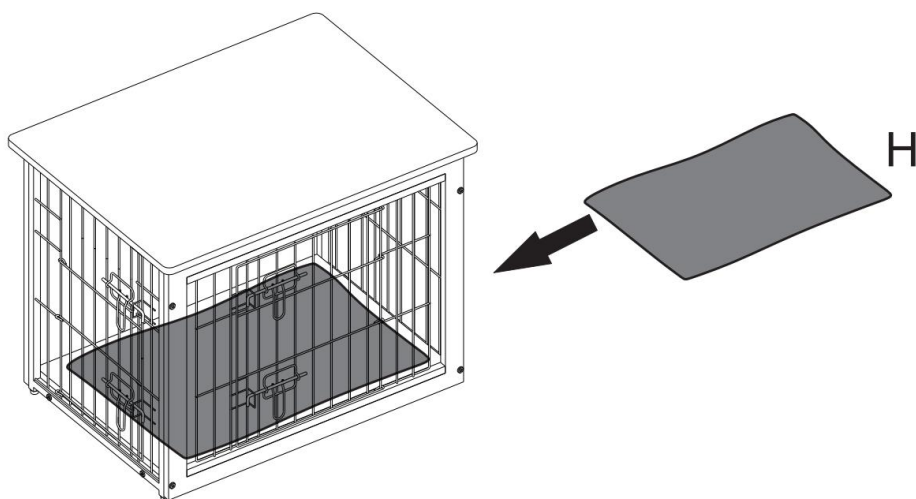

Rotate 90° to square up the product, open the door and put the mat H in.

Warm tips:

1. Because the holes in panels D and E are identical, you can swap the positions of panels D and E to meet your different directions.

2. If you need any help, please contact DWANTON customer service team through Amazon platform in time, we are honored to serve you!