



BDK USA INC.
AUTOMOTIVE ACCESSORIES
MANUFACTURING & DISTRIBUTION
WWW.BDKAUTO.COM

MT-600 HEAVY DUTY TAILGATE MAT 60" x 19.5"

INSTALLATION INSTRUCTIONS

1. Open truck tailgate and clean off any dirt or debris before installation (Fig. 1).
2. Unroll mat on top of tailgate and center it evenly. Check to see if any portions of the mat interferes with closing of the tailgate (Fig. 2).
3. Trim off any portions of the mat that interfere with opening/closing using a utility knife (Fig. 3).
4. Ensure the mat is still centered and determine which screw holes make direct contact with the metal portion of the tailgate. Mark these points where pilot holes will be drilled. Using a 9/64" drill bit, create pilot holes through the marks and into the tailgate (Fig. 4).
5. Once pilot holes have been drilled into the tailgate, secure the mat to tailgate using provided screws starting from the center and moving outward (Fig. 5).
6. Check once more that tailgate can be open and closed with mat installed. If not, more trimming may be required (Fig. 6).

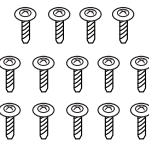
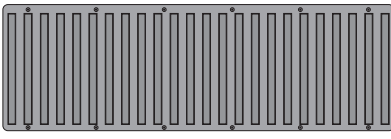




Tip 1: This product is meant to be used as protection for bare metal tailgates. Do not use for tailgates that already have a plastic protective liner.

Tip 2: To avoid drilling too far into the tailgate, mark the depth of the drill bit with tape.

Tip 3: Space the screws evenly to ensure a secure fit. Drill in the center first, then continue outward to avoid warping.

CUSTOMER SERVICE

For further questions or concerns email us anytime at help@bdkauto.com

INCLUDED	TOOL NEEDED
<p>3/4" SCREW (14 PC)</p>  <p>TAILGATE MAT</p> 	 <p>9/64 DRILL BIT</p>  <p>UTILITY KNIFE</p>  <p>SCREWDRIVER BIT</p>  <p>DRILL</p>

