



Assembly Instruction
Item# 600-4X
Medium Pet Crate End Table

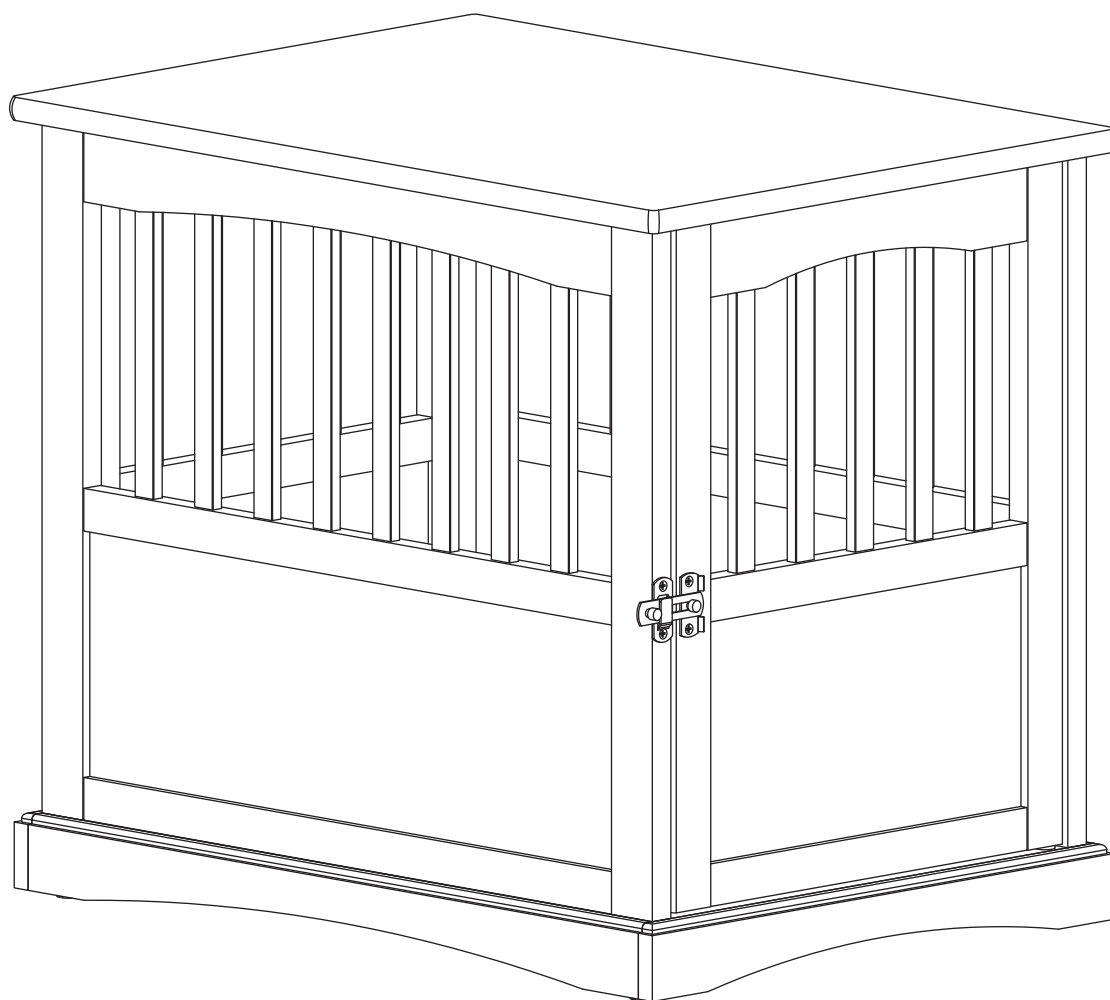


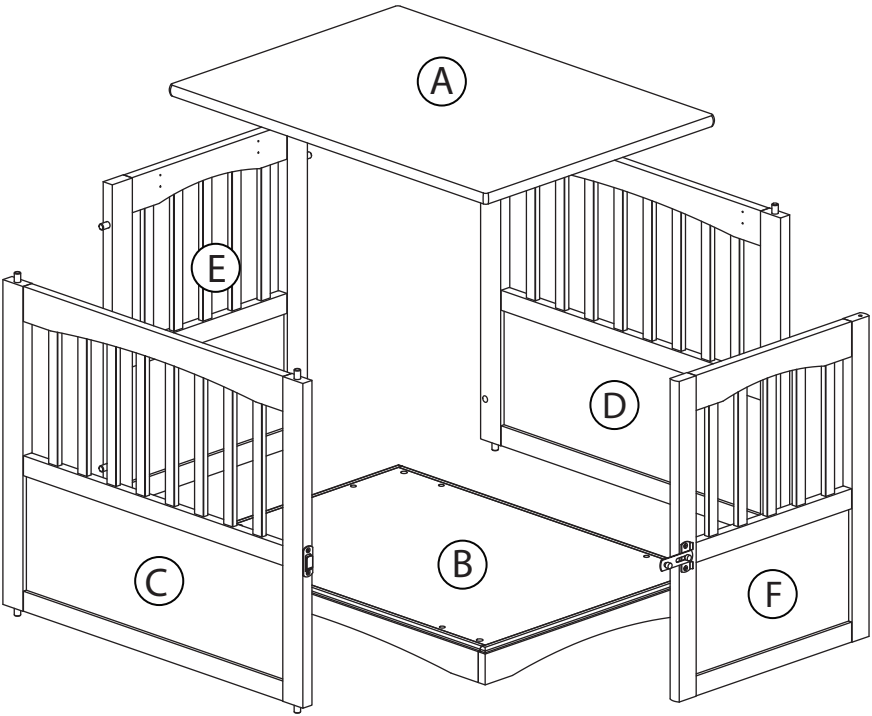

Parts List


(A)	Top Panel	1 Pc.
(B)	Bottom Panel	1 Pc.
(C)	Left Panel	1 Pc.
(D)	Right Panel	1 Pc.
(E)	Back Panel	1 Pc.
(F)	Door	1 Pc.

Hardware

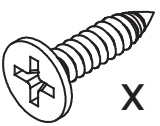


x 18

F6 x 5/8"
RF10004

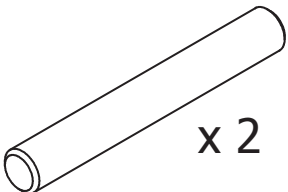


x 2

Pin Metal
RF40009

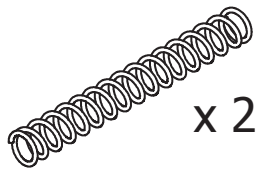


x 2

Spring
RF40002




x 2

Washer
RF44013

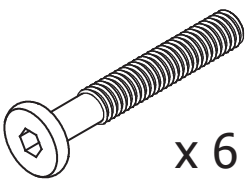


x 6

JCB M6 x 40
RF10041

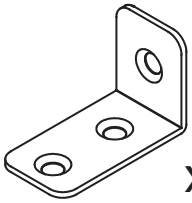


x 6

L-Bracket
RF50003

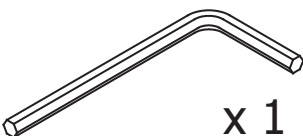


x 1


Allen Key
RF40103

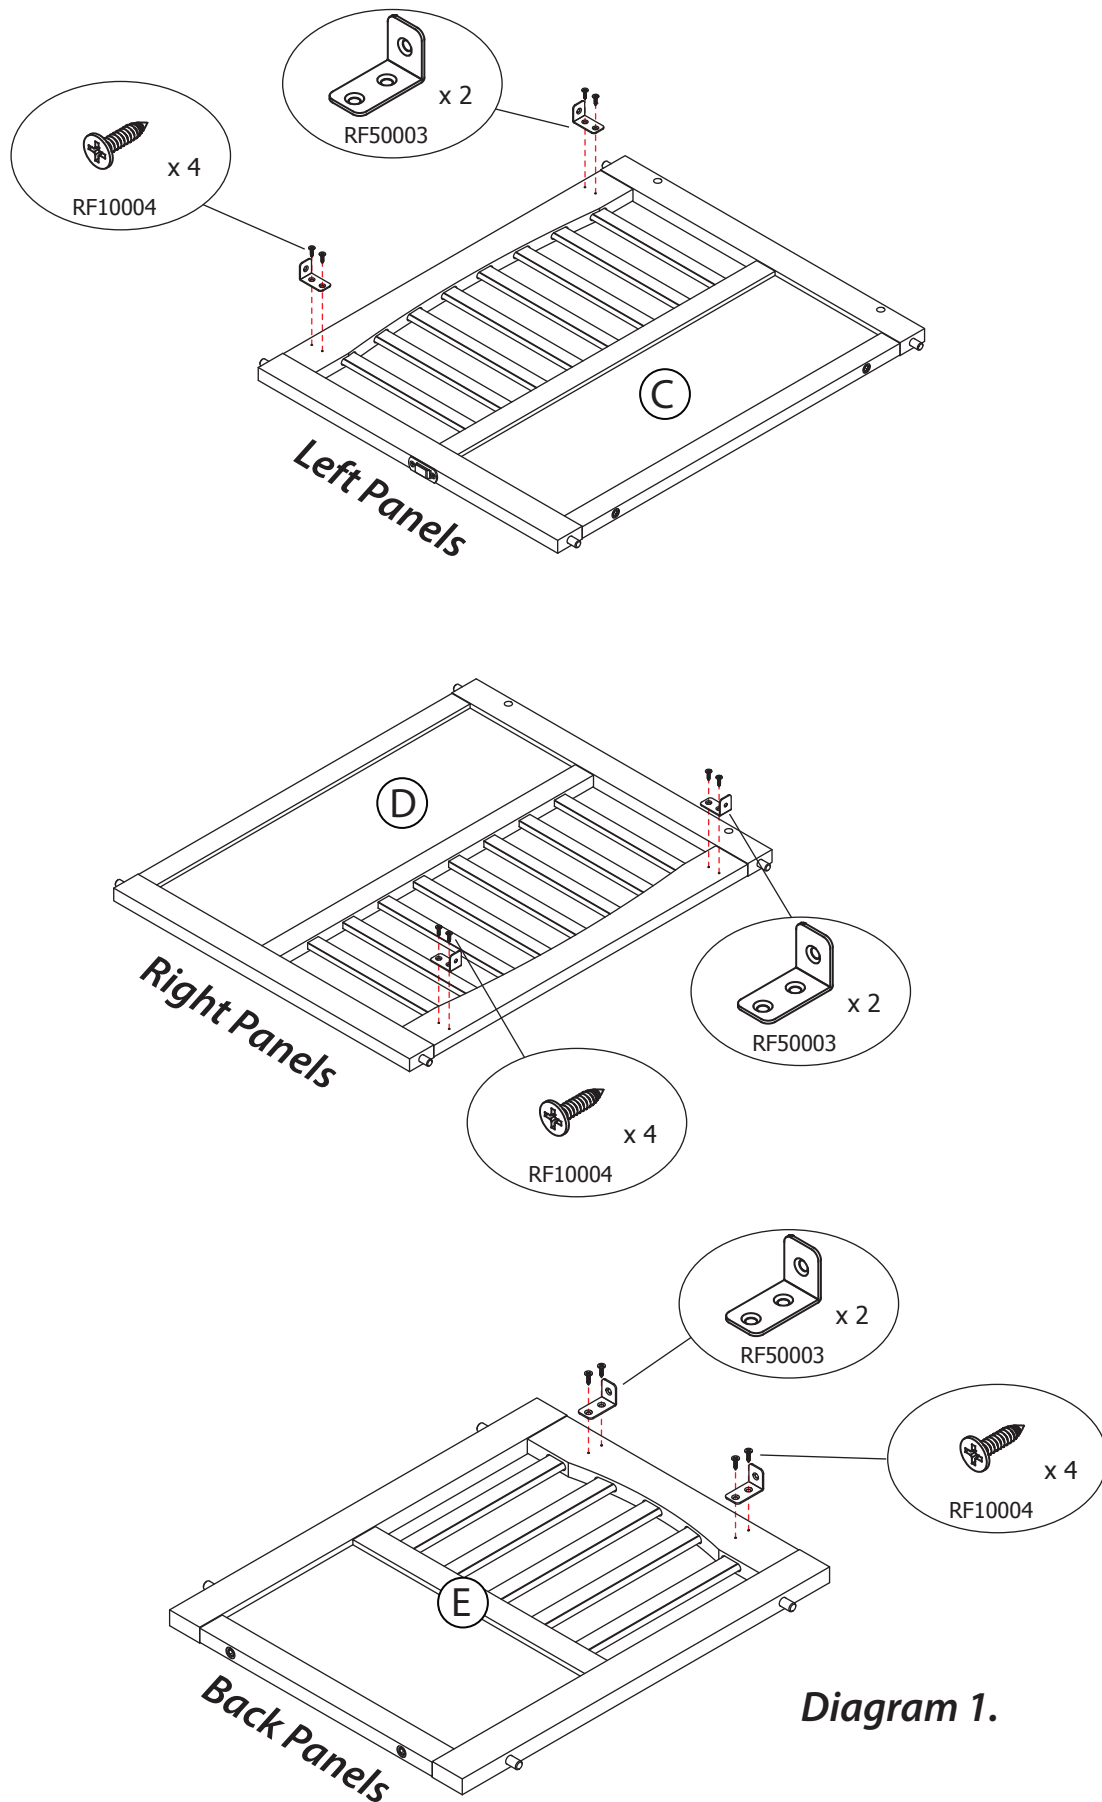**Diagram 1.****Step 1.**


Attach 6 L-Bracket (RF50003) into the pre-drilled holes on the Left Panel (C), Right Panel (D) and Back Panel (E) using 12 screws (RF10004) as per Diag. 1.

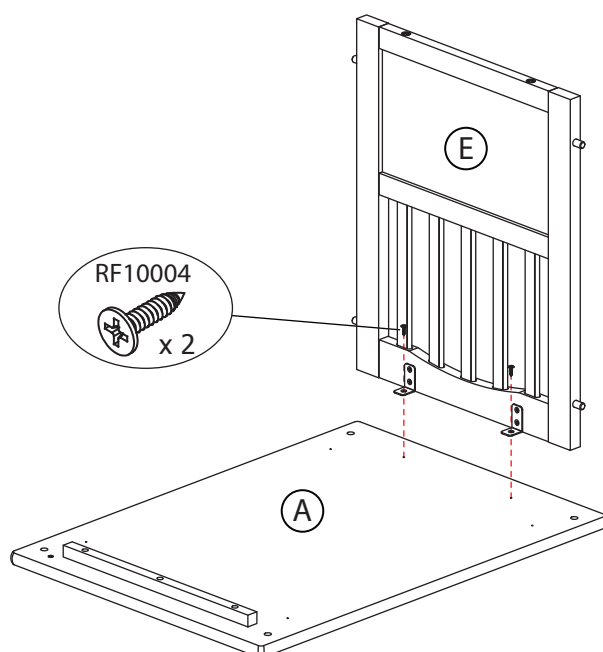**Diagram 2.****Step 2.**


Attach Back Panel (D) into the Top Panel (A) by using 2 screws (RF10004) as per diagram 2.

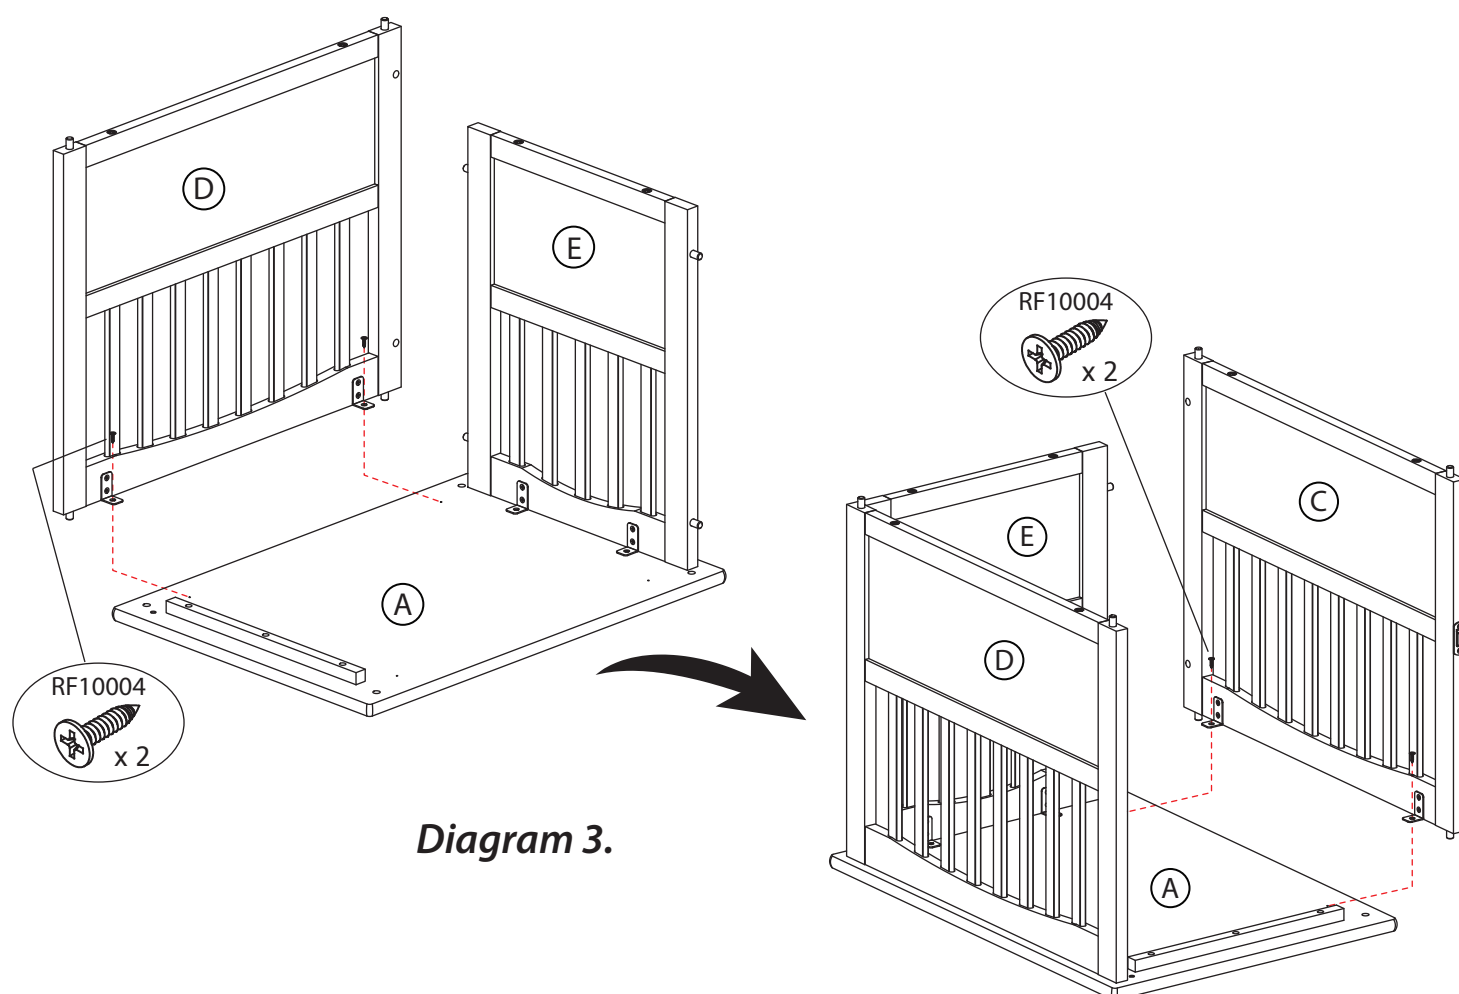**Diagram 3.****Step 3.**

Attach Left and Right Panel (C&D) into the pre drilled holes on the Top Panel (A) using 6 screws (RF10004) as per diagram 3.

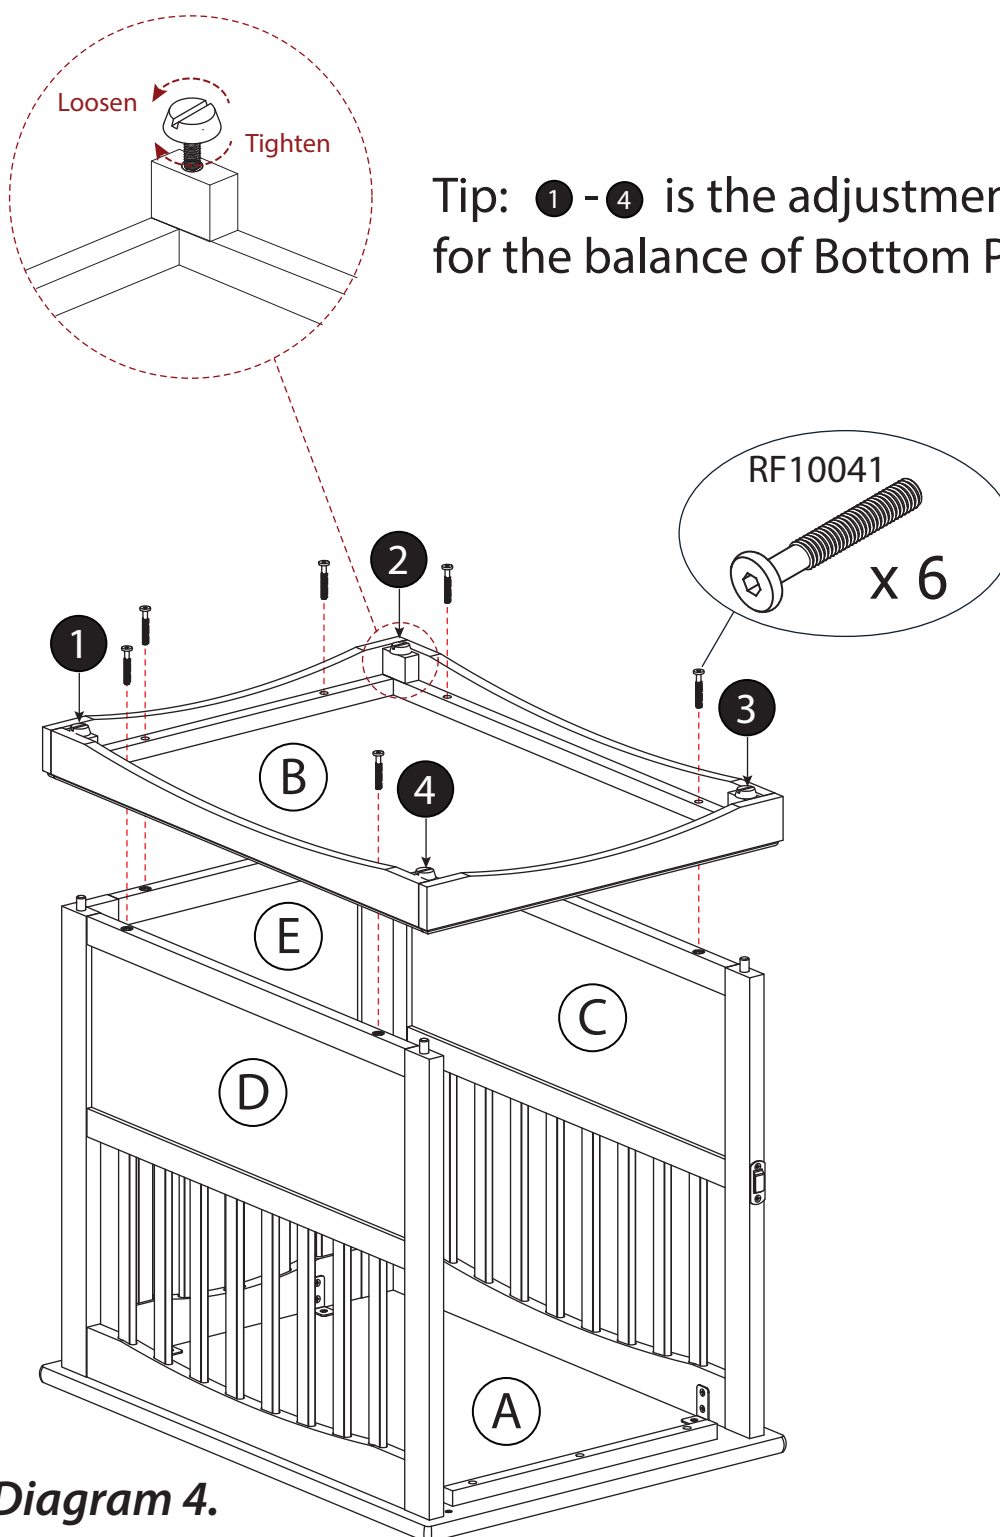**Step 4.**

Attach Bottom Panel (B) into the unit by using 6 screws (RF10041) as per diagram 4.

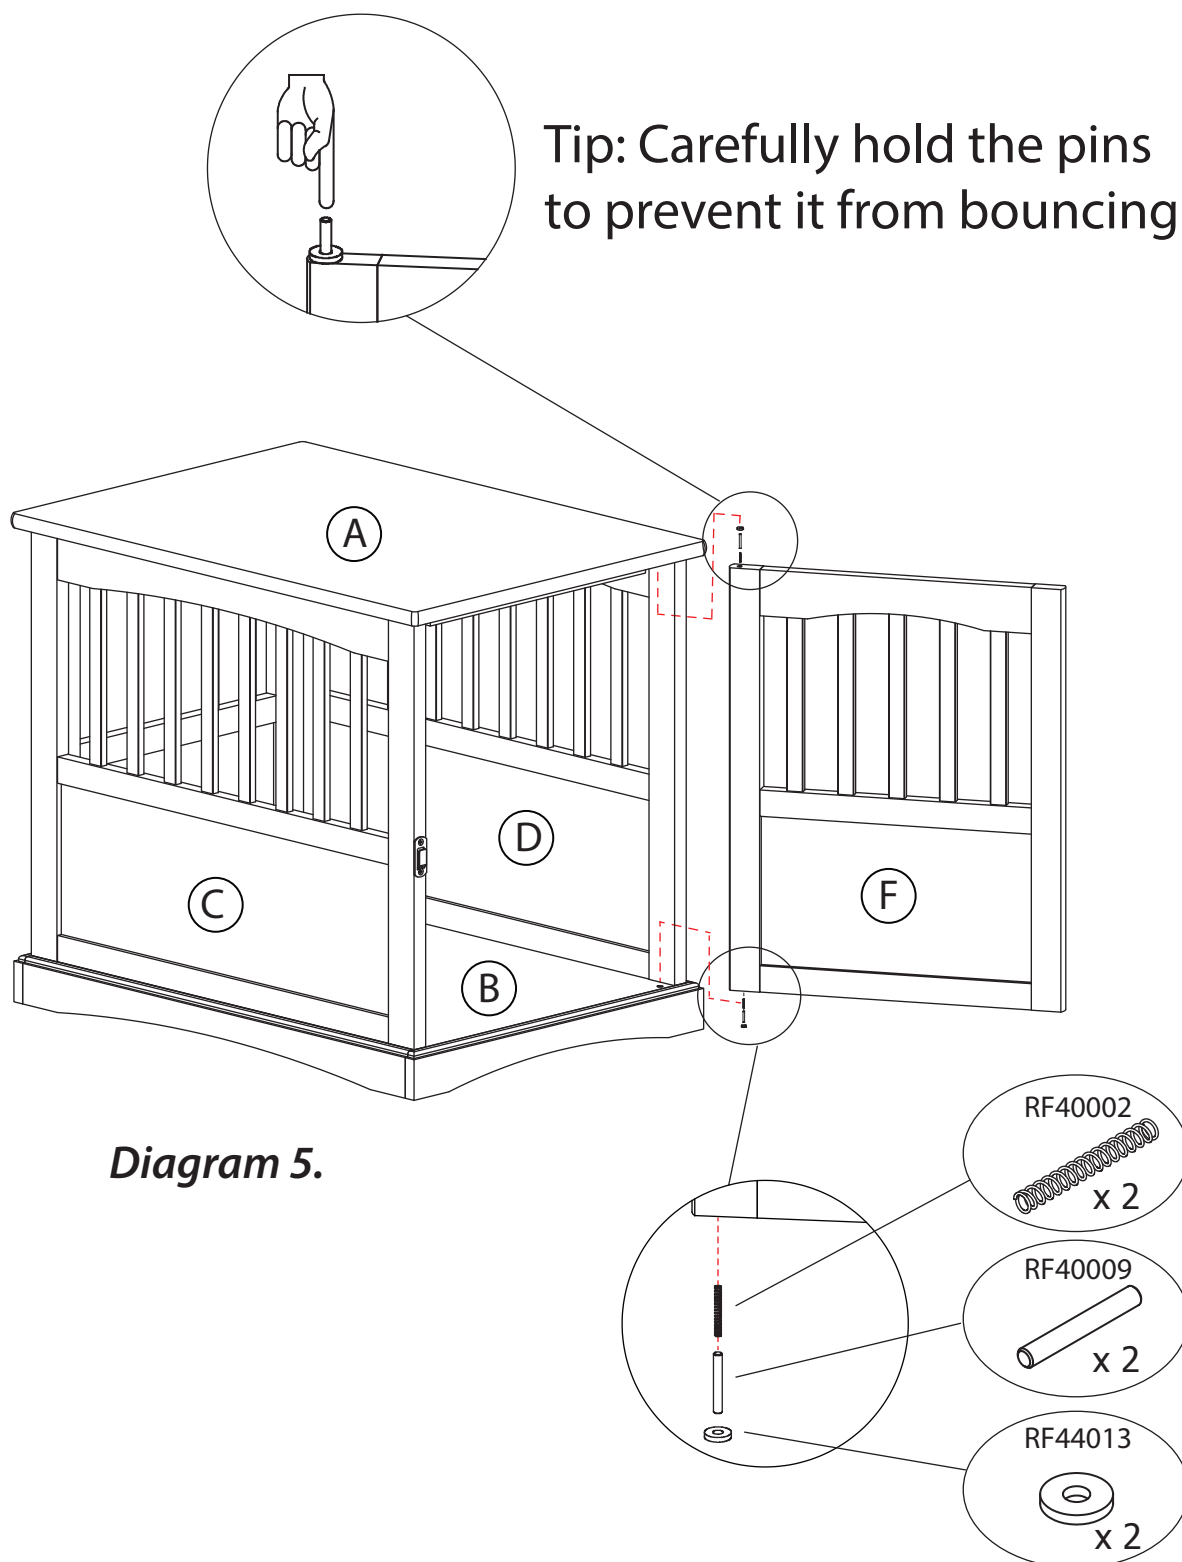

Step 5.

Assemble the Door (F); Place Spring (RF40002), Door Pin (RF40009) and Washer (RF44013) into pre-drilled holes on the Door (F) as per diagram. Align the pin on top of Door (F) to the hole underneath the Top Panel (A), then align the pin in bottom of Door (F) to Bottom Panel (B). Ensure the top and bottom pins on Door (F) are inserted into the holes on Bottom Panel (B) as per diagram 5.