

1 Tools Required: straight edge, utility knife, tape measure and safety goggles




2 Measure the distance between the vertical rails and cut each sheet of insulation to the proper length.



3 Measure the depth of the vertical rails and cut excess insulation to size and place behind vertical rails.



4 Insert the insulation sheets (laminated side facing out) between the horizontal and vertical rails. The insulation panels are scored to make the final installation easy. Insert the panel under one horizontal rail, carefully bend the panel and place the other side behind the opposite rail and snug insulation into place.

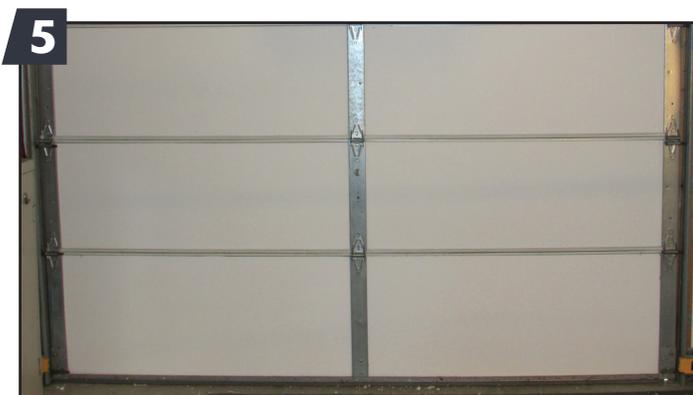

5 Congratulations! You are now on the road to energy conservation!

*Please ensure that all appropriate safety precautions are taken when fabricating and installing this product.

Matador Garage Door Insulation Kits are distributed exclusively by Service Partner, LLC.
Customer Service Hours 8:00am – 4:00pm CST, Monday–Friday
Toll free: 800.251.1276; Direct line: 931.381.6161

SERVICE
partners