


6. Repeat process 1, 4 and 5 to clean the surface of wall.

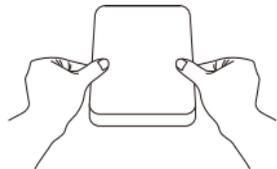

Notes: Holding weight is based on objects with a maximum depth of 0.75"; tape must make contact with surface. If surface is uneven, tape will not be able to make contact and will not hold.



**Made of 3M**

## 3M User Manual

### Steps for Application:

1. Cleaned your object with a 50:50 mixture of isopropyl alcohol and water.




2. Wipe your object with adhesion promoter and wait for drying time of 30-90 seconds.



3. Open the tape first, lay it down onto table (backing liner face down) and use a knife to cut a corner of adhesive side for easier film liner removal. Or, pinch and stretch a corner of the adhesive until the liner lifts from the tape.



4. Apply tape to the object vertically and do not peel off the backing film during curing process.

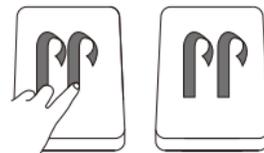

5. Accomplished when temperature is between 70° and 100°F (21°-38°C) and the bond is allowed to dwell 72 hours.

