




Use at 50° or higher

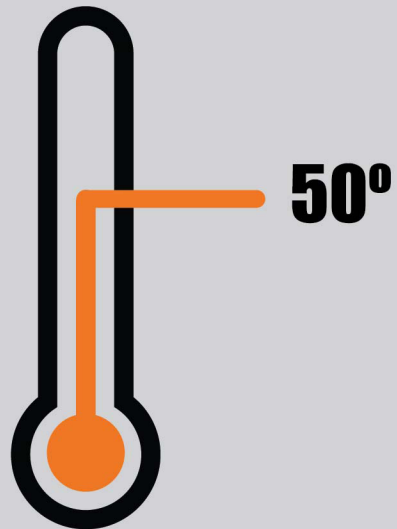

Clean and dry surfaces before
applying glue

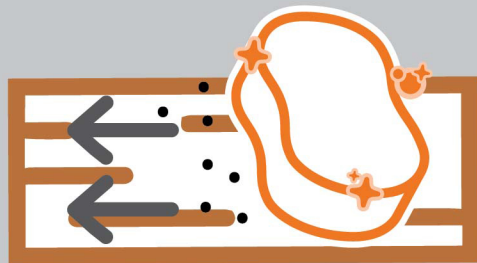

Clamp for 20-30 minutes

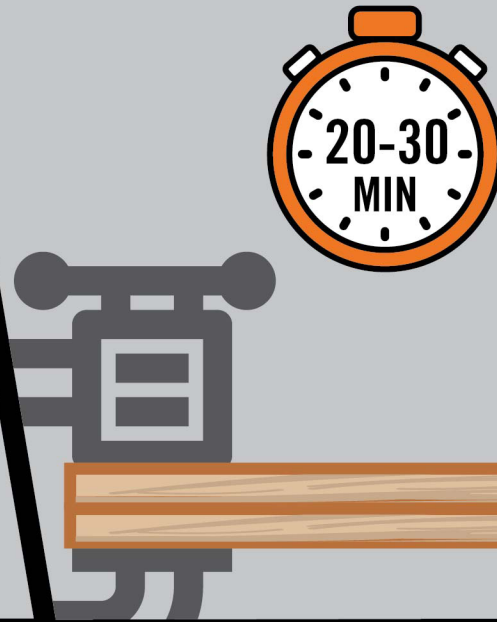

Remove excess glue with clean, wet cloth or
scrap off after glue dries

