
INSTALLATION MANUAL

Single Monitor Desk Mount

M001S/M001S-W

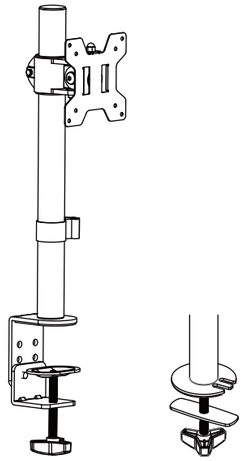

www.walielectric.com

support@walielectric.com

1-844-SATTLER (18447288537)

⚠ WARNING

If you do not understand these directions, or if you have any doubts about the safety of the installation, please call a qualified technician. Check carefully to make sure there are no missing or defective parts. Improper installation may cause damage or serious injury. Do not use this product for any purpose that is not explicitly specified in this manual. Do not exceed weight capacity. We cannot be liable for damage or injury caused by improper mounting, incorrect assembly or inappropriate use.

⚠ TIPOVER WARNING


SERIOUS OR FATAL CRUSHING INJURIES CAN OCCUR FROM TIPOVER. TO HELP PREVENT TIPOVER:

- NEVER ALLOW CHILDREN TO CLIMB, STAND, HANG, OR PLAY ON ANY PART OF MONITOR OR STAND.
- USE TIPOVER RESTRAINT OR ANCHOR STAND TO WALL.

USE OF TIPOVER RESTRAINTS MAY ONLY REDUCE, BUT NOT ELIMINATE RISK OF TIP OVER.

SMALL PARTS- NOT FOR CHILDREN UNDER 3 YEARS. ADULT SUPERVISION IS REQUIRED.


Supplied Parts List



Pole
A (x1)



C-Clamp
B1 (x1)



C-Clamp Brace
B2 (x1)




Support Plate
B3 (x1)




M10 Hand Knob
B4 (x1)



EVA Pad A
B5 (x1)




EVA Pad B
B6 (x1)




Support Plate
B7 (x1)



Grommet Base Plate
B8 (x1)



Monitor Arm
C (x1)



VESA Plate
D (x1)



Nut
E (x1)




M4x12 Bolt
F (x4)



M4x30 Bolt
G (x4)



M4~M6 Spacer
H (x4)



Allen Key
I (x1)




M5x14 Bolt
J (x3)




Wire Clip
K (x1)

1 Measure the thickness of your mounting surface or desk.

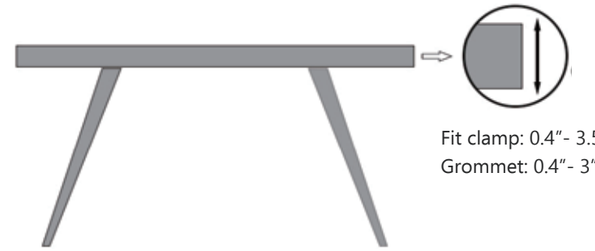


2 ***Option A : Clamp Installation***

1. Connect Pole A and C-Clamp Brace B2 via tightening M5x14 Bolt J with the Allen Key 3mm I.

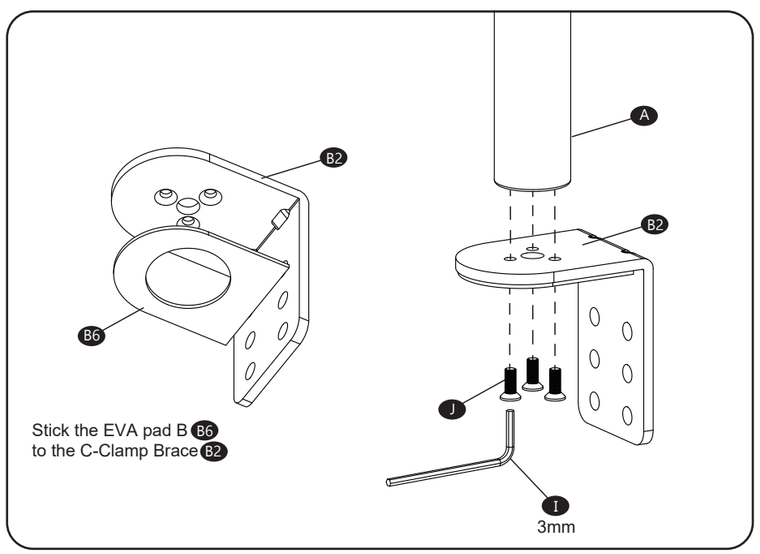


Stick the EVA pad B B6 to the C-Clamp Brace B2

2. Remove the screw and washer at the top of the M10 Hand Knob B4 and connect the M10 handle B4, C-clamp B1 and support plate B3 with the screw and washer that were just removed. Remove the M8x12 Bolt on the C-clamp B1. Select the preferred height according to your desk thickness. Connect C-Clamp B1 to C-Clamp Brace B2 using M8x12 Bolt, and tighten with Allen Key 5mm I. Rotate the hand knob B4 clockwise to fasten for stability.

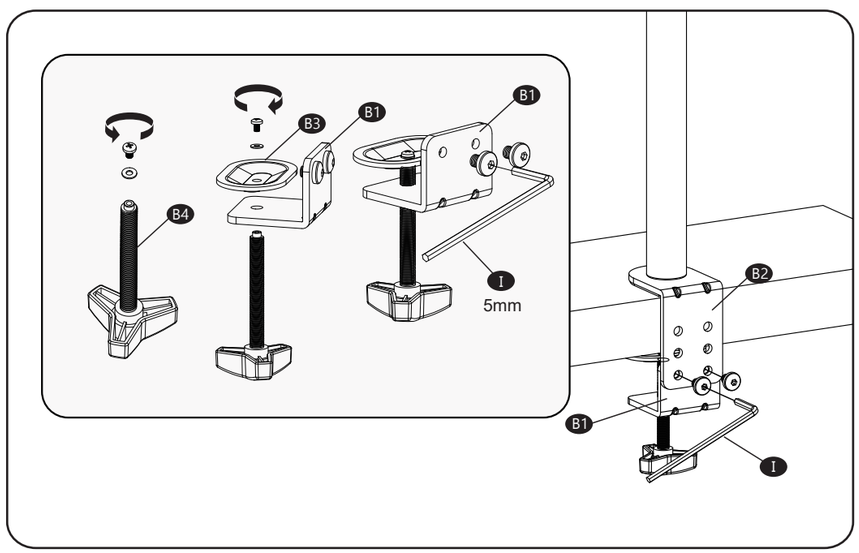

Option B : Grommet Base Installation


I. Place Pole A onto Grommet Base Plate B8. Connect them from the bottom using M5x14 Bolt J and tighten with Allen Key 3mm I.

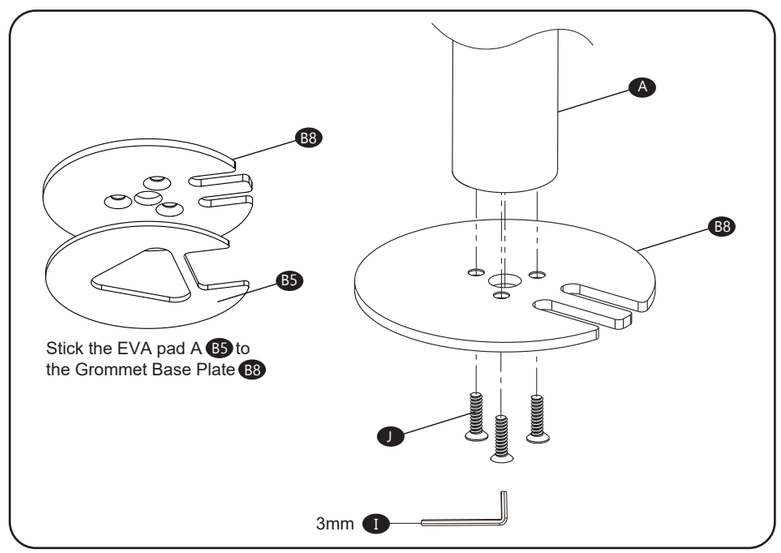

Stick the EVA pad A B5 to the Grommet Base Plate B8


2a. Existing Grommet Hole Installation

Remove the screw and washer at the top of the M10 Hand Knob B4.
If the existing grommet hole comes with a plastic protector, remove it to ensure a flat surface before installing the desk mount.
Position the Pole A on the mounting surface and connect the hand knob B4 through the Support Plate B7 and the grommet hole with the Pole A. Rotate the hand knob B4 clockwise to fasten for stability.

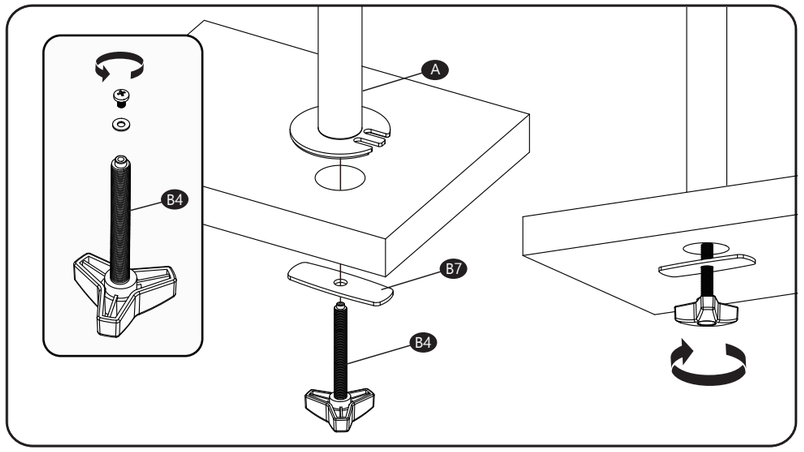


2b. Self-drilled Grommet Hole Installation

Remove the screw and washer at the top of the M10 Hand Knob B4.
Mark the position of the hole on your mounting surface. Drill a 3/8"(10mm) diameter hole at the marked position through the mounting surface.
Position the Pole A on the mounting surface and connect the hand knob B4 through the Support Plate B7 and the self-drilled hole with the Pole A. Rotate the hand knob B4 clockwise to fasten for stability.

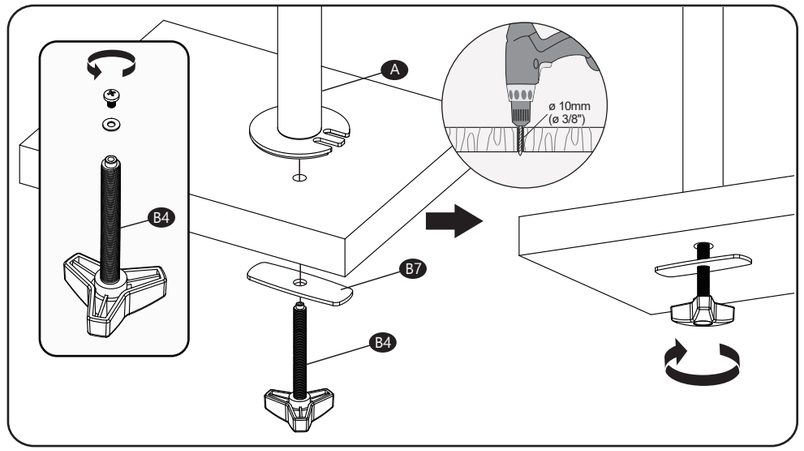

3 Put the Wire Clip K and Monitor Arm C through the Pole A, adjust the preferred height and tighten using Allen Key 5mm I.

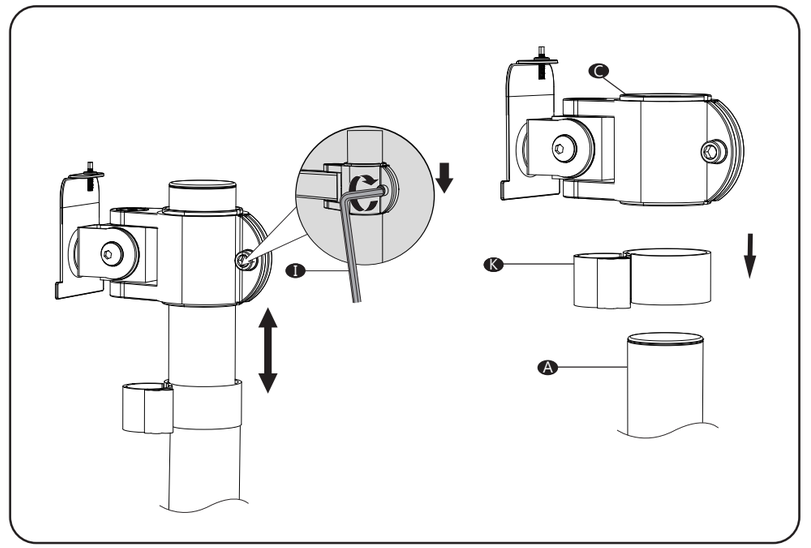

4 Select bolts and spacers (if needed) according to your TV/Monitor. Attach the VESA Plate to the Monitor and tighten with a screwdriver. (Screwdriver not included).

Step 4.1 Select Monitor Screws

Only one screw size fits your Monitor


M4x12 M4x30

Hand thread screws into the threaded inserts on the back of your Monitor to determine which screw (M4x12 or M4x30) to use.




Step 4.2 Select Spacers (if needed)


NOT NEEDED

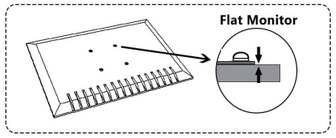


NEEDED FOR

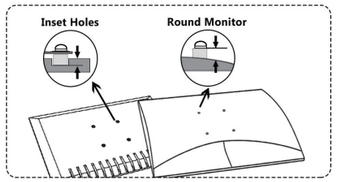


Step 4.3a Flat Back Monitor

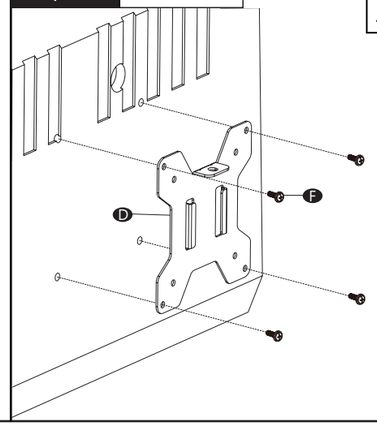


Step 4.3b Curved or Recessed Back Monitor

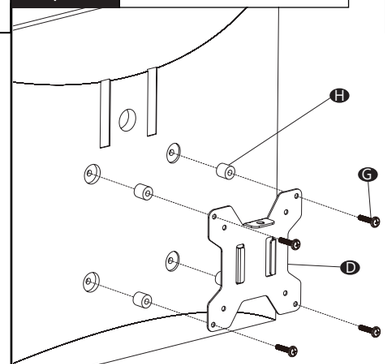


5 Put the assembled TV/Monitor onto the Monitor Arm C and tighten the VESA Plate D with Nut E for stability.

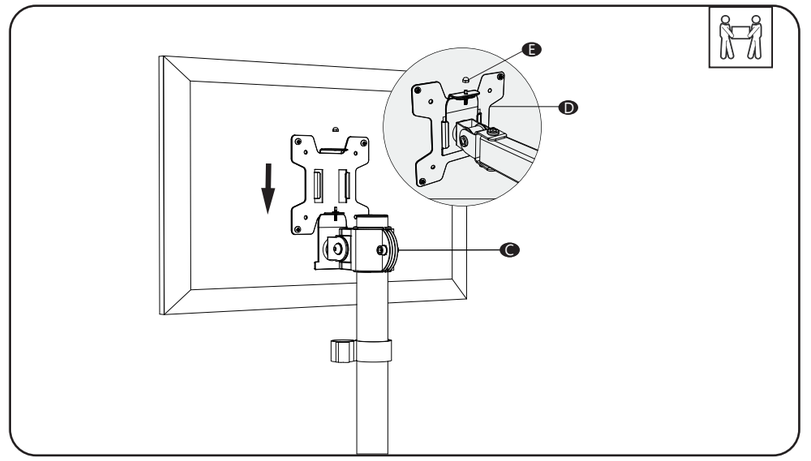

6 Adjust the tilt angle using Allen Key 5mm I.

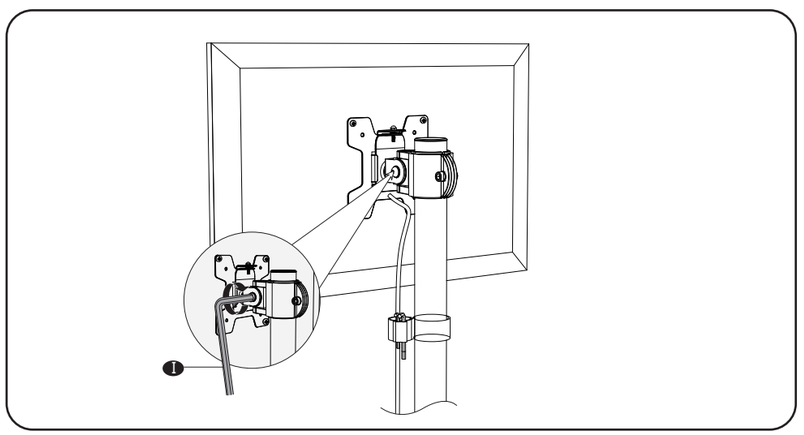

7 Guide the cable through the Wire Clips K and store the Allen Keys I in the Wire Clip K.

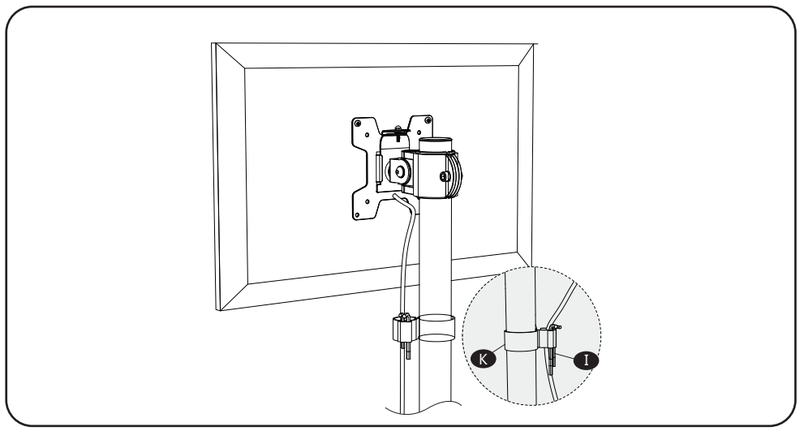

8 Manually swivel, tilt, and rotate the monitor for the best viewing angle.

Notice: Please make sure the security Nut E is installed before you rotate the monitor.

