


## **User Manual of Product 1:**

Sakura Headrest Dog Guard For Cars SS5259 - Easy Fit For Most Vehicles Hatchbacks SUVs Estates MPVs – Width Adjustable No Tools Needed, Black, 93 x 33 x 6 cm

# Headrest Dog Guard

## Fitting Instructions

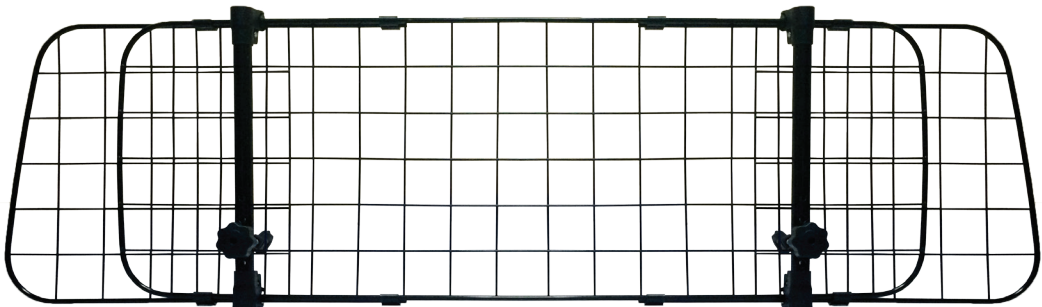




SS5259

**sakura**

Please read these Fitting Instructions carefully before use and keep them for future reference.

## Contents

- |                                      |                         |
|--------------------------------------|-------------------------|
| ❶ Mesh Assembly                      | ❺ Screw Caps            |
| ❷ Side Wings                         | ❻ Hooks                 |
| ❸ Fixing Poles (with mounting clips) | ❼ Mesh Connecting Clips |
| ❹ Screws (2 x 60mm/70mm/80mm)        |                         |

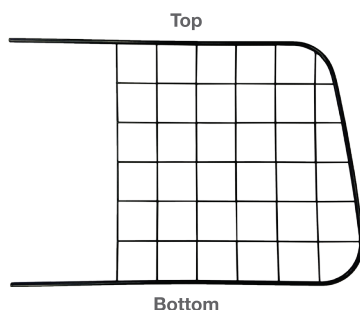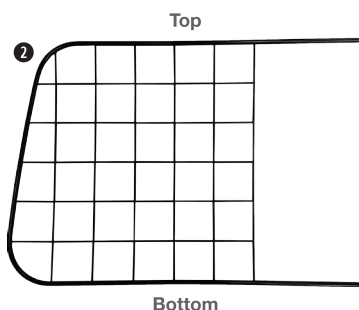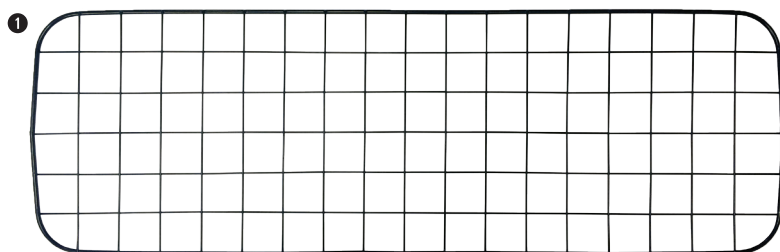


## Features



- Fits most hatchbacks, estates and small vans
- Quick and easy to install and remove
- No tools required

## Assembly




1. Connect the fixing poles ❸ to the mesh assembly ❶ (Diagram 1), ensuring the holes are at the bottom and that both poles are in line with car headrests.

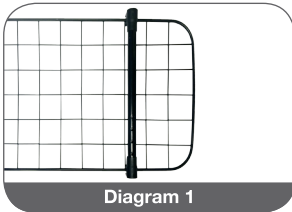


2. Connect both side wings ❷ to the mesh assembly ❶ using mesh connecting clips ❺ (Diagram 2), ensuring the wider part is at the bottom (Diagram 3).

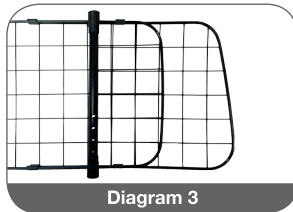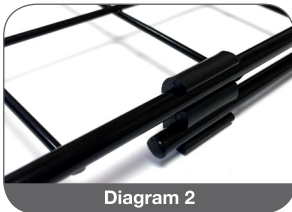

3. Insert 2 x medium-sized screws (70mm)\* ❹ into the screw caps ❽ (Diagram 4). Then insert through the fixing pole holes (Diagram 5) and screw on the hooks ❻ around the reverse side (Diagram 6).

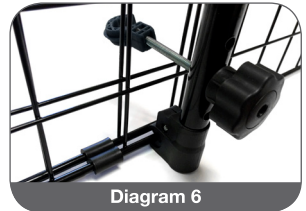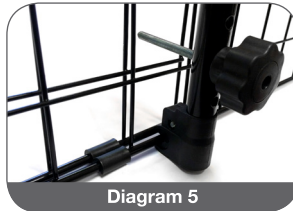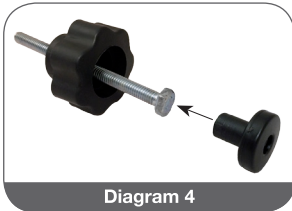

4. Place the Headrest Dog Guard in desired position within the boot and fix the hooks ❻ around the stem of the headrest bars (Diagram 7). Adjust the side wings ❷ so that they fill the side spaces of your car.

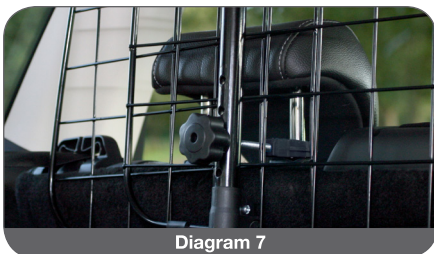

\*Note: You should have x4 screws left over.

## Frequently Asked Questions

**Q. How long should it take to fit the dog guard?**

A. Approximately 10 minutes.

**Q. The gap between the dog guard and headrest is too big?**

A. Refer back to instruction 3 in the Assembly guide and use the shorter (60mm) Screws ④ instead.

**Q. The dog guard does not fit, as the car seats are too wide?**

A. Refer back to instruction 3 in the Assembly guide and use the longer (80mm) Screws ④ instead.

**Q. I have x4 screws left over, is that correct?**

A. Yes. We have included x4 additional screws ④ to ensure you get the right fit for your car.

## Fault Finding

If 70mm screw is too long, use 60mm. If it is too short, use 80mm. In the unlikely event the screws are not the correct length, standard M6 screws can be purchased from any DIY store.

**Caution: Do not over-tighten screw connectors, as this could damage the dog guard and hook assembly.**

## Warnings

- Please follow instructions carefully to ensure the safety of you, your passengers and pets.
- Before assembling, please ensure that all parts are included in the package.
- Please retain these instructions for future reference.
- When fitting a dog guard into a vehicle with rear air bags, please consult your dealer or vehicle manufacturer to ensure the dog guard will not restrict rear air bag deployment in the unlikely event of an accident.
- Whilst every effort has been made to ensure the safety of the Headrest Dog Guard, Saxon does not accept liability or responsibility for negligence of the fitting instructions.

SAKURA® is a registered trademark of Saxon  
© 2016 by Saxon