




MAKE A DIFFERENCE

Fender Flares


BXG.2005-1
(INSTALLATION INSTRUCTION)

ATTENTION • Please verify all parts are present and read instructions carefully before starting installation.
Please feel free to contact your distributor if you have any kind of question about your purchase.

1 CONTENTS

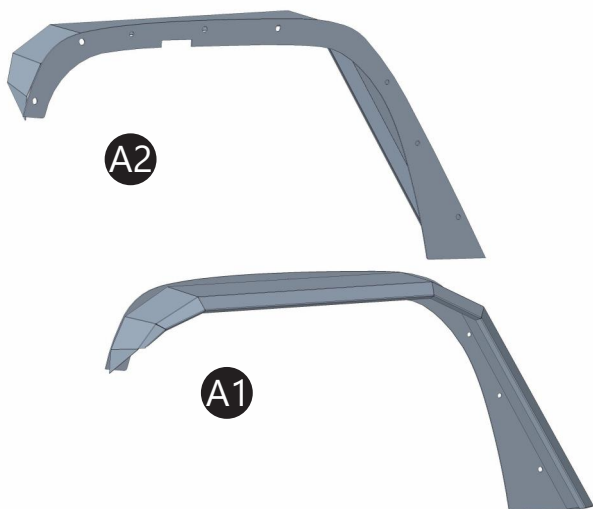

A1&A2: Front Fender Flares

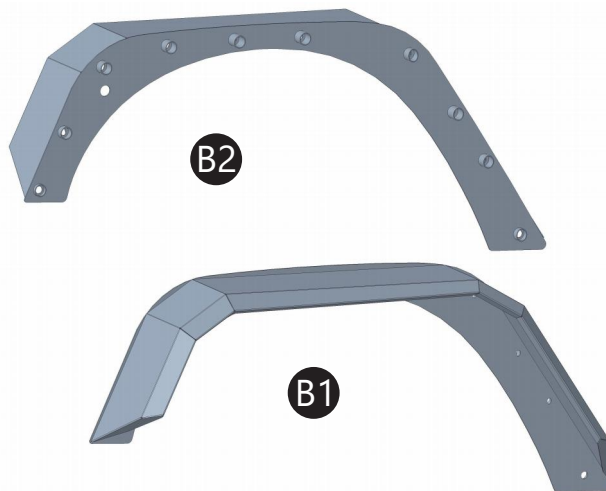

B1&B2: Rear Fender Flares

Qty	Part Name	Size(mm)	Picture	Qty	Part Name	Size(mm)	Picture
10	Hex Bolt	M8×45		4	Flat Washer	M6×16×1.2	
10	Hex Bolt	M8×35		36	Flat Washer	M8×20×1.2	
16	Hex Bolt	M8×25		20	Flange Hex Lock Nut	M8	
4	Button Bolt	M6×45		16	Rivet Nut	M8	
1	Rivet Nut Tool						

2 TOOLS REQUIRED

◆ Drive Socket Ratchet Wrench

◆ 13mm Shallow Socket

◆ 12mm, 13mm Wrench

◆ 6mm L-Wrench

To view online instruction, please scan the QR code.




3 INSTALLATION INSTRUCTION :

Driver Side (A1, B1) Installation:

Step 1

Place the vehicle in park and remove the factory front fender flares.
Find the eight factory installation holes.

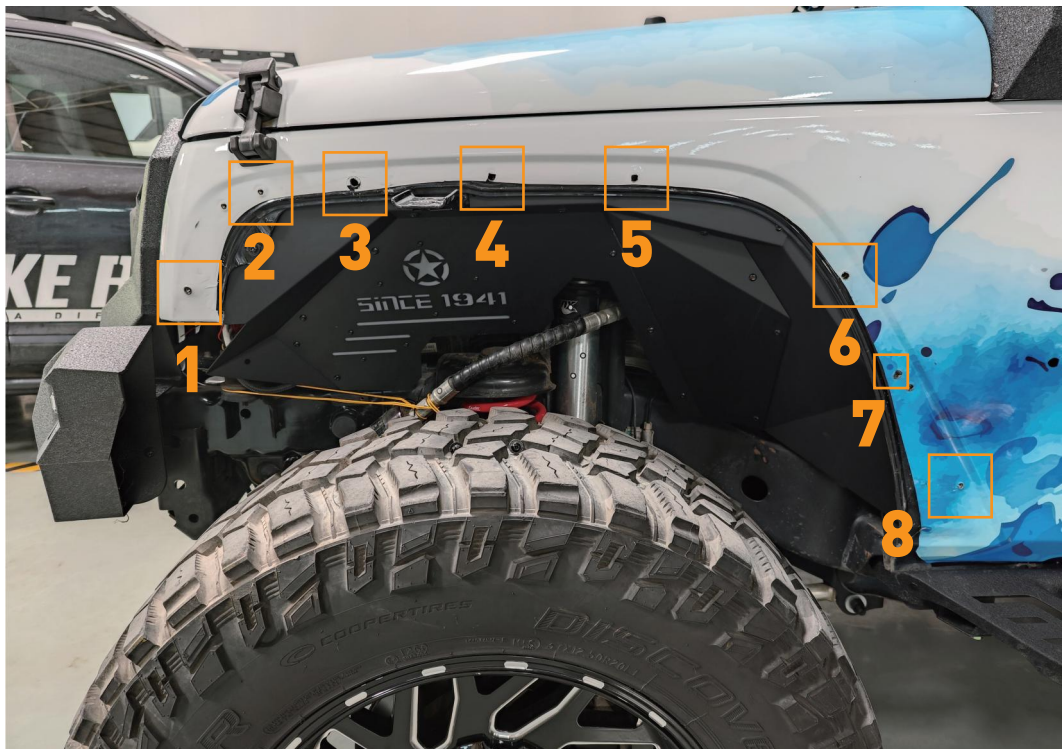


Step 2

Install the front fender flare into your vehicle and tighten the hardware.


•(8) M8×25 Button Bolts

•(8) M8×20×1.2 Flat Washers

•(8) M8 Flange Hex Lock Nuts

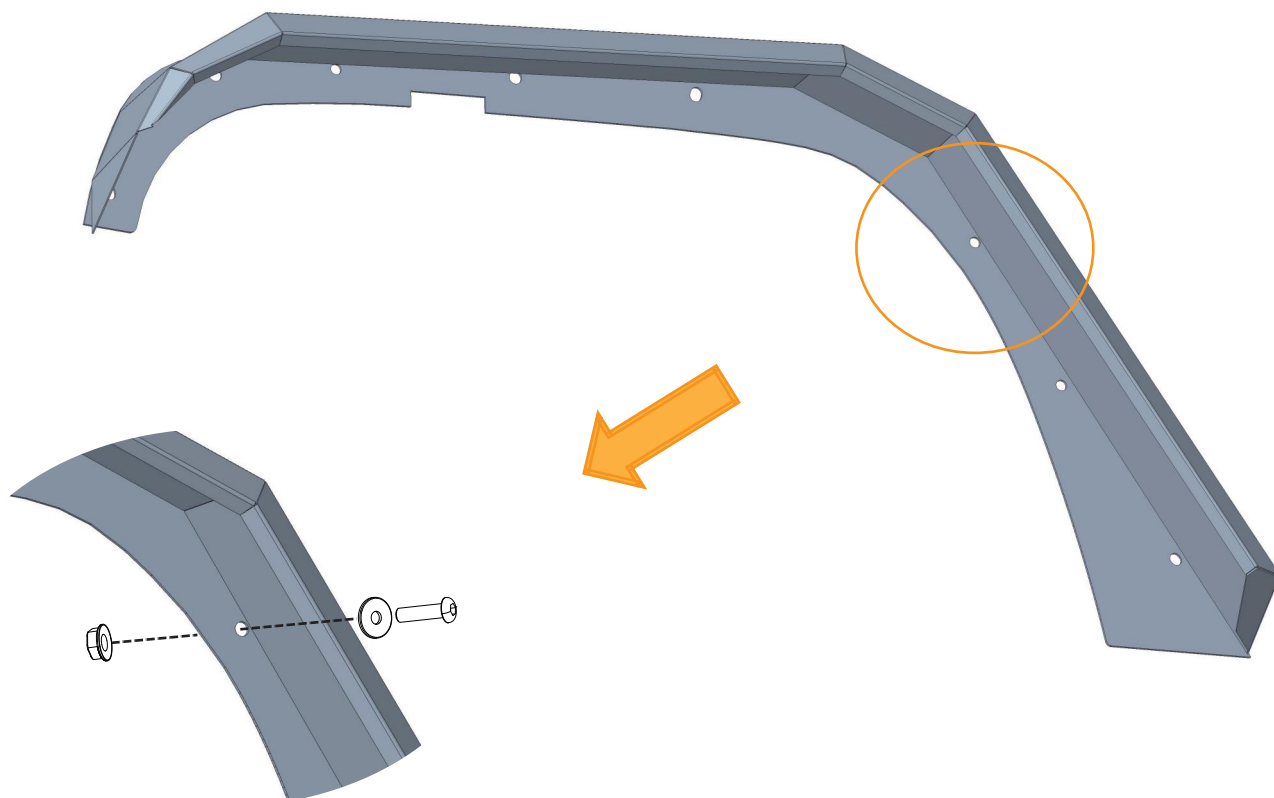


Remove the factory rear fender flares.
Find the ten factory installation holes.

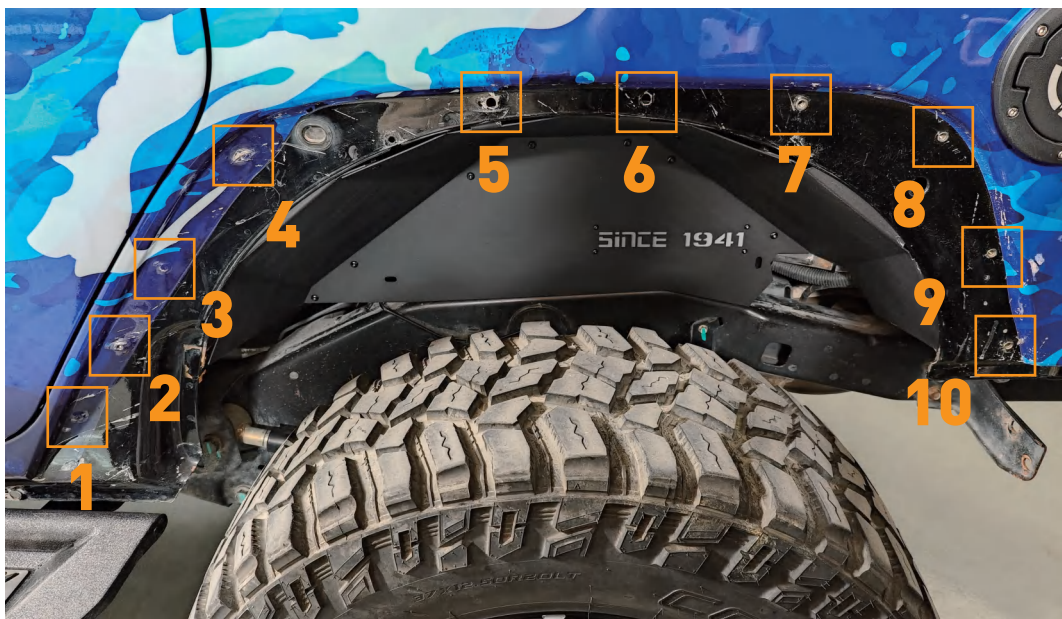

Secure the rivet nuts into the vehicle body at the designated mounting position.

•(8) M8 Rivet Nuts

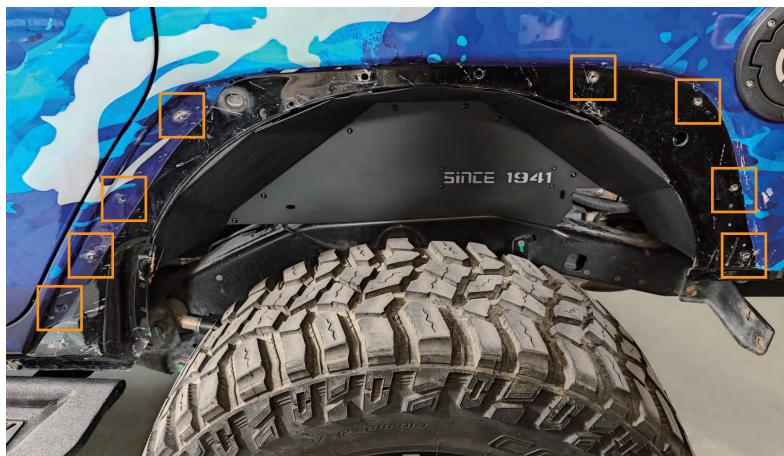

First, use a 11mm drill to enlarge the mounting holes for the insert nuts.

Rivet Nut Tool Instructions:


1. Use the 6mm L-Wrench to operate the top section of the tool and hold the middle body with a 12mm wrench.
2. Insert the rivet nut into the prepared hole.
3. Finally, unthread the 8mm hex socket bolt to complete the installation.



Install the rear fender flare into your vehicle and tighten the hardware.


1+2+3+9+10

- [5] M8x35 Button Bolts
- [5] M8 Flat Washers

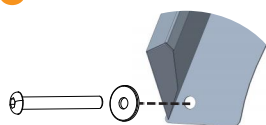


4+7+8

- [3] M8x45 Button Bolts
- [3] M8 Flat Washers

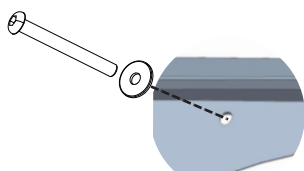


5+6

- [2] M8x45 Button Bolts
- [2] M8 Flat Washers
- [2] M8 Flange Hex Lock Nuts

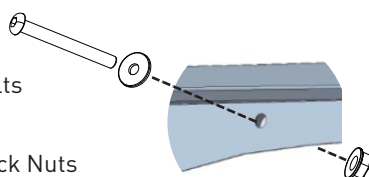

If you have installed Hooke Road® inner fender, please use the M6x45mm button bolts & flat washers to install the mounting holes 5 and 6.

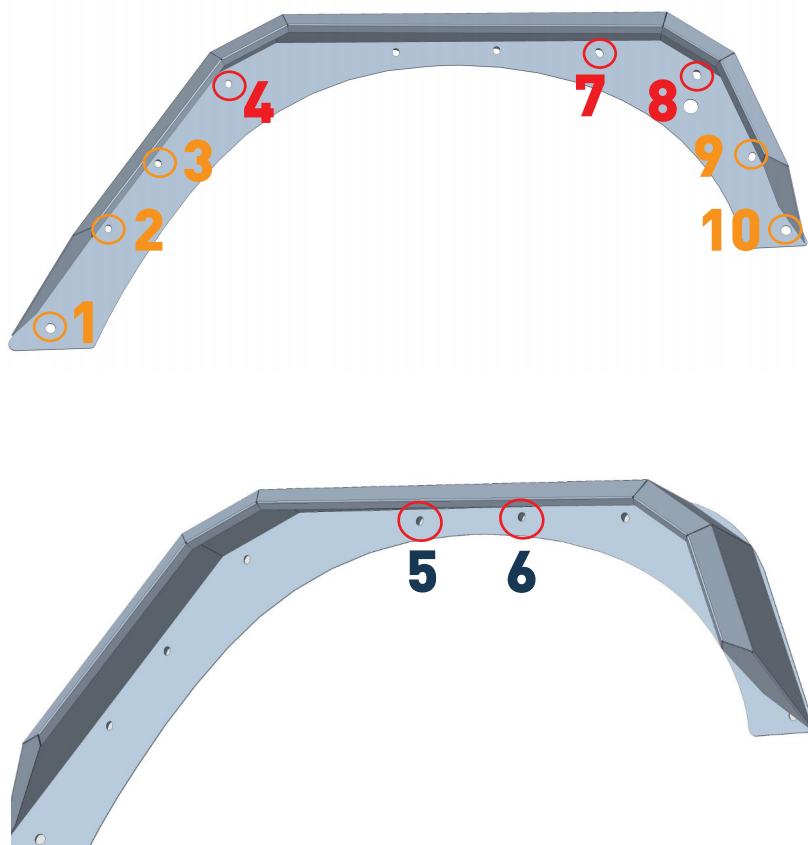

Repeat all steps on the other side of the vehicle.

The installation is complete. We hope you enjoy a wonderful off-road life with this quality Hooke Road product!

