



How to Use

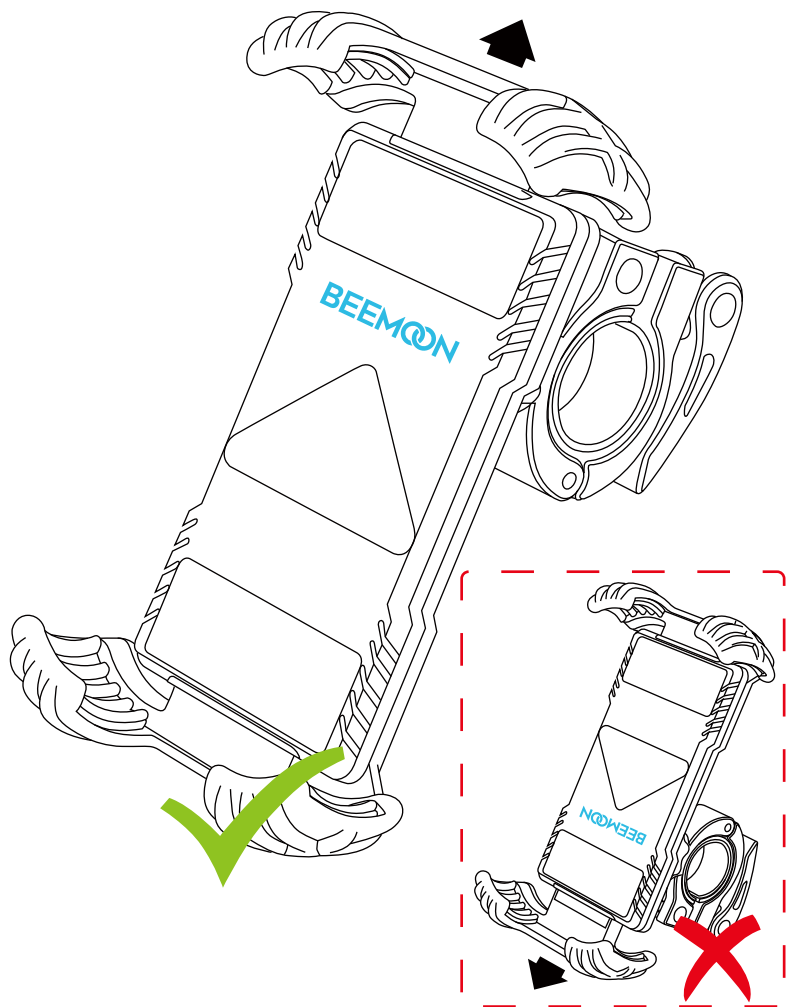


Please install the bike phone mount in the direction shown in the picture.

1. Push the Handlebar Mount to insert the socket of the phone holder. Then tighten the nut.

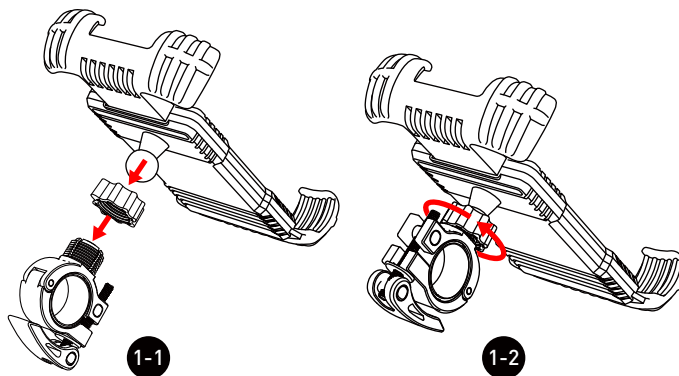


2. Loosen the lock screw and fix the mount on the handlebar.

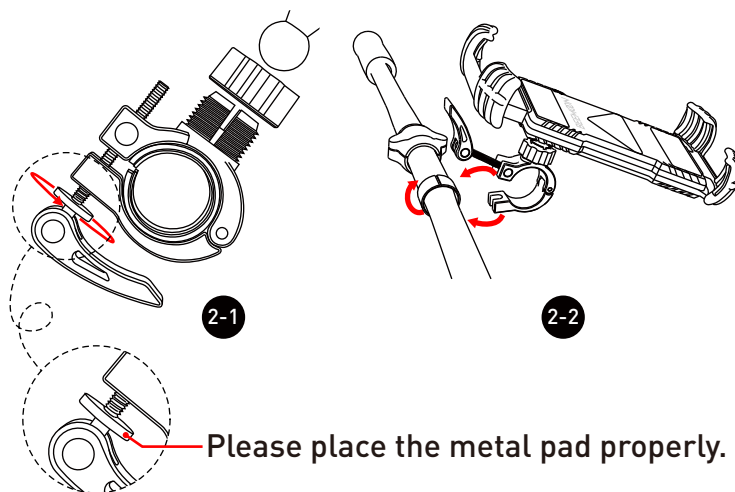

Please place the metal pad properly.

3. Adjust the lock screw to lock.

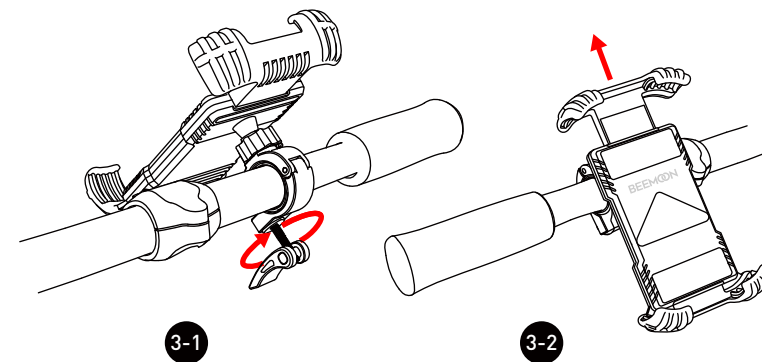

Note: Please add/remove/trim silicone pads according to the diameter of the handlebar.

4. Push up the bracket with the phone's upper end, then put the phone in and go.

