

INSTRUCTIONS OF DASH MOUNT PHONE HOLDER

Package Includes



1x dash phone mount holder



1x manual instruction



2x cleaning kits
(No drilling required)



2x adhesion promoters
(No drilling required)

Drilling accessories



1x L-shaped hexagonal wrench



1x micro wrench





1x micro wrench



1x drill bit
(not included with electric drill)



1 set screw accessories

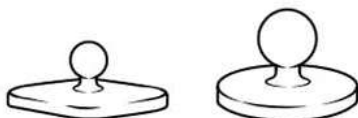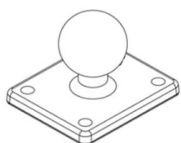

Ball head adjustment precautions

The matching ball head can be adjusted to any position on the track. Use the matching wrench to loosen the top screw of the ball head (the wrench can be turned up to 180°, too loose will cause the bottom nut to fall off)

Ball head base compatibility

The base of the mobile phone holder adopts a central 8mm rail, which is compatible with any ball head fixed with M8 bolts. In addition, the base is also compatible with diamond base ball heads, round base ball heads, and rectangular base ball heads, which can be DIYed using M6 bolts. (Please install the non-matching ball heads before loading the instrument panel bracket)

Installation Steps (No drilling required)



1. Remove the original car liner and use the cleaning tool set to clean the bottom

2. Use the adhesion promoter to wipe the bottom again (note that there is a strong smell, it is recommended to wear a mask and open the window for ventilation)



3. Wait for 10 seconds, wait for the adhesion promoter to dry, tear off the tape on the bottom and side of the dashboard bracket base, and stick it to the correct position, and press down the bracket to make it stick more firmly, and let it stand for 48 hours (the longer the time, the stronger the stickness)

4. Loosen the screws connecting the base and the metal arm, adjust the mobile phone holder to the position you are satisfied with, quickly release the button behind the bracket, and install the mobile phone



Installation Steps (Drilling required) For heavy-duty use



1. Place the instrument panel bracket in place. Align the larger alignment holes on the mounting plate with the existing holes on the instrument panel. Mark the 4x mounting holes as shown below.



2. Remove the speaker cover by prying upwards with a pry bar.



3. Using a 7mm socket, remove the hardware holding the plastic instrument panel.



4. Remove the plastic instrument panel by prying upwards with a pry bar.



5. Using the accessory drill bit, drill the holes marked in step 2.



6. Using the accessory wrench, attach the mounting bracket to the plastic instrument panel using the provided accessory button head bolts and nylon lock nuts.




7. Using a 7mm socket, reinstall the instrument panel.



8. Install the speaker cover.



9. Loosen the screws connecting the base and the metal arm, adjust the mobile phone holder to the position you are satisfied with, quickly release the button behind the bracket, and install the mobile phone

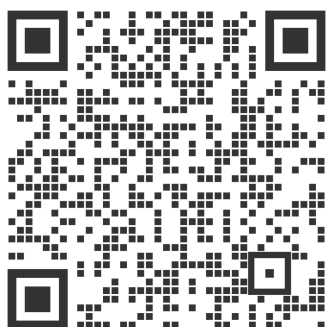

Please scan the QR code on YouTube to access more installation & operation videos for the auto accessories.

www.youtube.com/@autopartsmaster-b5h