
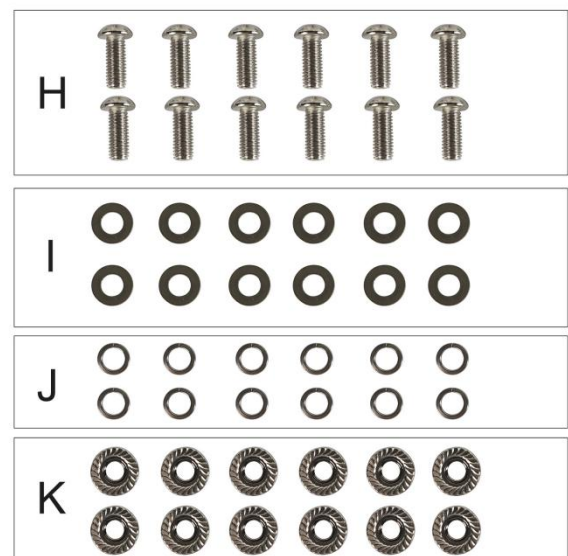


Tubular Doors

BXG.1005

(1) Contents:

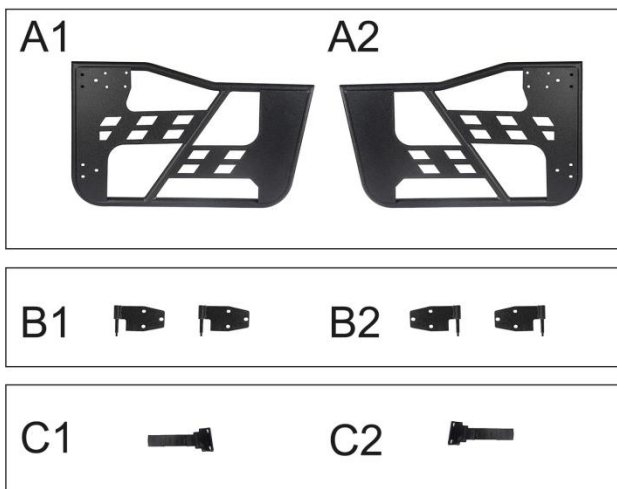

(2) Tools required:

- a. 5mm Hex Socket Wrench;
- b. 14mm Wrench;



(3)Installation time: About 1 hour, 1-2 persons needed.

(Installation time is different according to individual person)

(4)Installation instruction:


Step 1:

Begin the installation by removing the original doors.

Step 2:

Assemble the Part A1 and Part B1.

Note:don't tighten up the bolts too much for a adjustable operation in the next step.

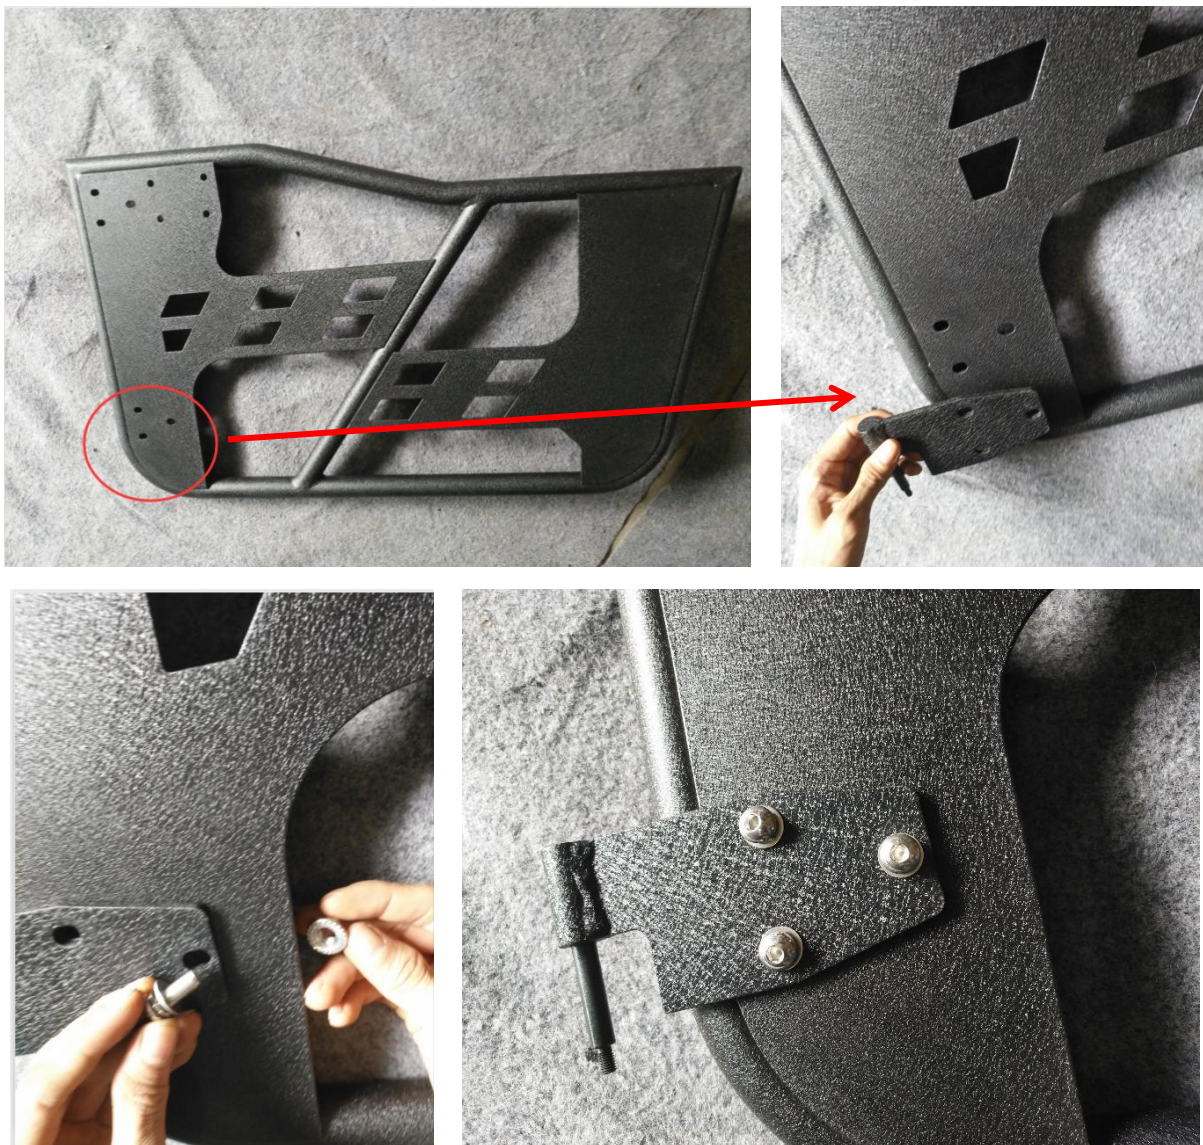



Step 3:

Install the tubular door into the the car by aligning and putting into hinges.



Step 4:

Assemble the Part C1 to the tubular door.



Step 5:

The same install operation for the passenger side.

Step 6:

Installation completed.



Attention:

1.The product parts in this instruction may differ slightly from the actual product contents but generally does not affect the installation of the product.

2.Please feel free to contact us if you have any kind of question about your purchase. We will reply you in timely manner.

 www.ubox-offroad.com    @HookeRoad4x4

Post Your Jeep w/Hashtag #hookerod to Win Discount Every Week