

How to Set Up TapeBuddy®

STEP 1: SETUP

- Remove the bridge insert from the front of the tool by clipping the tabs. Trim the tabs even or flat and smooth any rough edges.
- Reversing this insert allows for 2 controlled mud thicknesses applied to the tape. Determine what mud thickness you need. Consider starting with the "More Mud" Setting
- Insert the bridge insert with wording facing down, align and snap into place.



Note: The tabs need to be flat to insert in the slides.

STEP 2: LOADING THE TOOL




- Feed drywall tape from the tape holder compartment into the mud compartment center crease up and out through the mudded tape gate.
- You can use 75-500 foot rolls of paper tape. The Most commonly used is 250'.
- With the drywall tape already passed through the mud compartment, fill the compartment with the mixed compound.

FUN FACT:

How do I know which end of the insert to use?

Each end of the insert has a different thickness. By reversing this insert, you can change the amount of mud being applied to the tape.

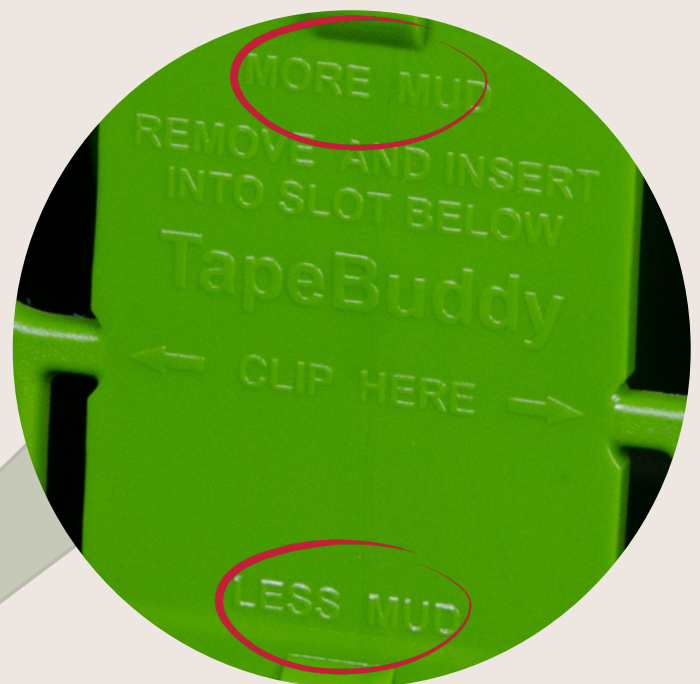

CHOICE OF TWO CONTROLLED COMPOUND THICKNESS SETTINGS!