

JOYDECO




Cordless Zebra Roller Shade


Installation Instructions




COMPONENTS LIST

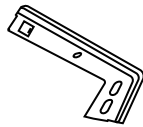


L-bracket × 2



C-bracket × 2



Screw × 5



Expansion Bolt × 5

NOTE:

If any of them are missing or damaged, please feel free to contact us.

TOOLS AND FASTENERS YOU MAY NEED
(PACKAGE NOT INCLUDED)



Drill with Bits



Metal Tape Measure





Screwdrivers



Pencil


TWO INSTALLATION METHODS

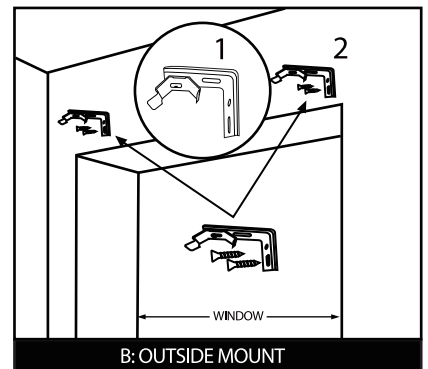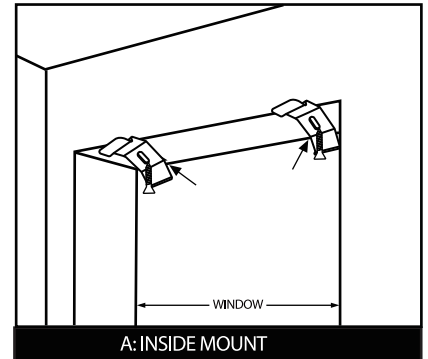


Note:

Ensure the two brackets are installed symmetrically at the same height, depth, and both vertical to the window frame.


A. INSIDE MOUNT

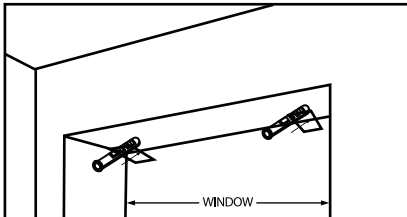


1. Mark and drill two holes at the same depth within the window frame symmetrically, put the expansion bolts into the holes.

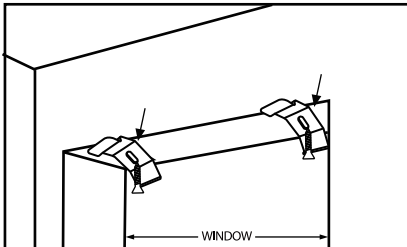

2. Fix two C-brackets with screws and ensure they are aligned.

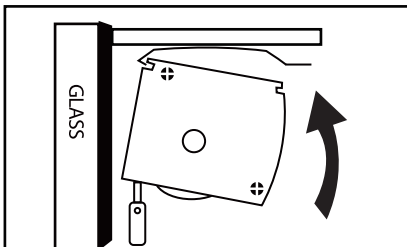


3. Place the rear groove of the headrail into the bracket, rotate the headrail upwards to place it into the bracket completely.

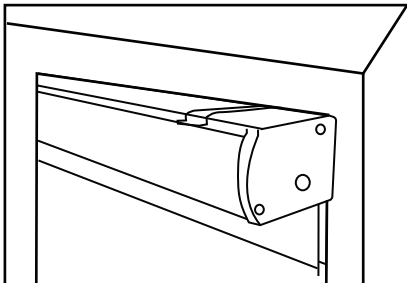


4. Finish installation when you hear "click".


B-1. OUTSIDE MOUNT

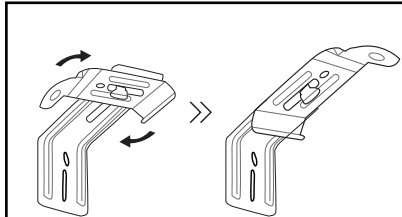

1. Connect the L-bracket and the C-bracket, turn the C-bracket 90 degree to tighten, ensure the C-bracket is vertical to wall.

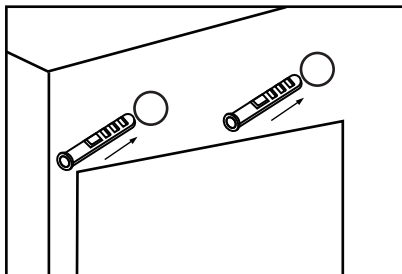


2. Mark and drill two holes at the same height above the window frame symmetrically, put the expansion bolts into the holes.

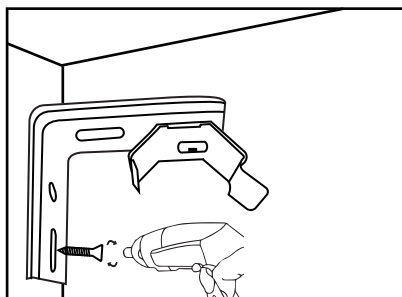


3. Fix the bracket (assembled in step 1) to the wall.


B-2. OUTSIDE MOUNT

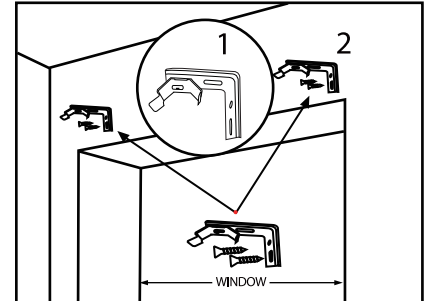

4. Fix another bracket on the wall. Ensure they are aligned.

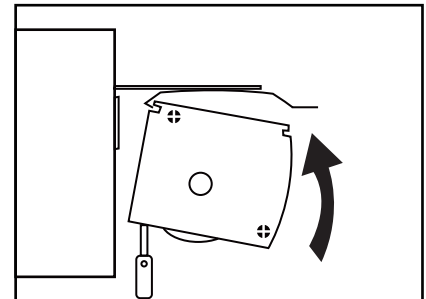

5. Place the rear groove of the headrail into the bracket, rotate the headrail upwards to place it into the bracket completely.

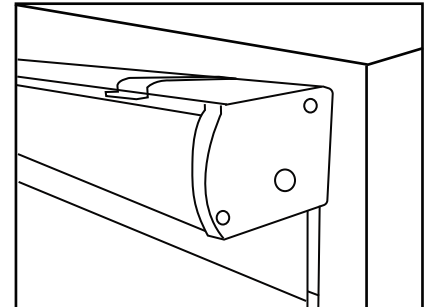

6. Finish installation when you hear "click".