



INSTALLATION INSTRUCTION

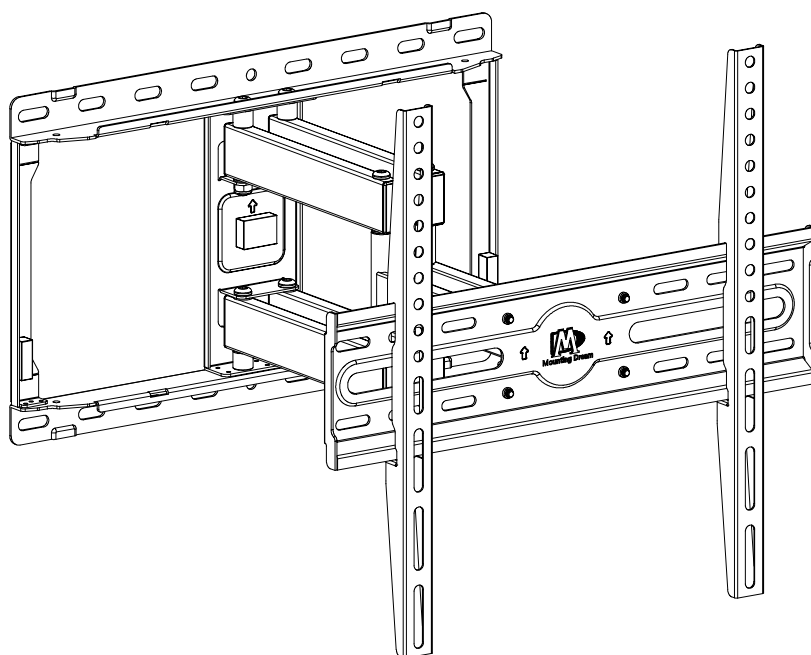


x3











x1



Max:400x400mm/16x16"
Min:75x75mm/3x3"

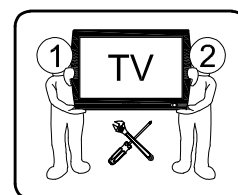

Before getting started, let's make sure this mount is perfect for you!

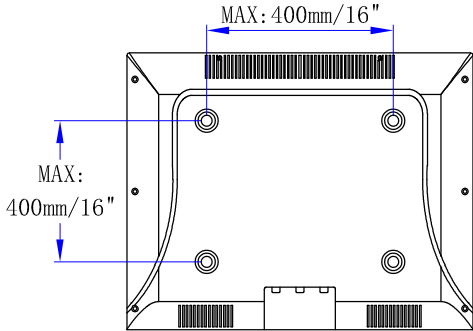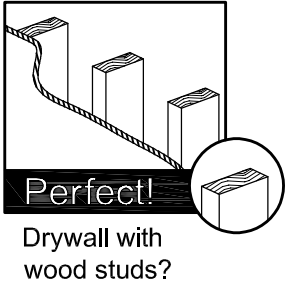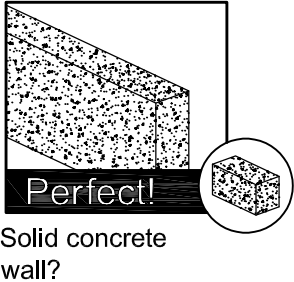1 Is your TV VESA equal to/greater than 75x75mm/3x3" and equal to/less than 400x400mm/16x16"?	 Yes --- Perfect! No --- This mount is NOT compatible.
2 Does your TV (including accessories) weigh less than 110 LBS (50 KG)?	 Yes --- Perfect! No --- This mount is NOT compatible.
3 What is your wall made of?	  
4 Installation Tools (Not Included)	 Band Tape 2m  Pencil  Screwdriver  Electrodrill  Socket Wrench 1/2"(13mm) Wood Stud Install  Stud Finder  Awl  5/32"(4mm) Wood Drill Bit Concrete Install  3/8"(10mm) Masonry Drill Bit  Hammer
5 Safety Caution	Please read this instruction carefully before installation. • This product is designed for use in wood stud and solid concrete wall. - DO NOT install into drywall alone. • The wall must be capable of supporting five times the weight of the TV and mount combined. • Do not apply this product to any purpose not indicated by Mounting Dream. • Incorrect installation may result in product damage or body injury. Mounting Dream shall bear no responsibility for any damage or injury resulted from incorrect installation, incorrect assembly or misuse.


STEP 1 Attach Brackets to TV

Parts and Hardware

! WARNING: This product contains small items that could be a choking hazard if swallowed. Before starting assembly, verify all parts are included and undamaged.

NOTE: Not all hardware included will be used.


TV Brackets



04 x2


TV Screws

M4x8mm




a x4

M6x16mm




b x4

M8x12mm

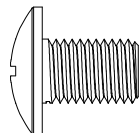


c x4

M4x12mm




d x4

M6x30mm



e x4


M8x22mm

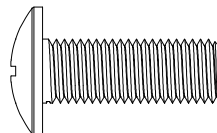

f x4

Spacers

10mm



g x4

2.5mm



h x8

Washers

M4




i x4

M6





j x8

1-1 Select TV Screws

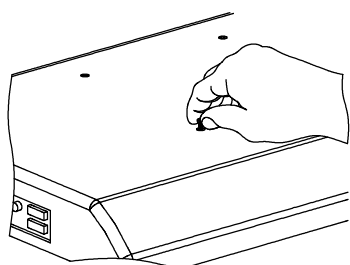


M4 M6 M8

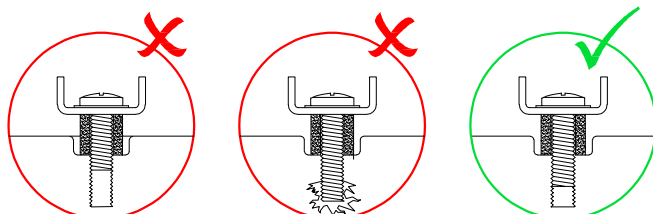
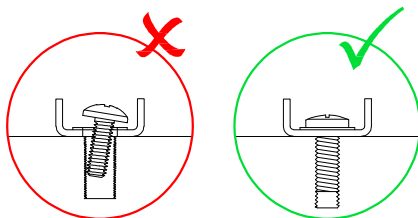


1-2 Need Spacer?

I No, go to PAGE 3 **I** for detailed combination.


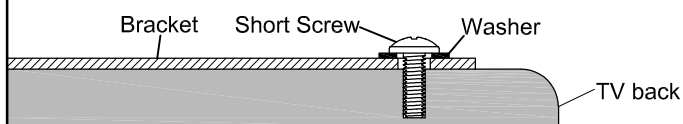


II Yes, go to PAGE 3 **II** for detailed combination.

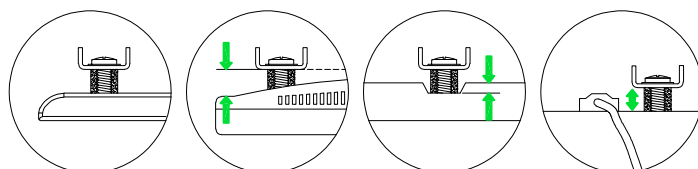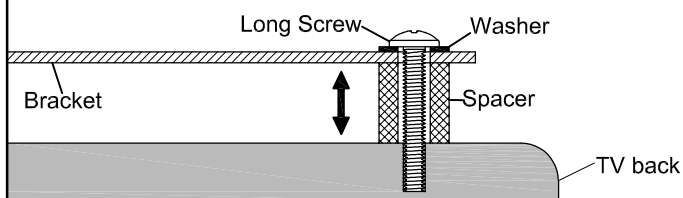


1-3 Attach the TV Brackets




Note: Select washers or spacers that match the size of your TV's mounting holes.

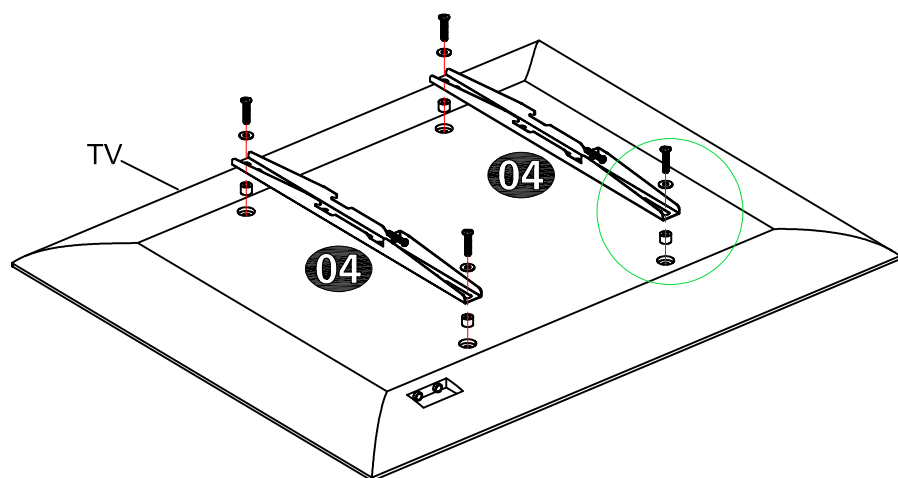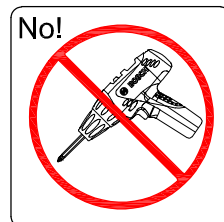

I Screw and washer

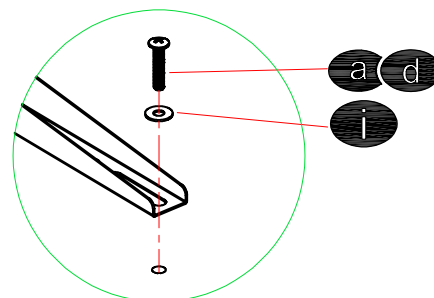

II Spacer(s), screw and washer(s)

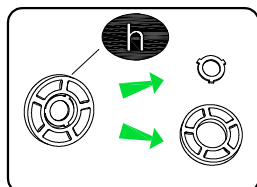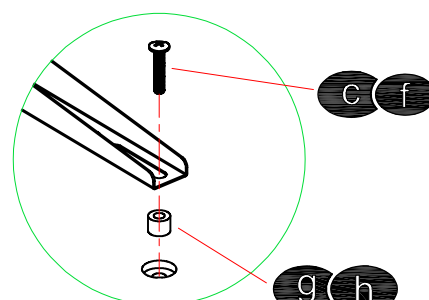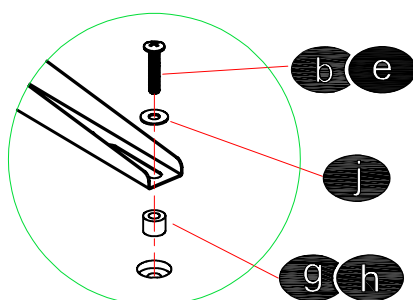


Tips: If you need to combine M6(b/e) or M8(c/f) screw with 2.5mm spacer(h), you have to remove the inner circle.

STEP 2 Attach Wall Plate to Wall

-  For wood stud installation, follow STEP 2A
-  For concrete installation, follow STEP 2B on PAGE 6

Parts and Hardware

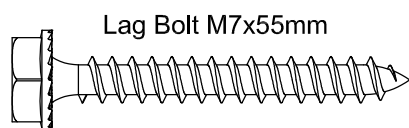


01 x4

Allen Key




02 x1

Wall Plate Unit

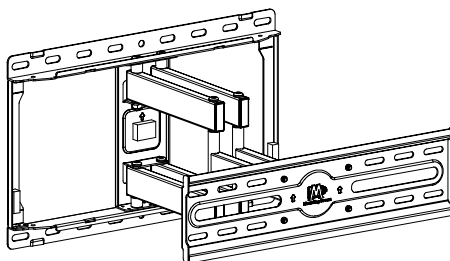





03 x1



Mounting Template

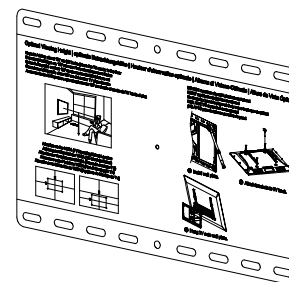



STEP 2A

Wood Stud Installation

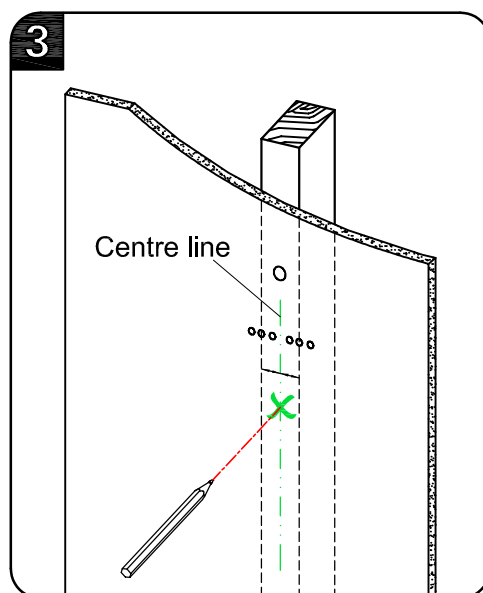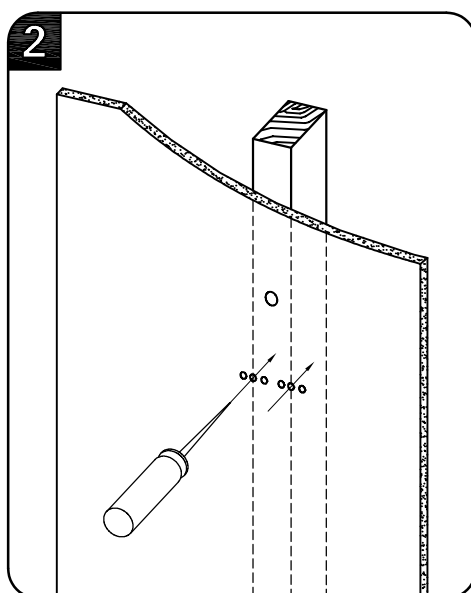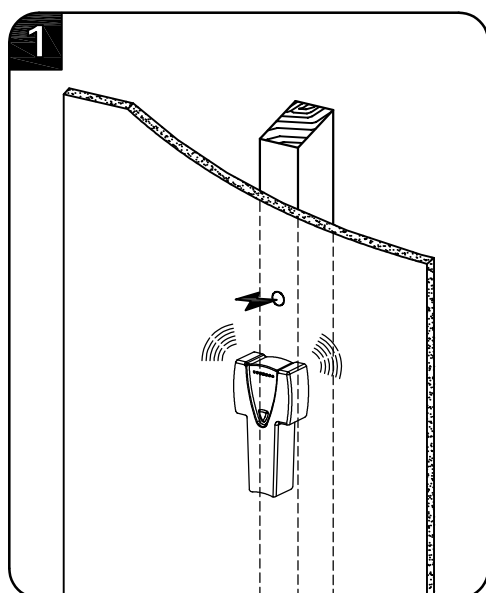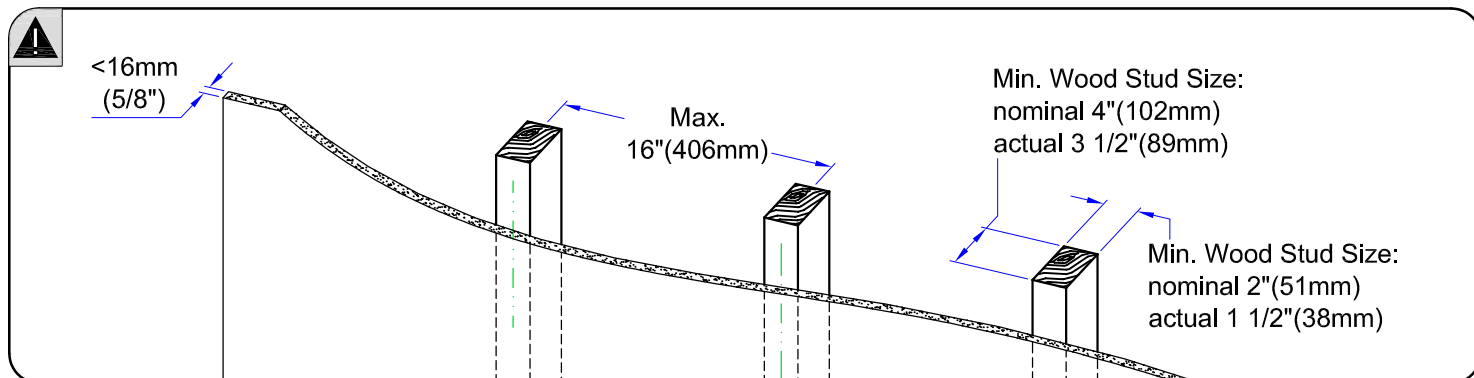

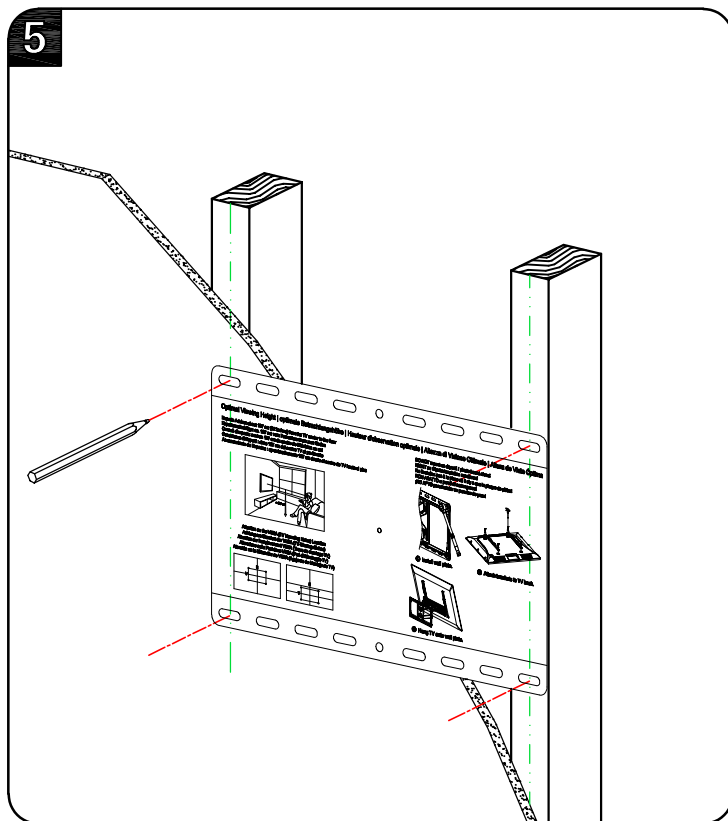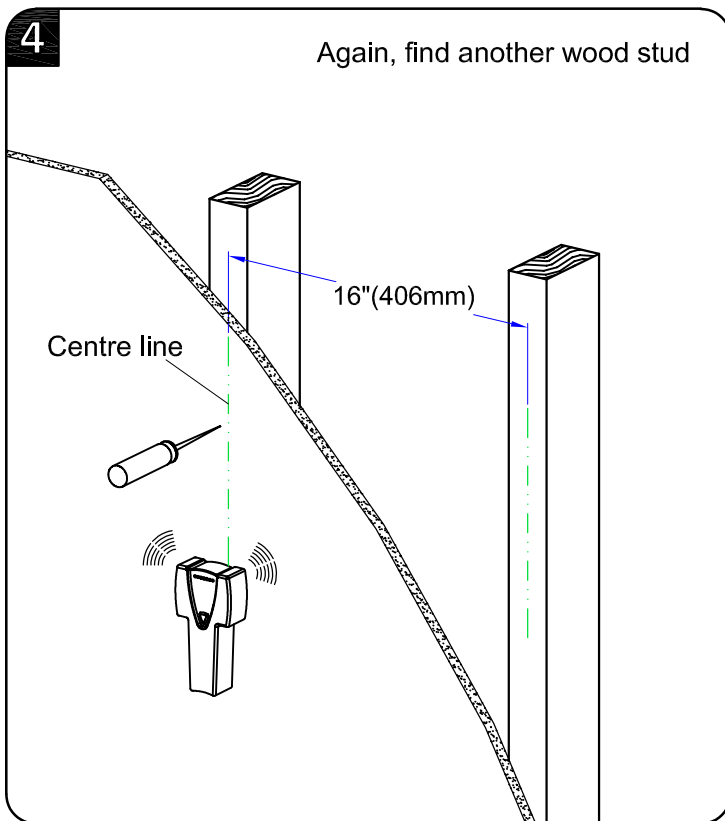

⚠ CAUTION: To avoid potential personal injury or property damage:
 All 4 lag bolts **01** MUST BE firmly tightened to prevent unwanted movement of the wall plate assembly. Ensure the wall plate assembly is securely fastened to the wall before continuing on to the next step.
 To prevent the TV falling down, the direction of the arrow should be upward as shown.

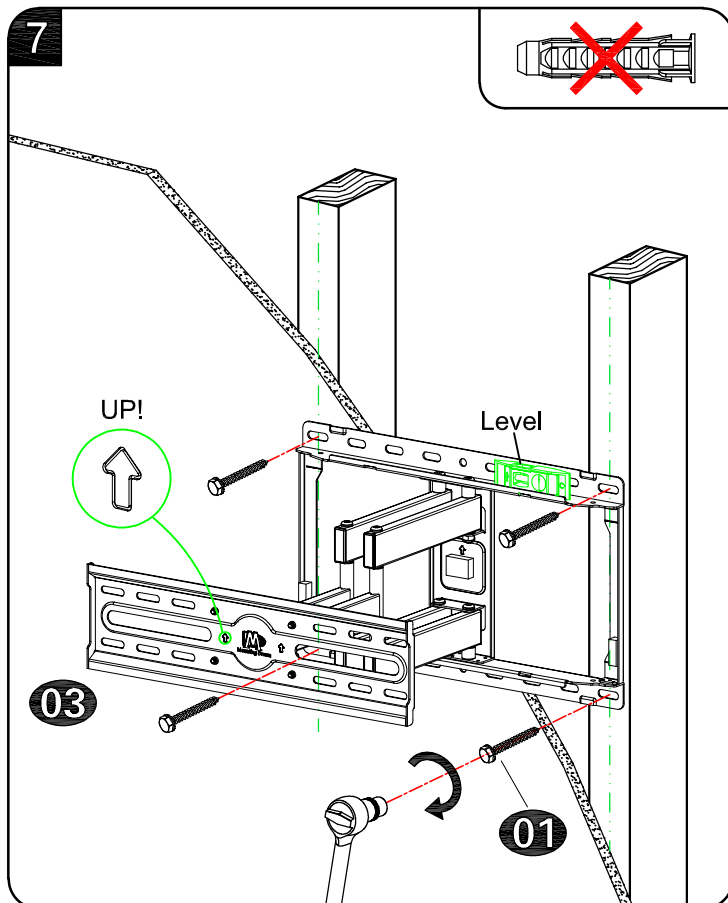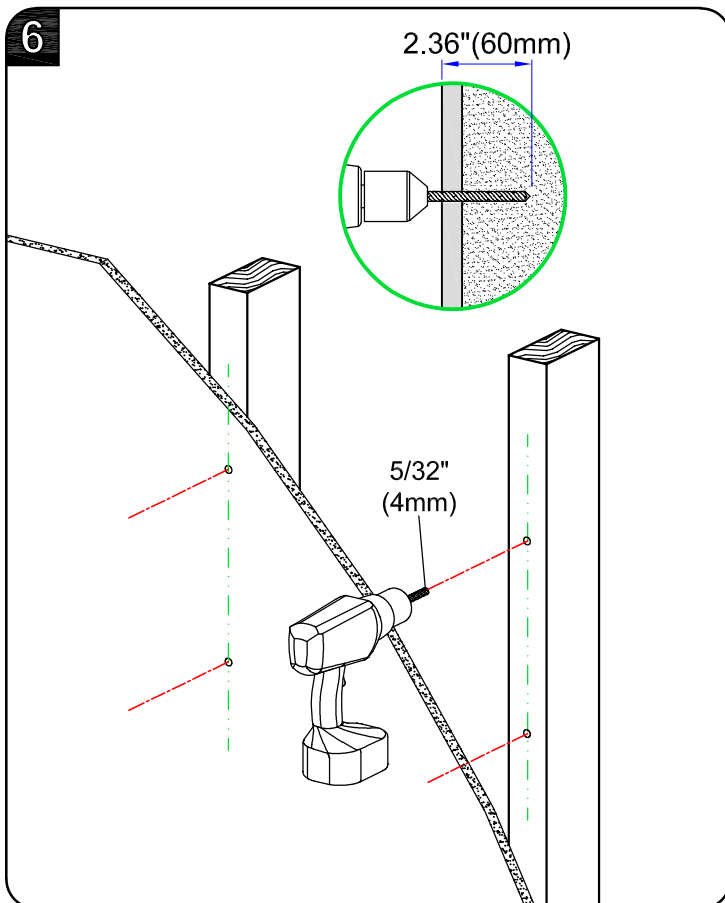

Go to Step 3 on PAGE 7.

STEP 2B

Solid Concrete Wall Installation



Concrete wall anchor (NOT INCLUDED)




Concrete Wall Anchor 4pcs
(Anchor Size: $\phi 10 \times 50 \text{mm}$)

If need concrete anchor, please
contact us through Orders.


Min.
8" (203mm)

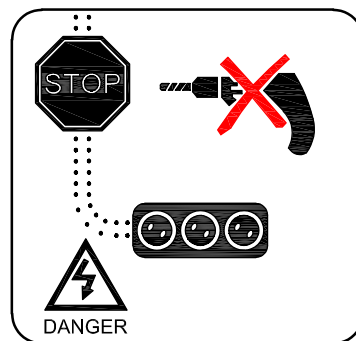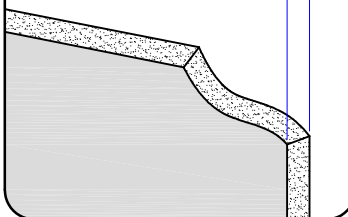

1

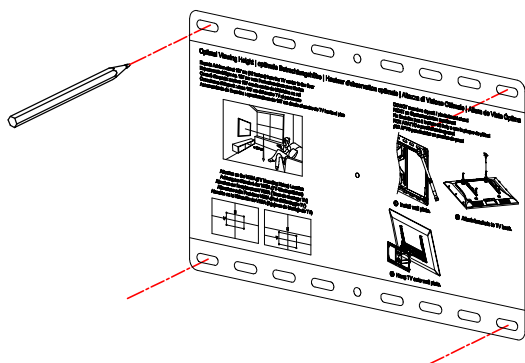

2

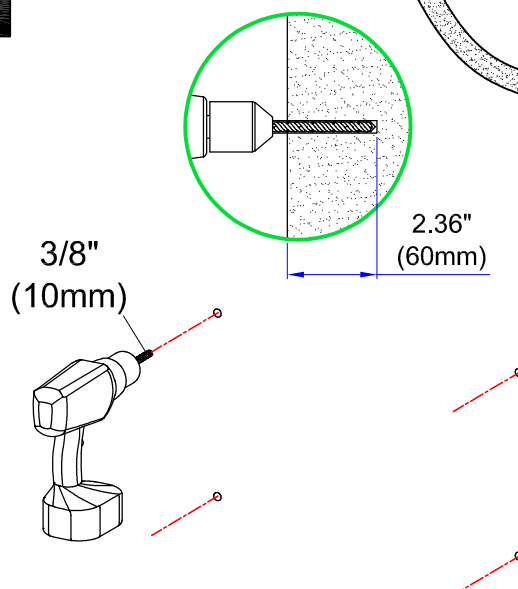


⚠ CAUTION: To avoid potential personal injury or property damage:


All 4 lag bolts **01** MUST BE firmly tightened to prevent unwanted movement of the wall plate assembly. Ensure the wall plate assembly is securely fastened to the wall before continuing on to the next step.

To prevent the TV falling down, the direction of the arrow should be upward as shown.

3


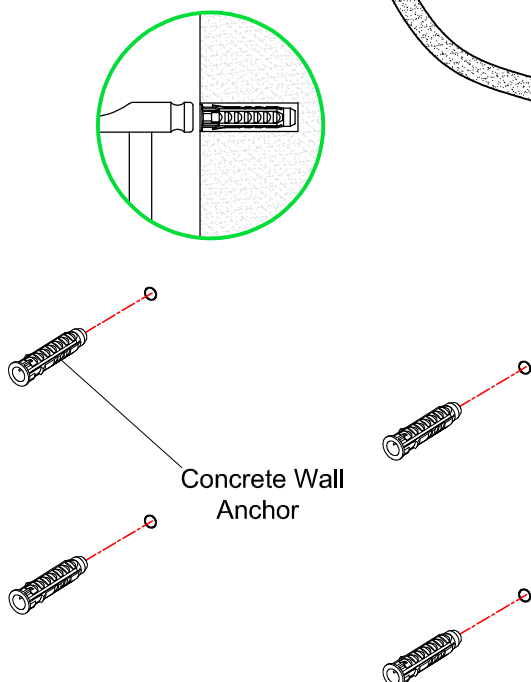


4

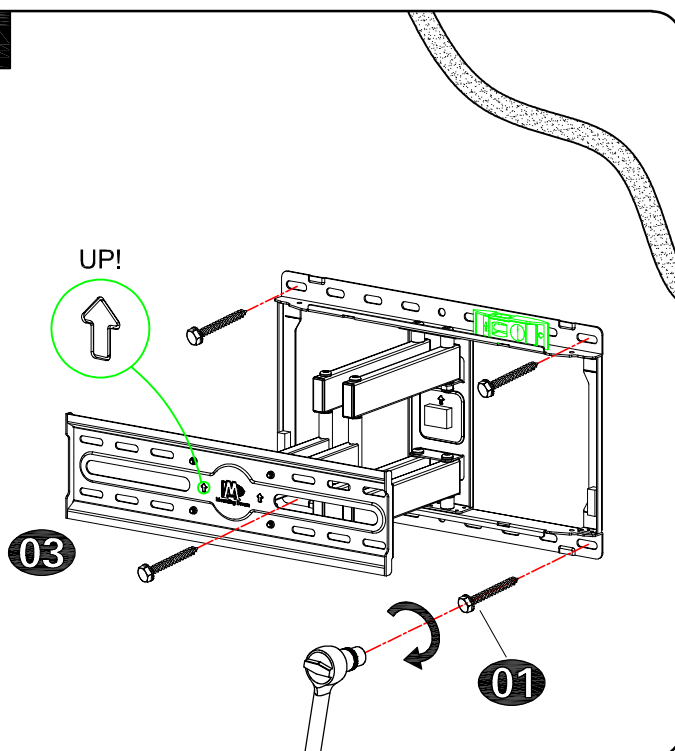


STEP 3 Hang and Secure TV to Wall Plate


Before hanging TV, please conduct "wall plate installation integrity test" first.

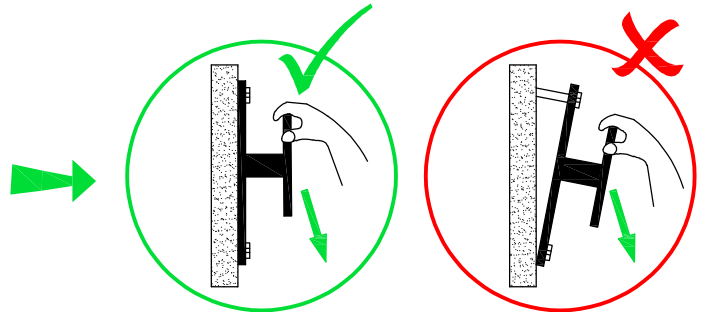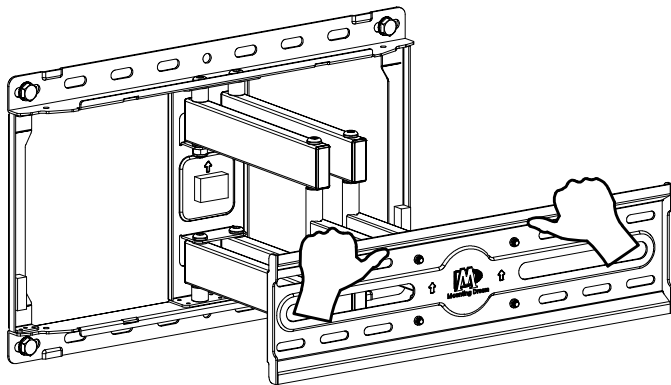

110 LBS (50 KG)


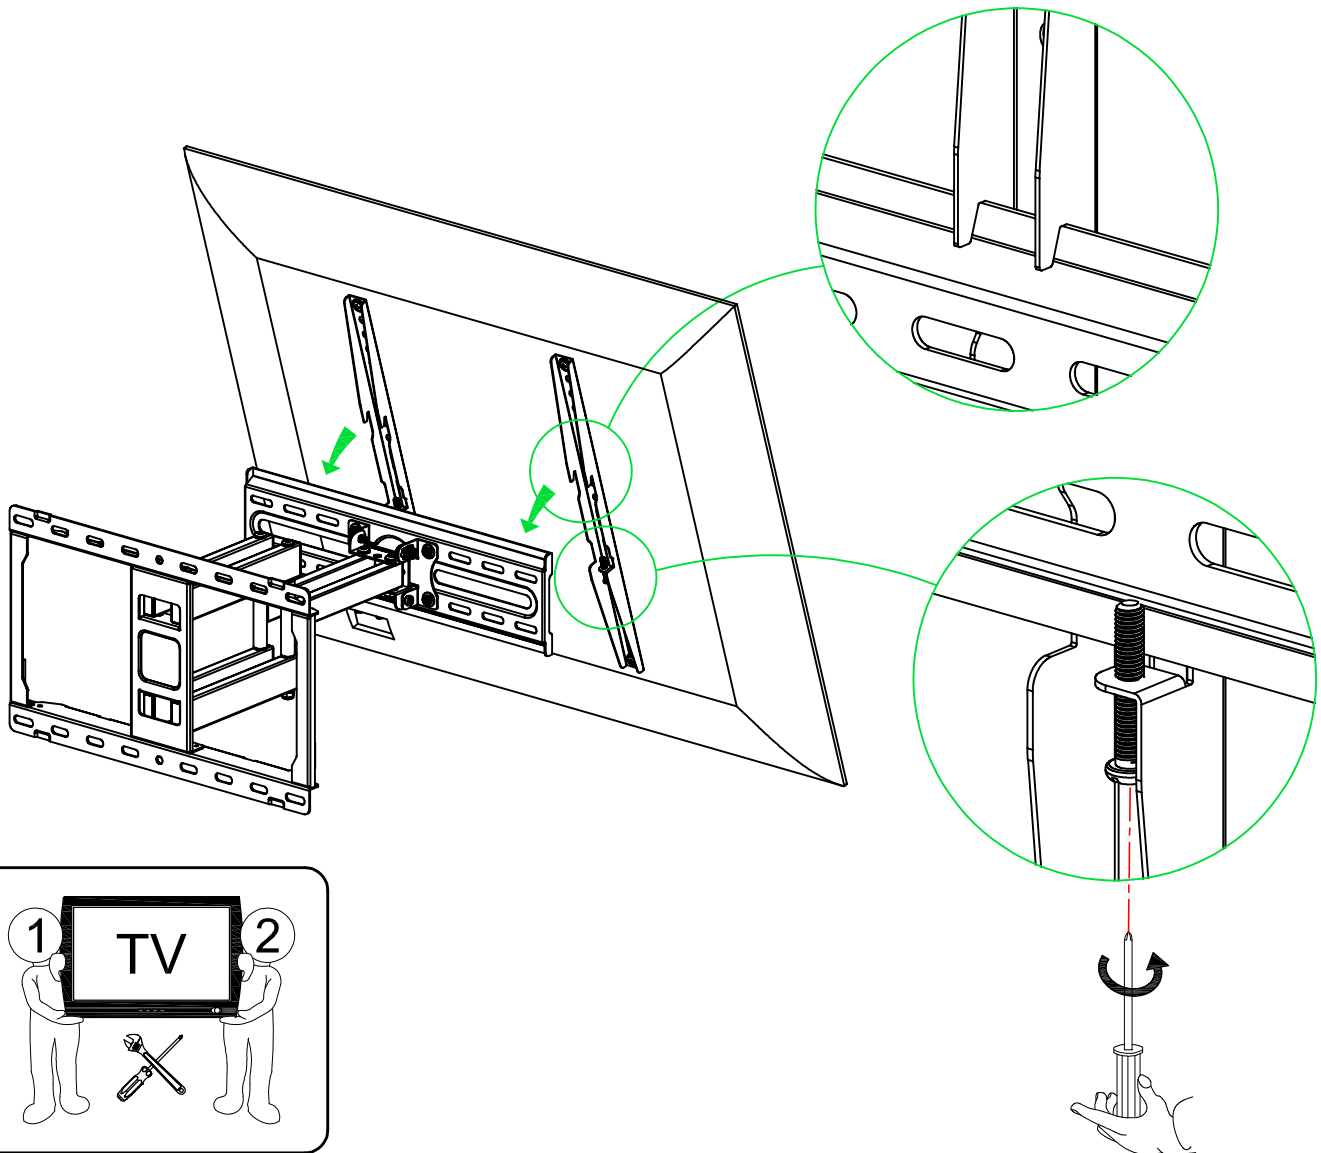


STEP 4 Adjustments

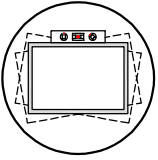


4-1 TV leveling adjustment ($\pm 4^\circ$):

Loosen 4 leveling bolts on the rear of TV plate by maximum 2 turns, adjust to level, and retighten to secure.

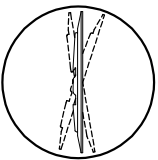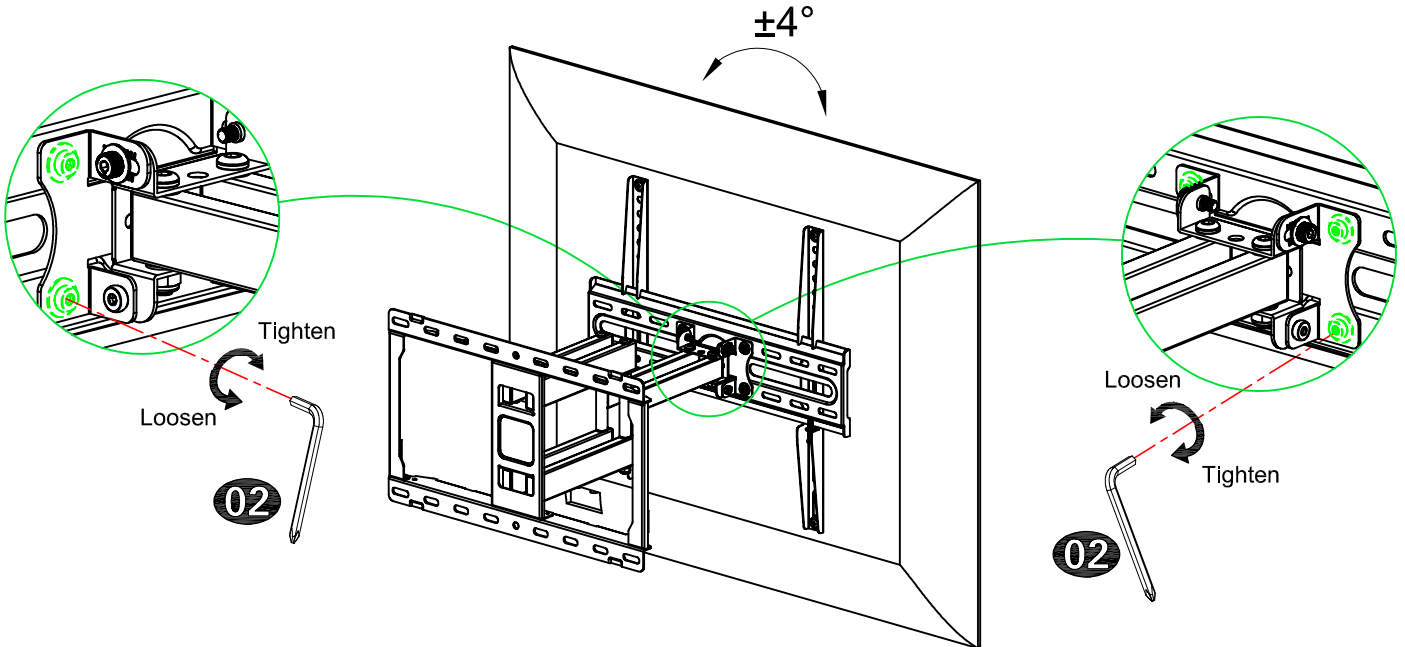


4-2 Tilting angle adjustment ($+5^\circ/-12^\circ$):


Pull TV to your desired angle then fasten 2 tilting bolts with Allen key **02**.

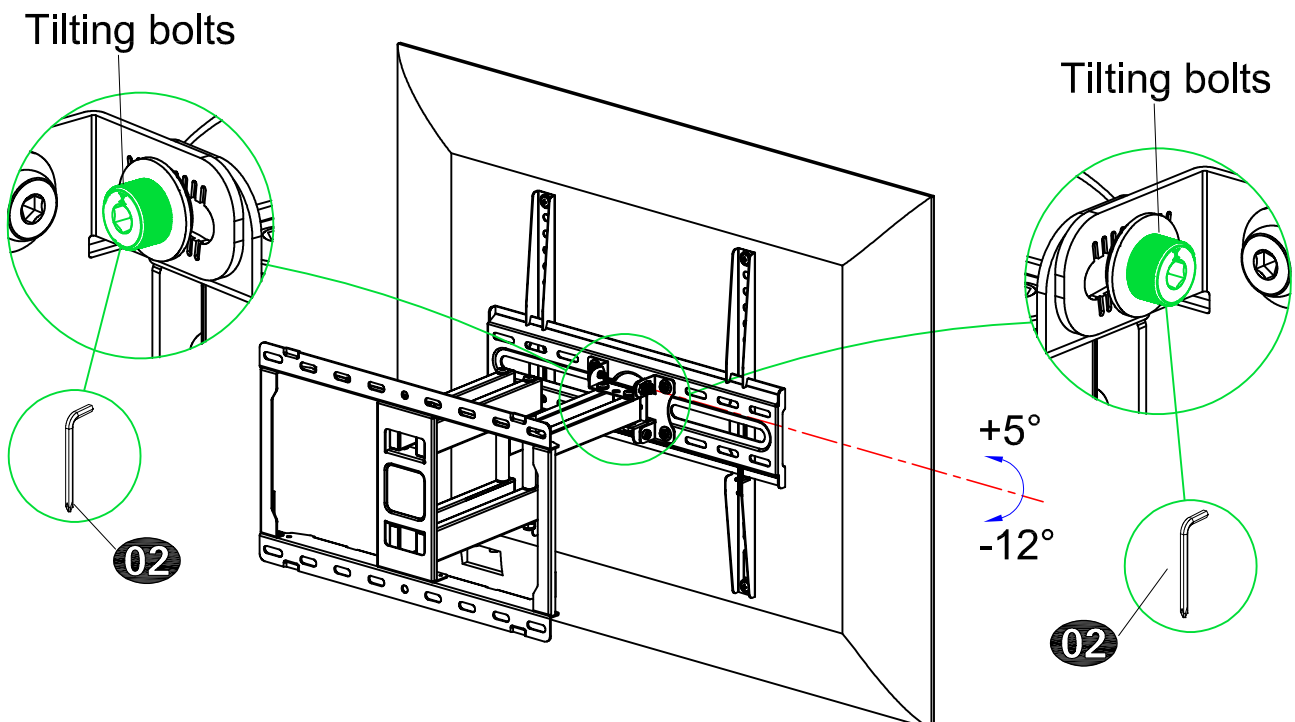

 **Allen key storage:** For easy adjustment, you might put the Allen key on the wall plate as illustration.

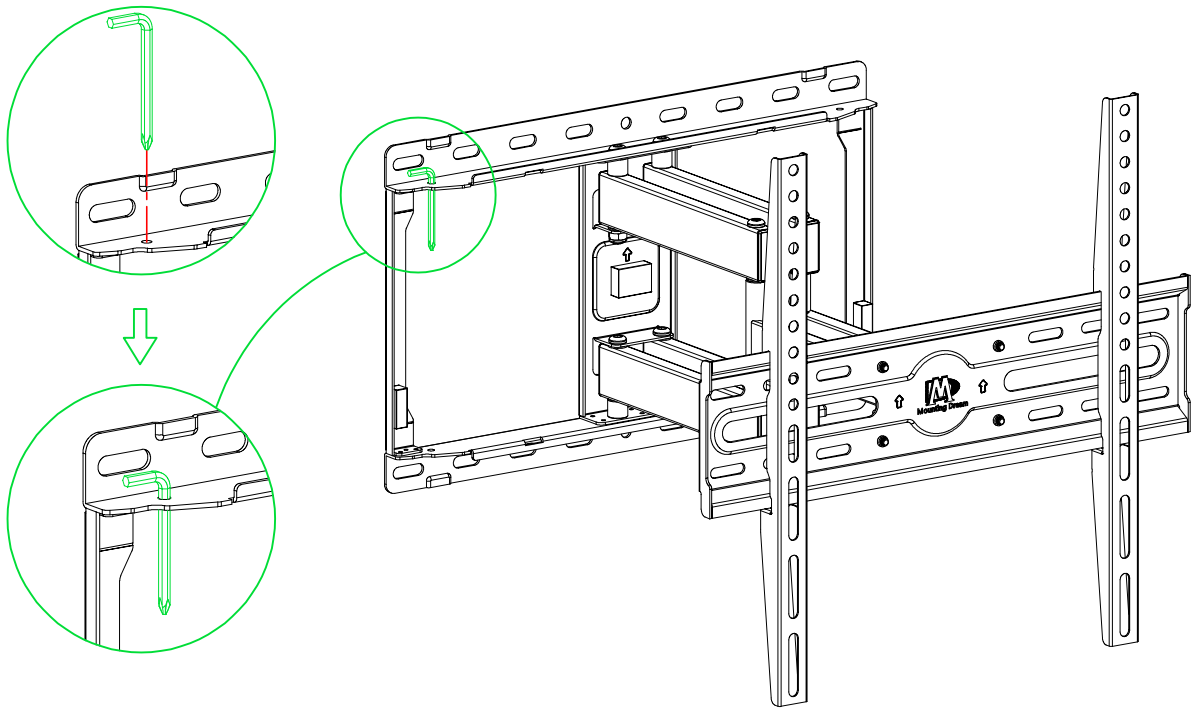

STEP 5 Cable Management

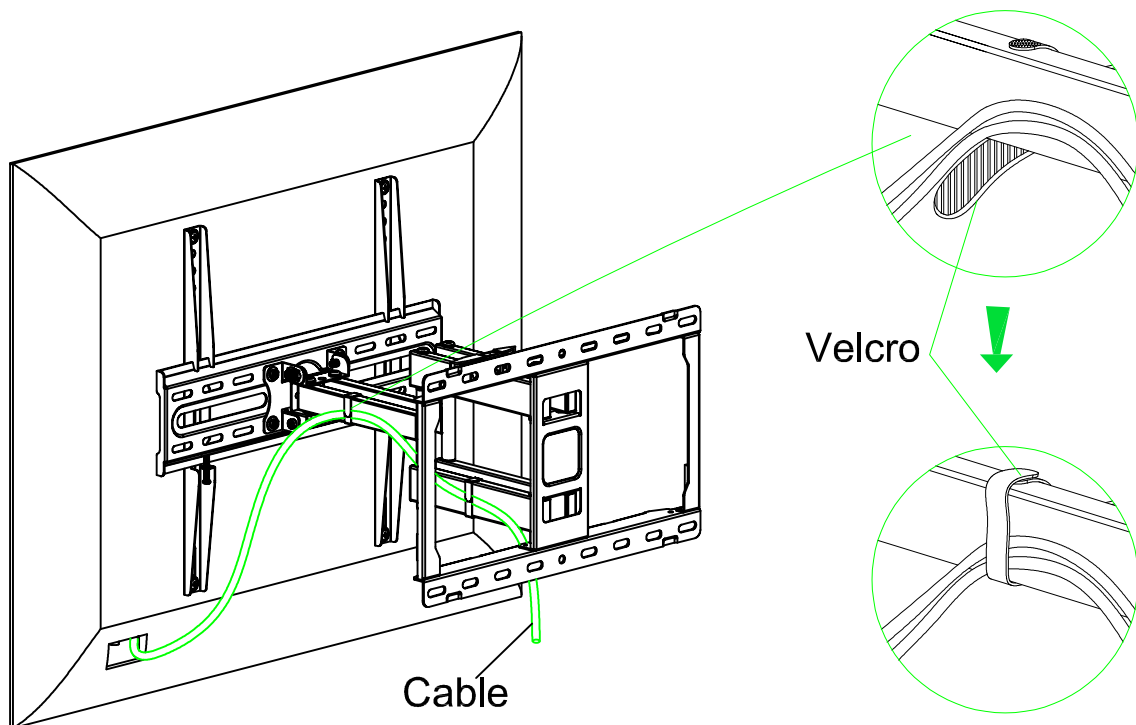

Product dimensions:

