


INSTRUCTIONS

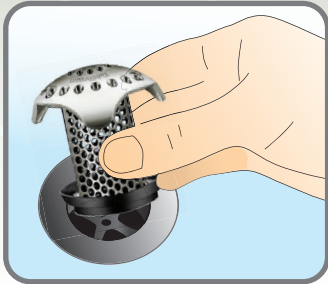


Insert TubShroom®
into the drain.
Installs in seconds



The hair wraps up
neatly around
the cylinder




All the hair is in
one place and
ready for clean up

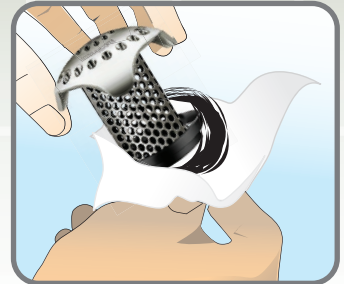

Remove the hair
with one
effortless move



Adapter to fit any
standard 1.25" drain

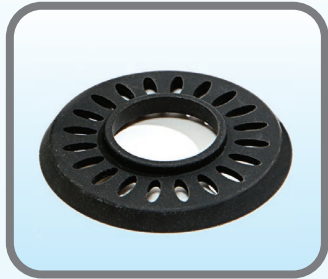

Extra Standard
1.75" Adapter



Adapter to fit
any standard 2" drain



Not compatible
with walk-in shower drains
or with bathroom sink drains.



Make Sure Your Drain
is a Standard
1.5" to 1.75"
Width and Equipped
with a Crossbar



Clear the Drain
if Clogged
Before Installation



TubShroom® Must
Sit Raised about 0.5"
For Optimal Performance
as Illustrated