

REAR BUMPER

User Manual

2009-2018 Ram 1500



| | |
|---------------------|-------------------------|
| Model: | NRM01B105 |
| Material: | Q235A |
| Product Dimensions: | 77.2 x 18.5 x 11.6 inch |
| Package Dimensions: | 73.6 x 13.4 x 11.8 inch |
| Product Weight: | 82.5 lbs |


※ Thank you for purchasing the REAR BUMPER. Please read this manual carefully and keep it properly if you need to refer to it afterward. If you need any support or assistance, please contact us with your product model number and order number, and our support team will help you solve problems.

⚠ WARNING






※ This product is designed primarily to enhance the appearance of the vehicle. Do not rely in any way on the components of this product to protect against injury or death in the event of an accident. To reduce the risk of serious injury or property damage, please read all safety messages and understand all instructions and procedure notices before attempting to install or use this product.



⚠ CAUTION

※ Properly torque and recheck fasteners and security of step tread after 250 miles and inspect frequently. Do not use if damaged.

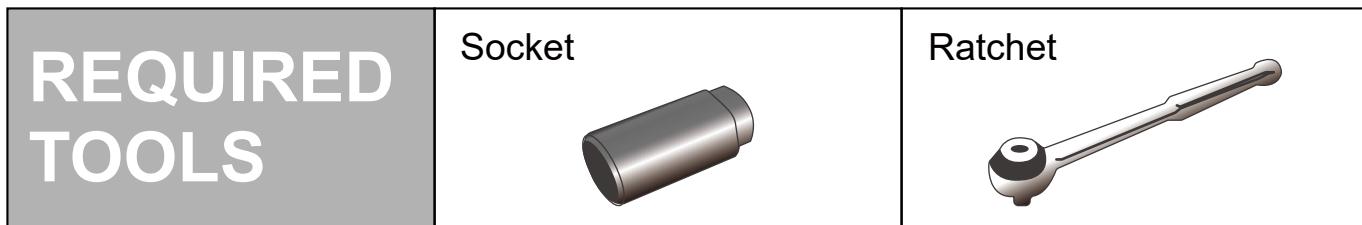

Parts Information

| NO. | Parts Name | Size | Line Graph | Qty | Color |
|-----|-----------------------|----------|--|-----|-------------|
| / | Mid Bumper | / |  | 1 | Black |
| / | Bumpers L/R | / |  | 1 | Black |
| / | Shackles brackets | / |  | 2 | Black |
| / | 4 Inch Ledlight | / |  | 2 | Black |
| / | Shackles | / |  | 2 | Black |
| W22 | Spring Washer | Φ10 |  | 5 | Dacro Black |
| W23 | Flat Washer | Φ10x25x2 |  | 9 | Dacro Black |
| B35 | Hex Bolts | M10x35 |  | 5 | Dacro Black |
| N15 | Hex Nuts | M10 |  | 5 | Dacro Black |
| B15 | Half Head Allen Bolts | M8x20 |  | 9 | Dacro Black |
| N14 | Hex Flange Nuts | M8 |  | 9 | Dacro Black |

| NO. | Parts Name | Size | Line Graph | Qty | Color |
|-----|-----------------------|----------|--|-----|-------------------|
| B74 | Half Head Allen Bolts | M6x35 |  | 5 | Dacro Black |
| N11 | Hex Lock Nuts | M6 |  | 5 | Dacro Black |
| N24 | Hex Nuts | M12 |  | 5 | Blue Zinc Plating |
| B75 | Hex Bolts | M12x45 |  | 5 | Blue Zinc Plating |
| W29 | Spring Washer | Φ12 |  | 5 | Blue Zinc Plating |
| W28 | Flat Washer | Φ12x30x3 |  | 5 | Blue Zinc Plating |

※Note:

spare parts such as W22、W23、B35、N15、B15、N14、B74、N11、N24、B75、W29、W28 are provided with 1PCS each (included in the number of parts details).



Installation Instructions

Step 1: Open the carton and take out the parts. Check whether the number of components is complete.


Step 2: Remove the original bumper and prepare the parts needed to install the bumper.





Step 3: Install the Bumper.

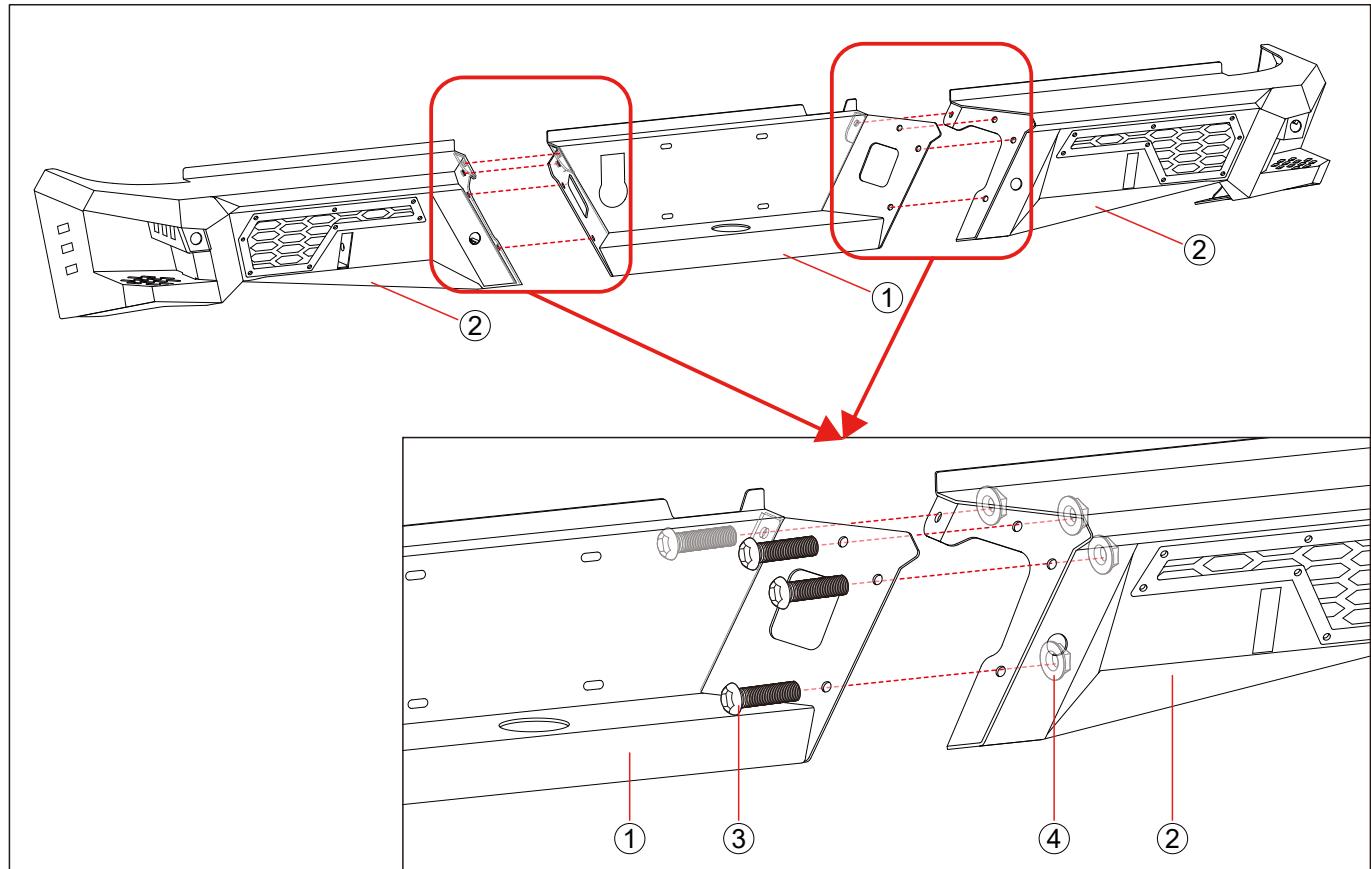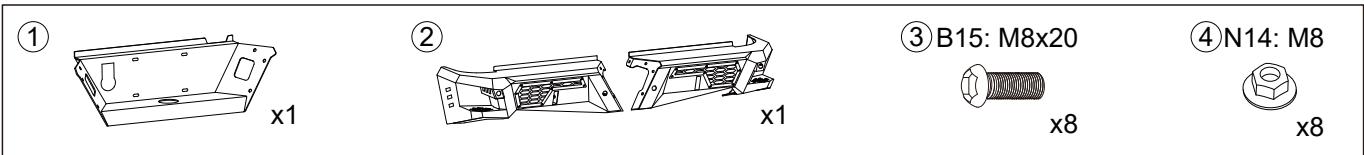


Brackets installed successfully

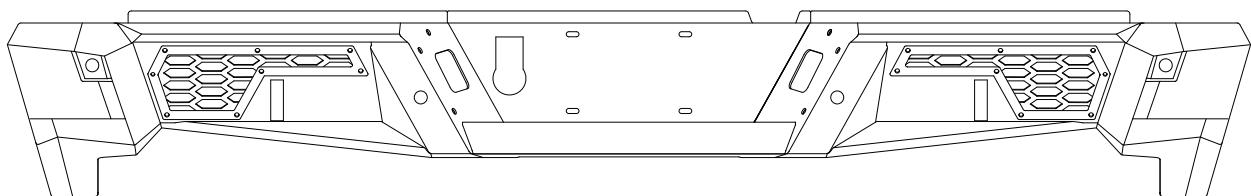


Step 4: Install the Shackles.

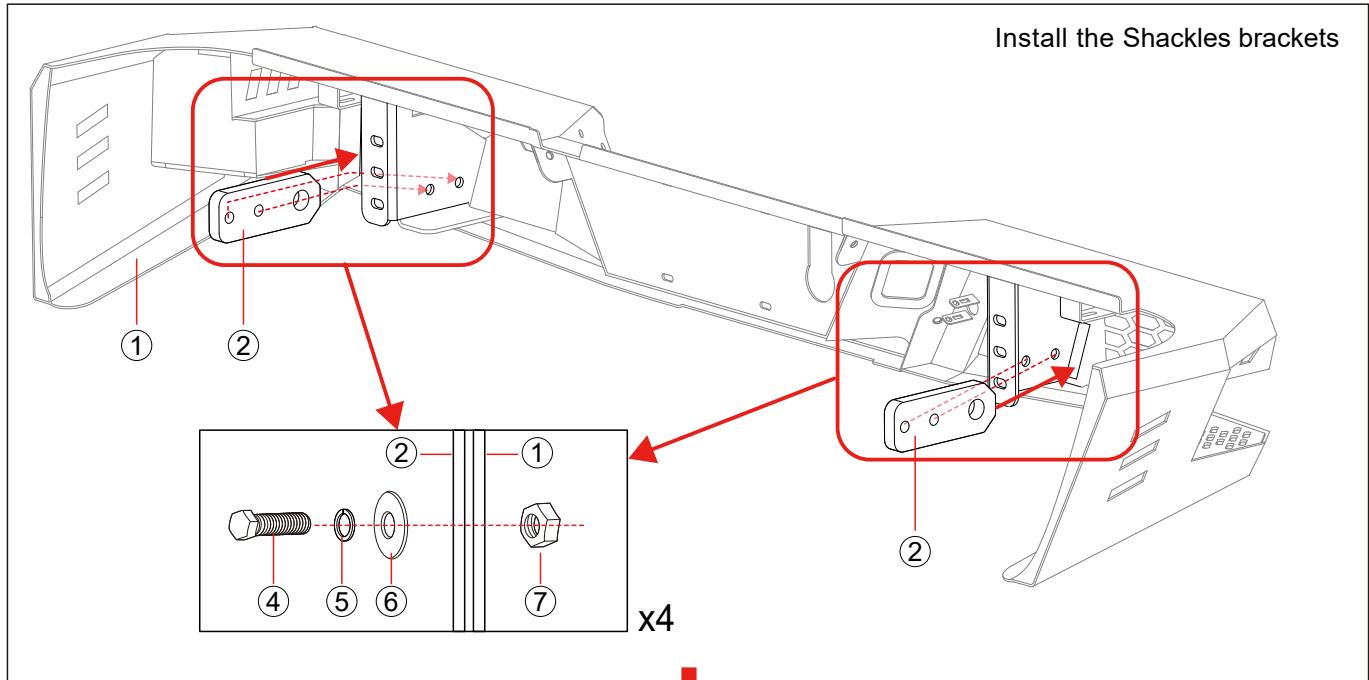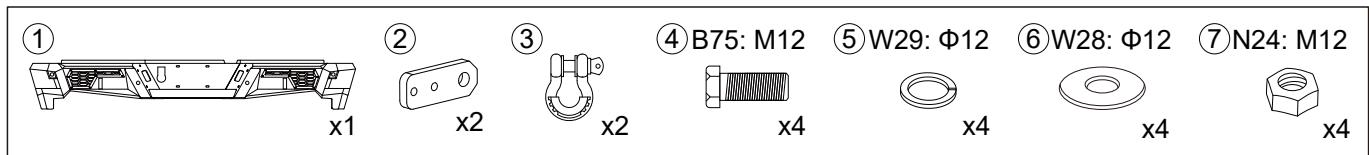



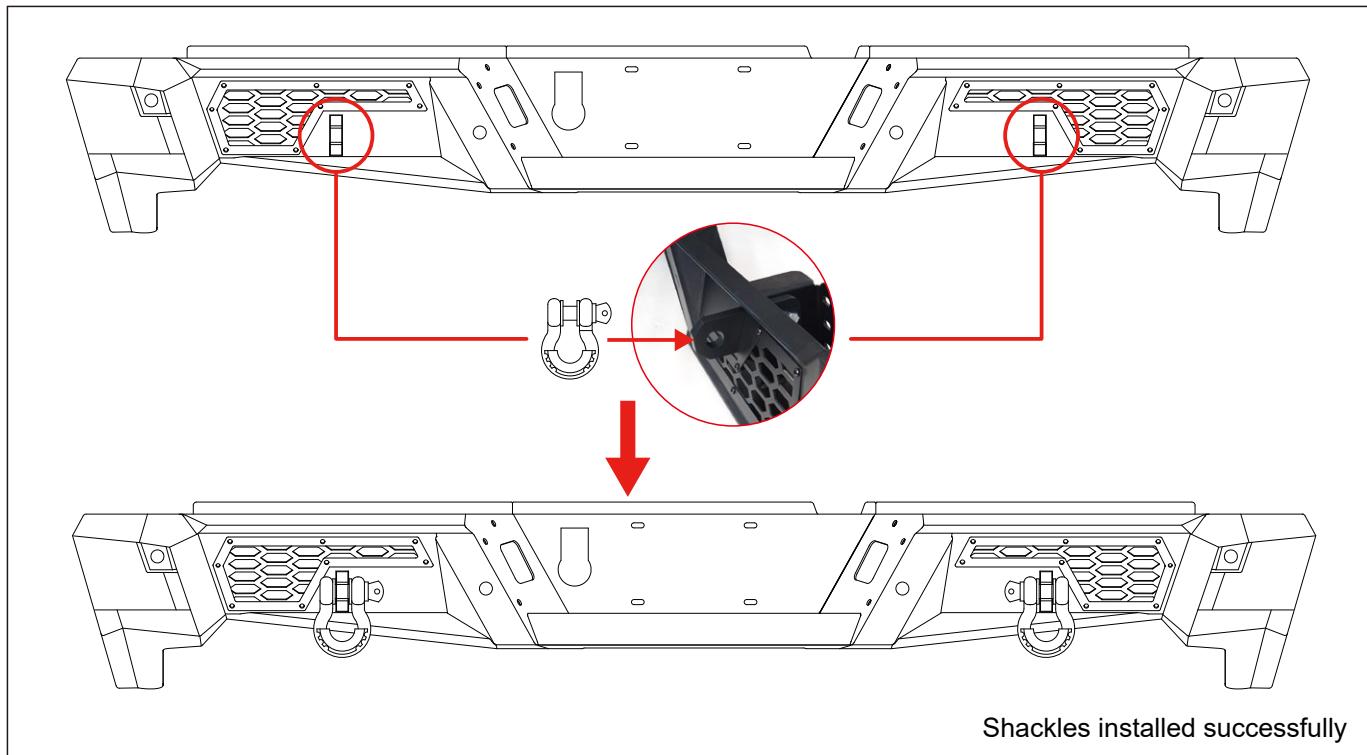


Step 5: Install the 4 Inch Ledlight.



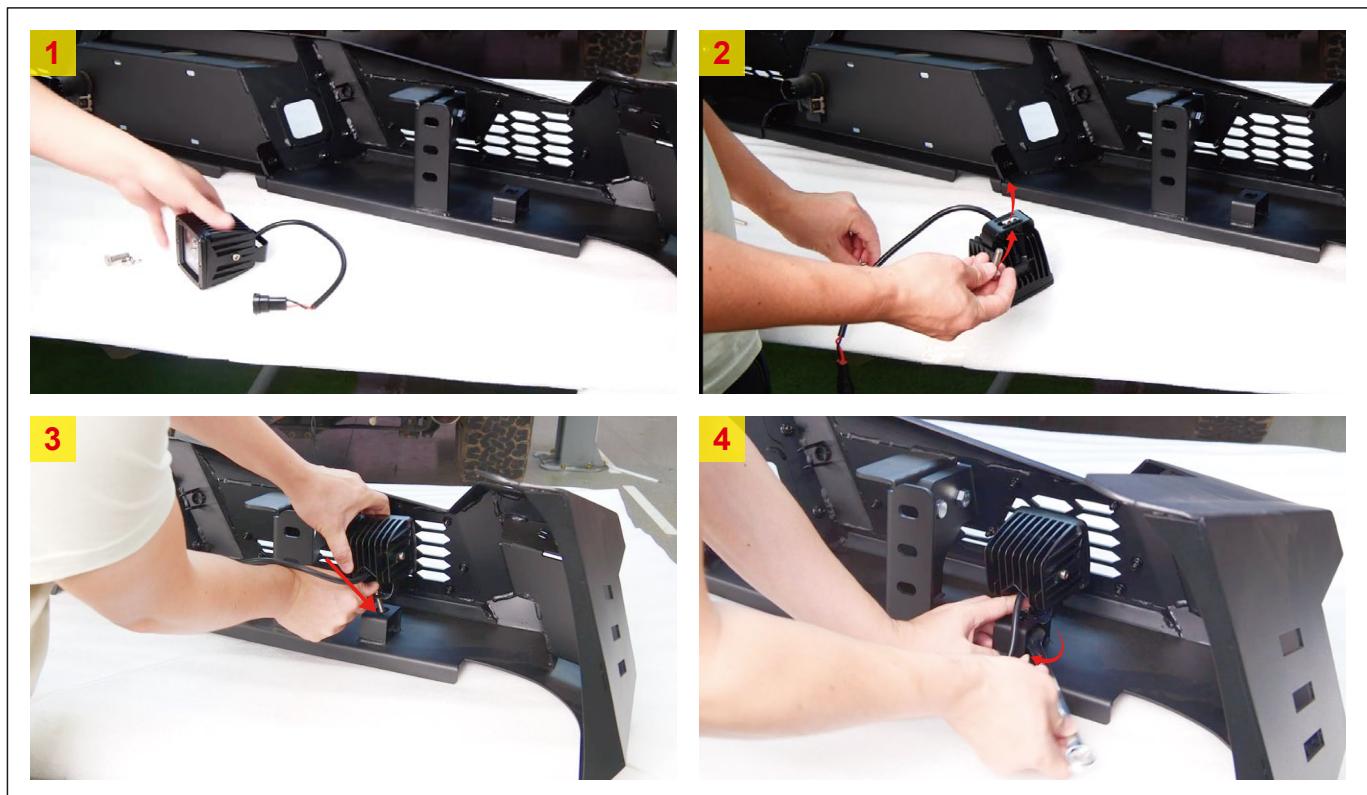


Step 6: Install the Radar Probe.

Note: If the car does not have a radar probe, this step can be ignored.

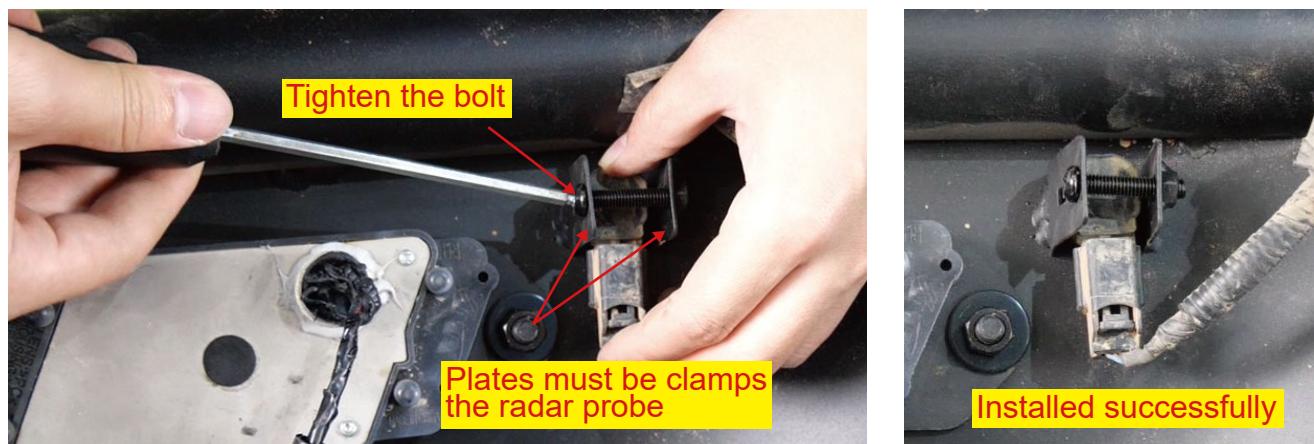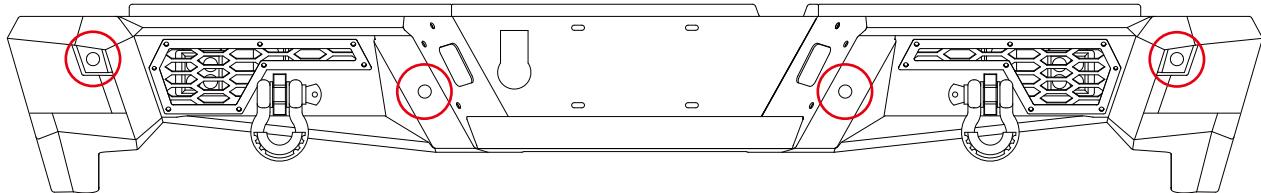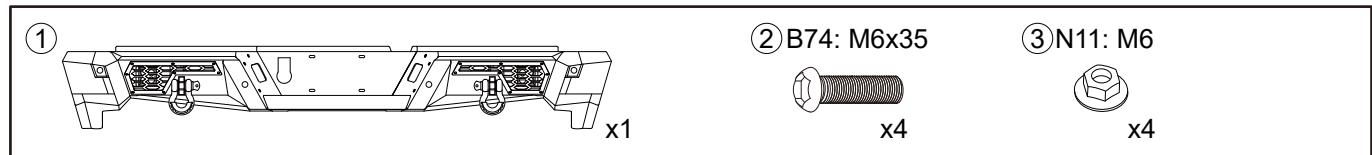

Step 7 Install the Bumper.

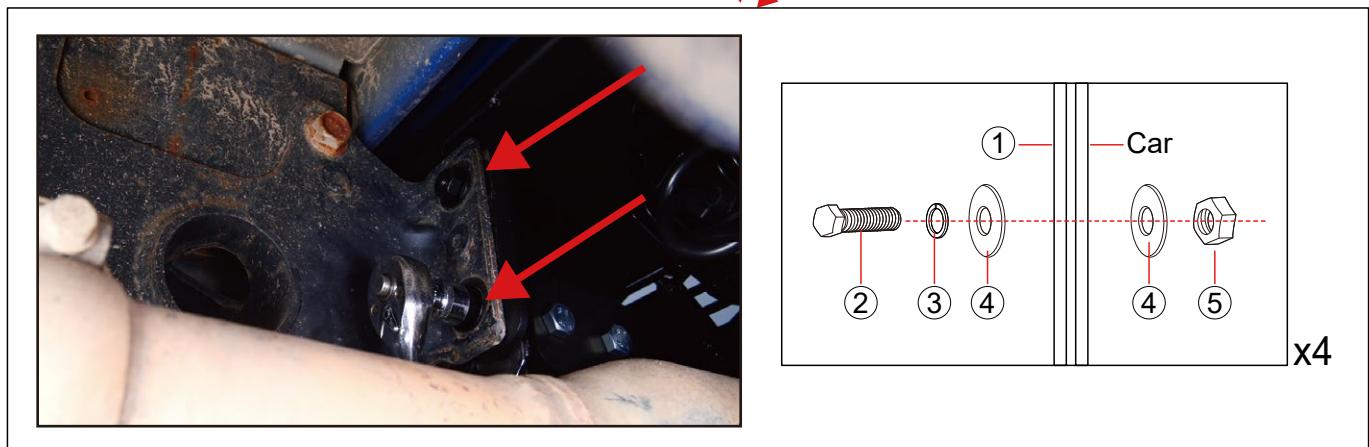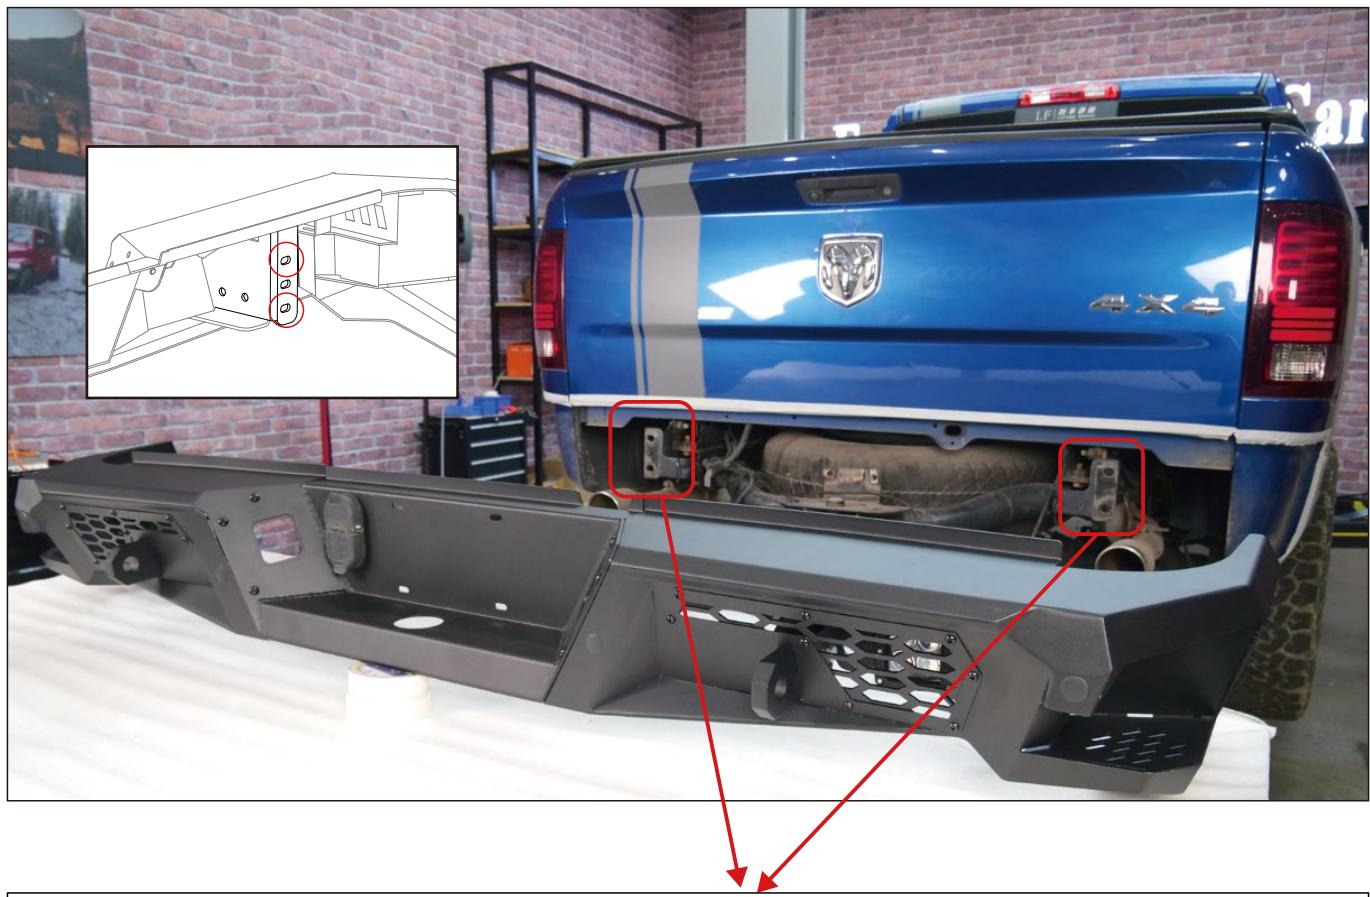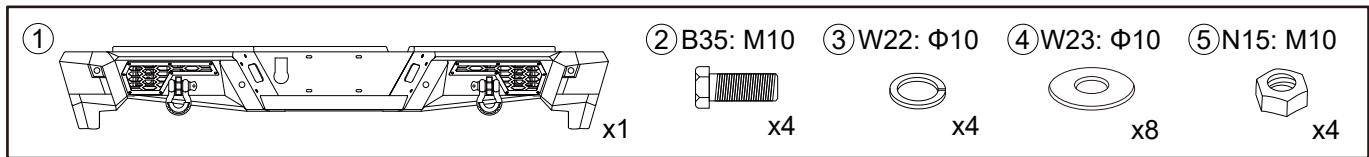

Insert the trailer power

