


Metal Platform Bed Frame

Instruction Manual

BF-3611V3-FULL

BF-3611V3-QUEEN

BF-3611V3-KING

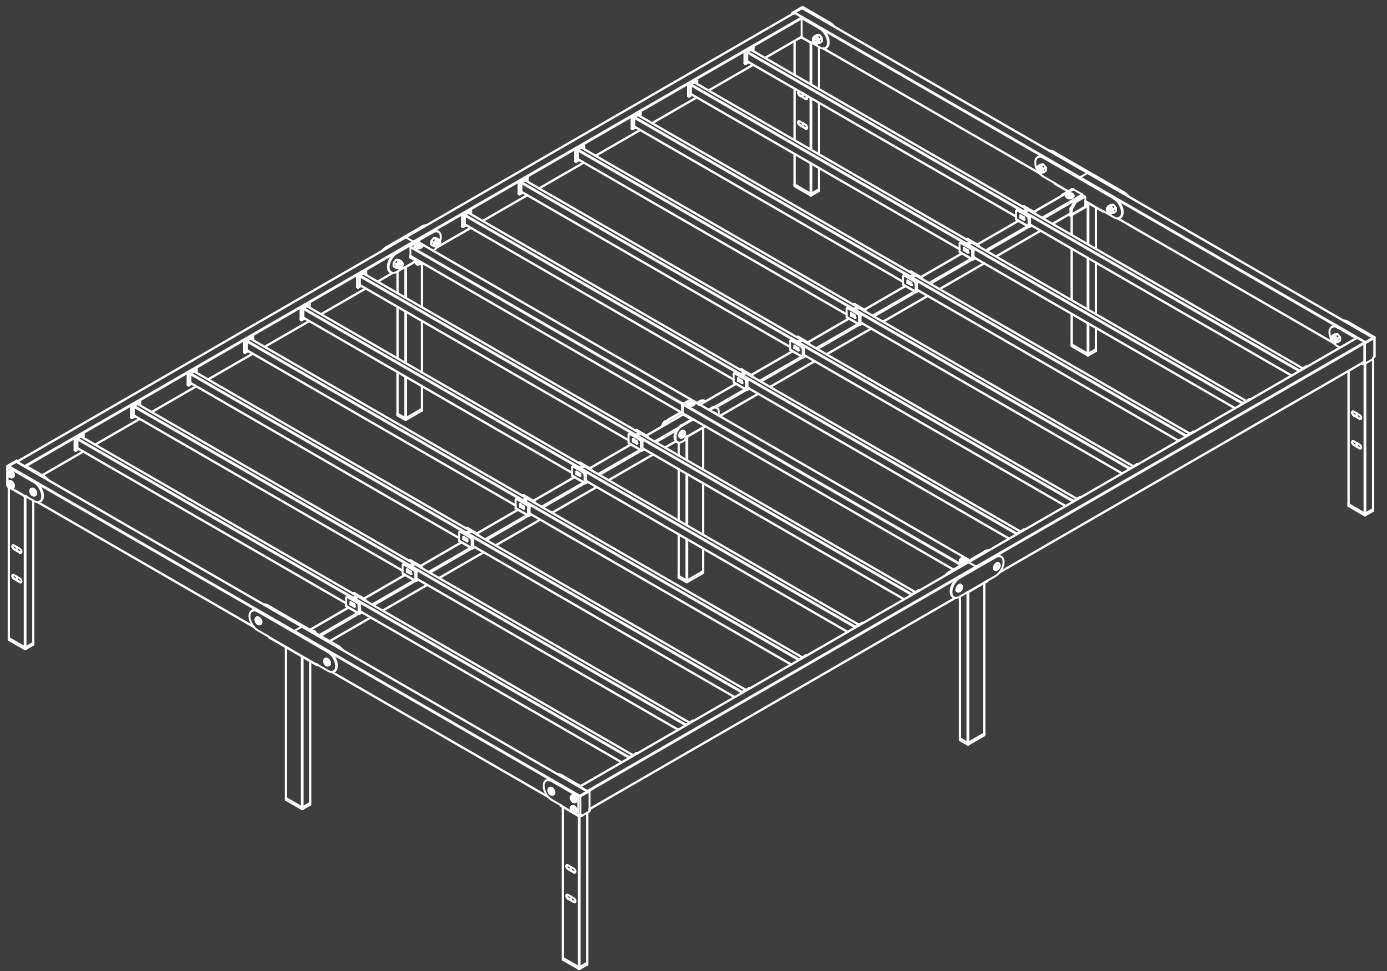


 EST 9:00AM--17:00PM

 HJ-Customer-Service@outlook.com


 (909)637-7665 | (909)637-7593

1 Component List

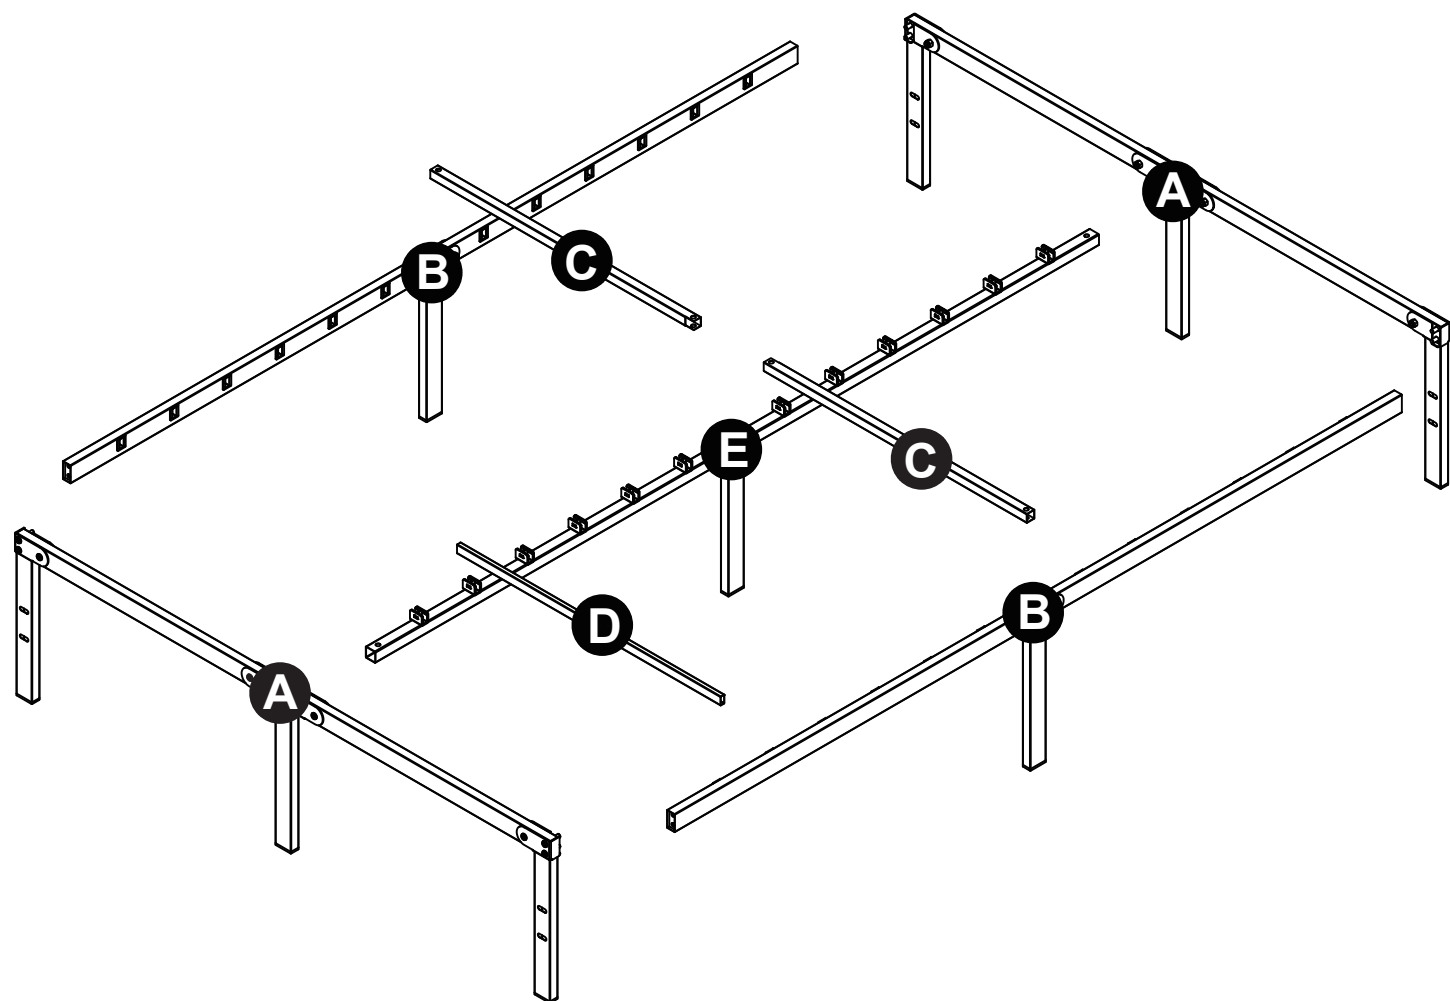


2 Package List

A

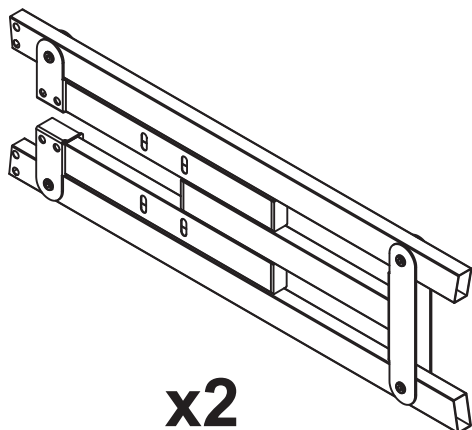

x2
Frame


B

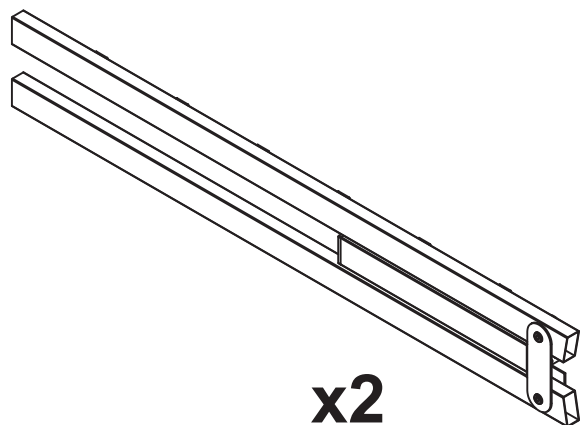

x2
Side Frame


2 Package List

C

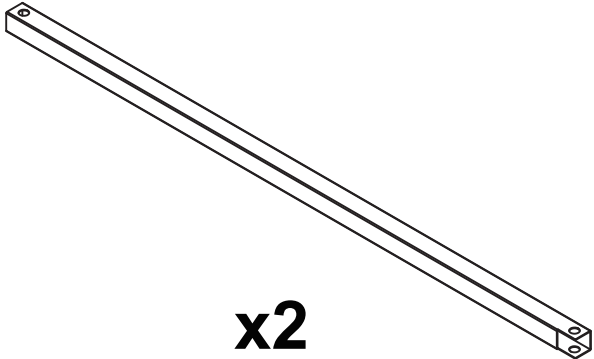


x2
Center Slat

D

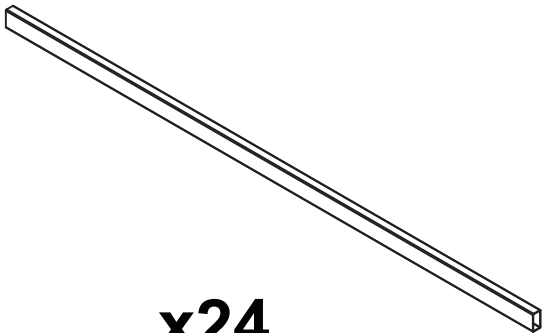

x24
Slats

E

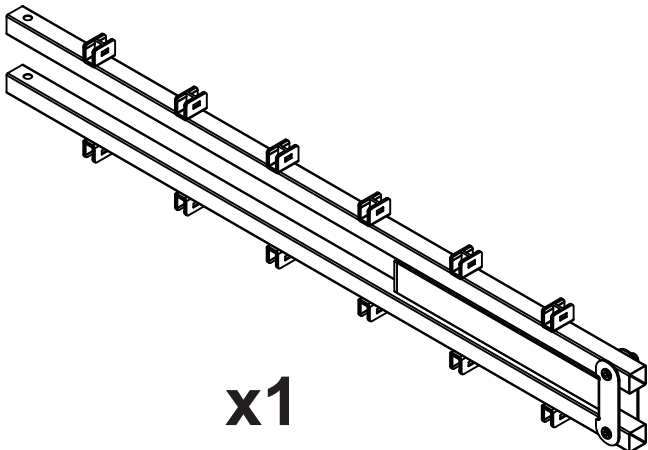


x1
Middle Frame

F




x1
Wrench

G



x12
Screws
M8 x 40mm

H


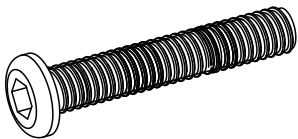


x1
Screws
M8 x 60mm


Step 1

For longer use

Re-tighten bolts every 6 months by using the enclosed allen-key.
*Using an electric drill can damage the chair.
Please re-tighten bolts manually.

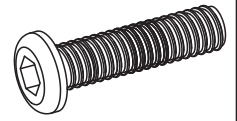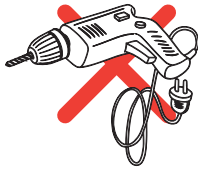


Gx10

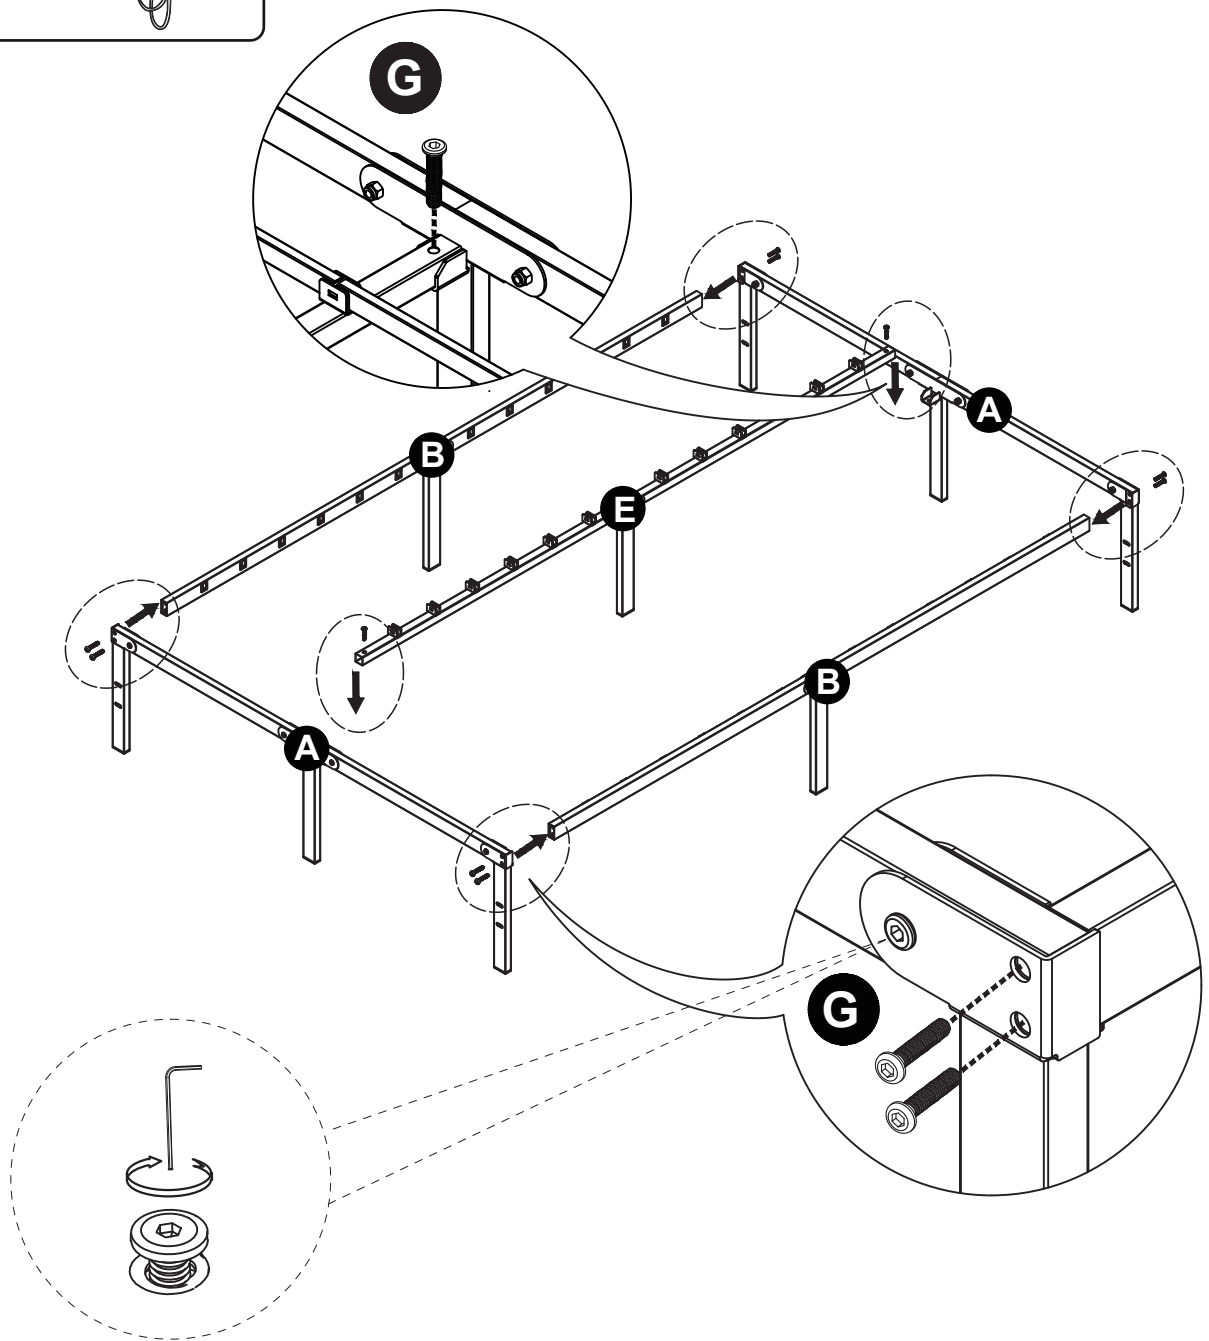

Attach Side Frame **(B)*2** to the four corners of the Frame **(A)*2** and Insert Middle Frame **(E)*1** onto the groove in the middle of the Frame **(A)*2** lightly tighten with the Screws **(G)*10**



NOTE: Fully expand the frame before installing the screws.
Otherwise the screw cannot be twisted in. The screws are tightened by **50%** first.

Step 2

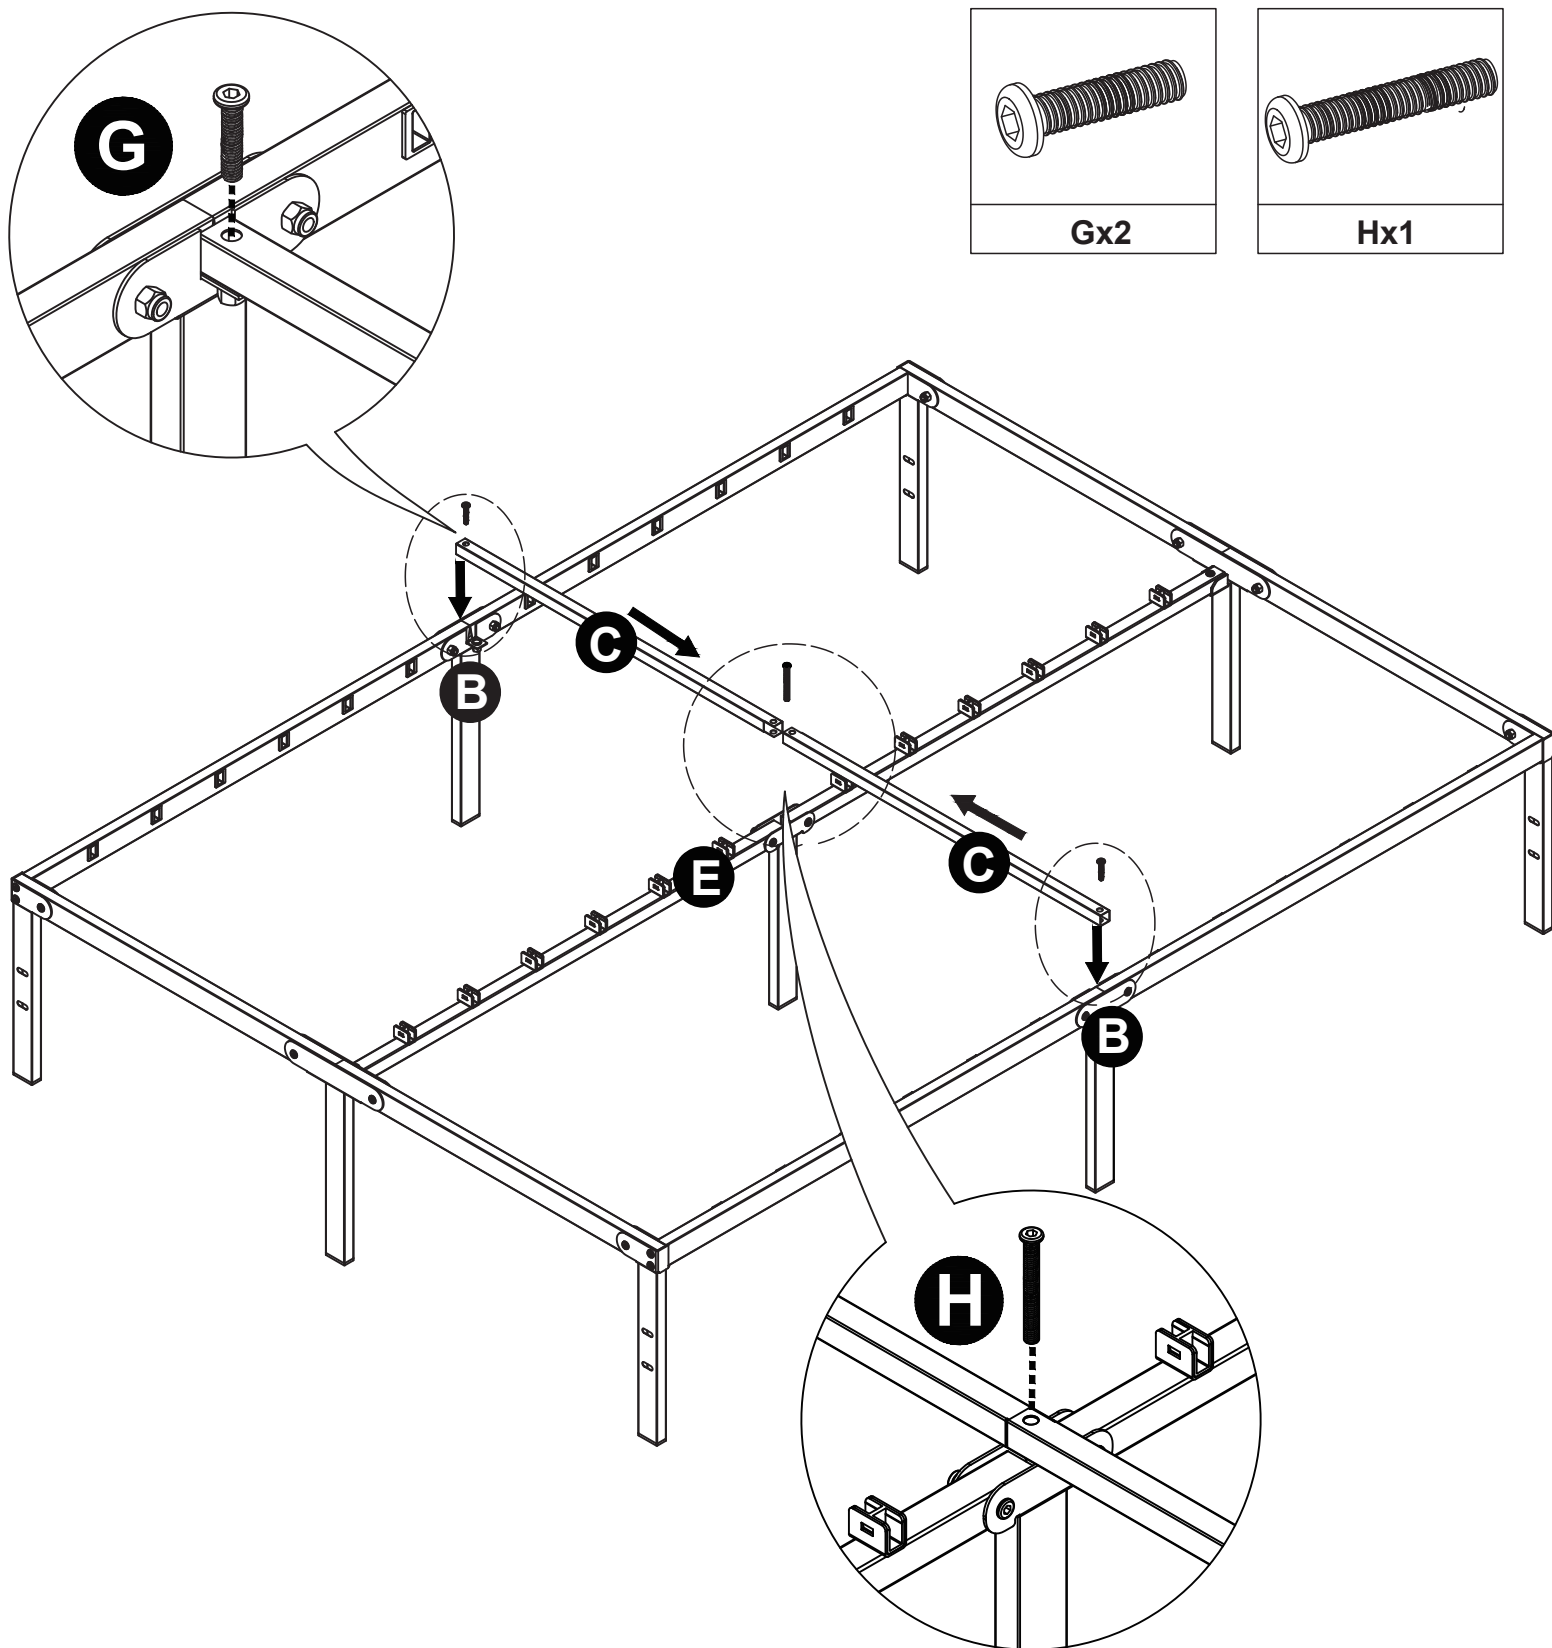

Insert two Center Slat (C)*2 together. After fixing both side to the Side Frame (B)*2 with the Screws (G)*2, and then fix the Center Slats (C)*2 to the Middle Frame (E)*1 with Screw (H)*1.


Step 3

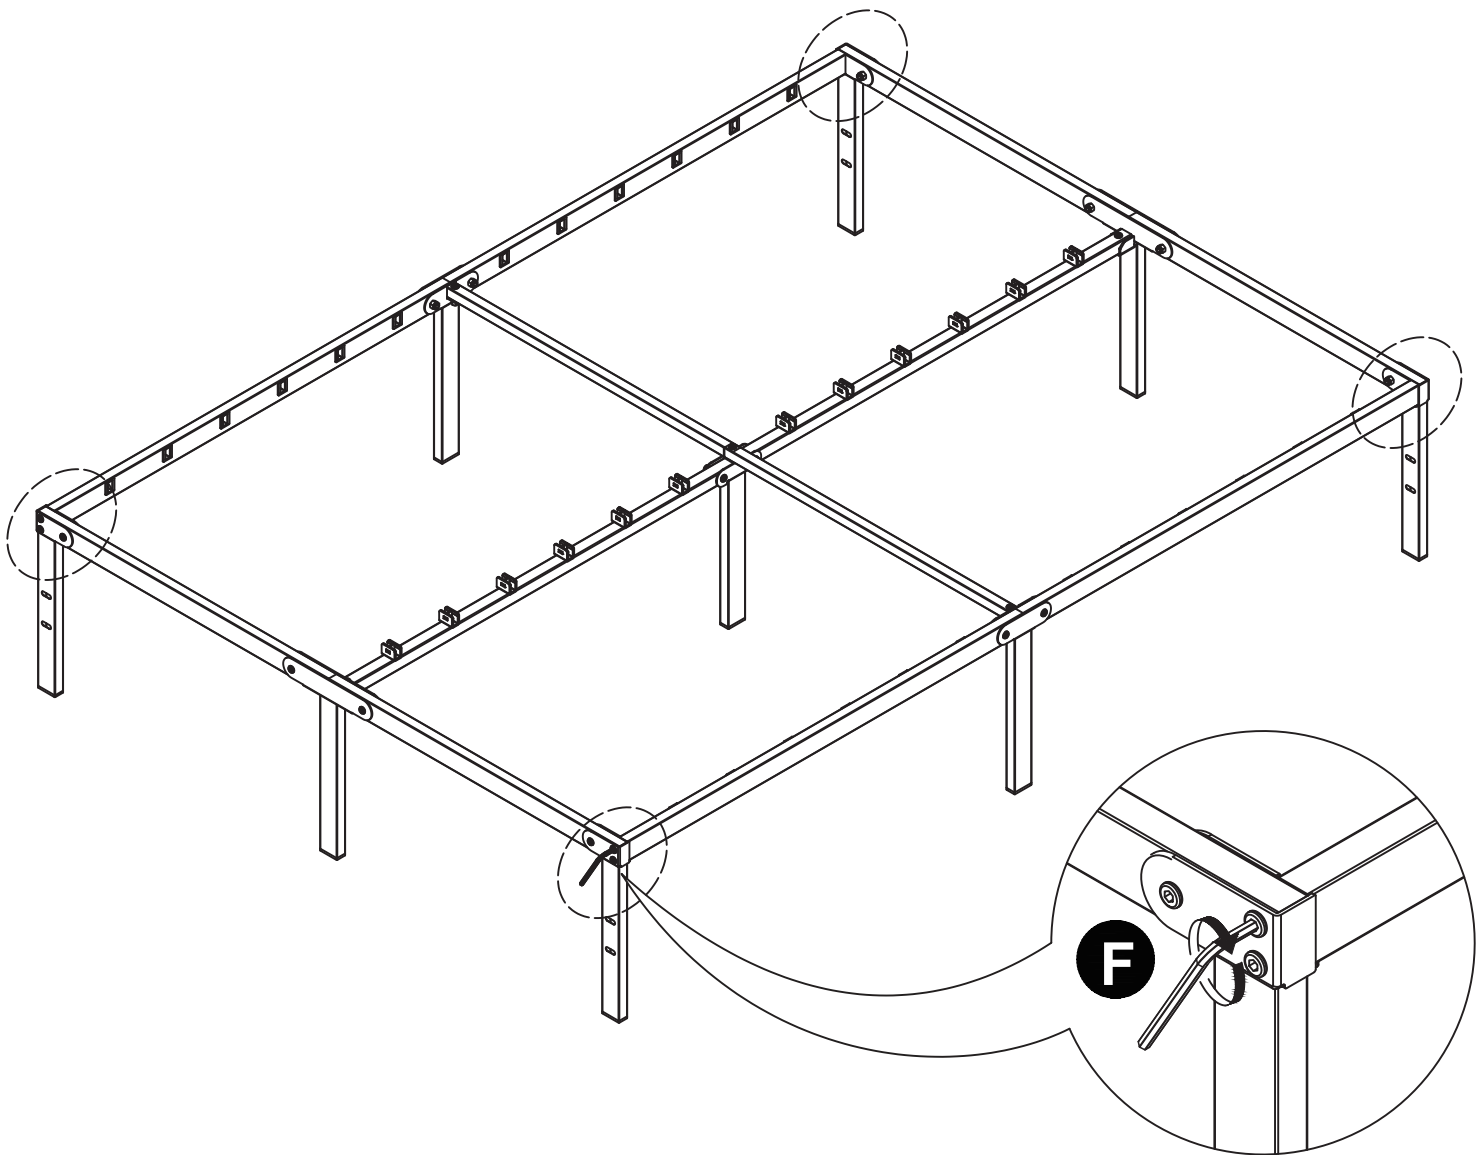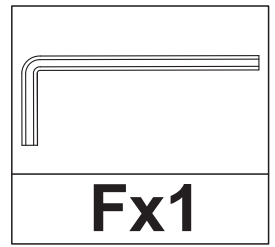


Tighten the screws at **4** corners of the bed with Wrench(**F**).

NOTE: Once installation is complete, tighten all screws **100%**.
Tighten the screws again every 3 months.

Step 4

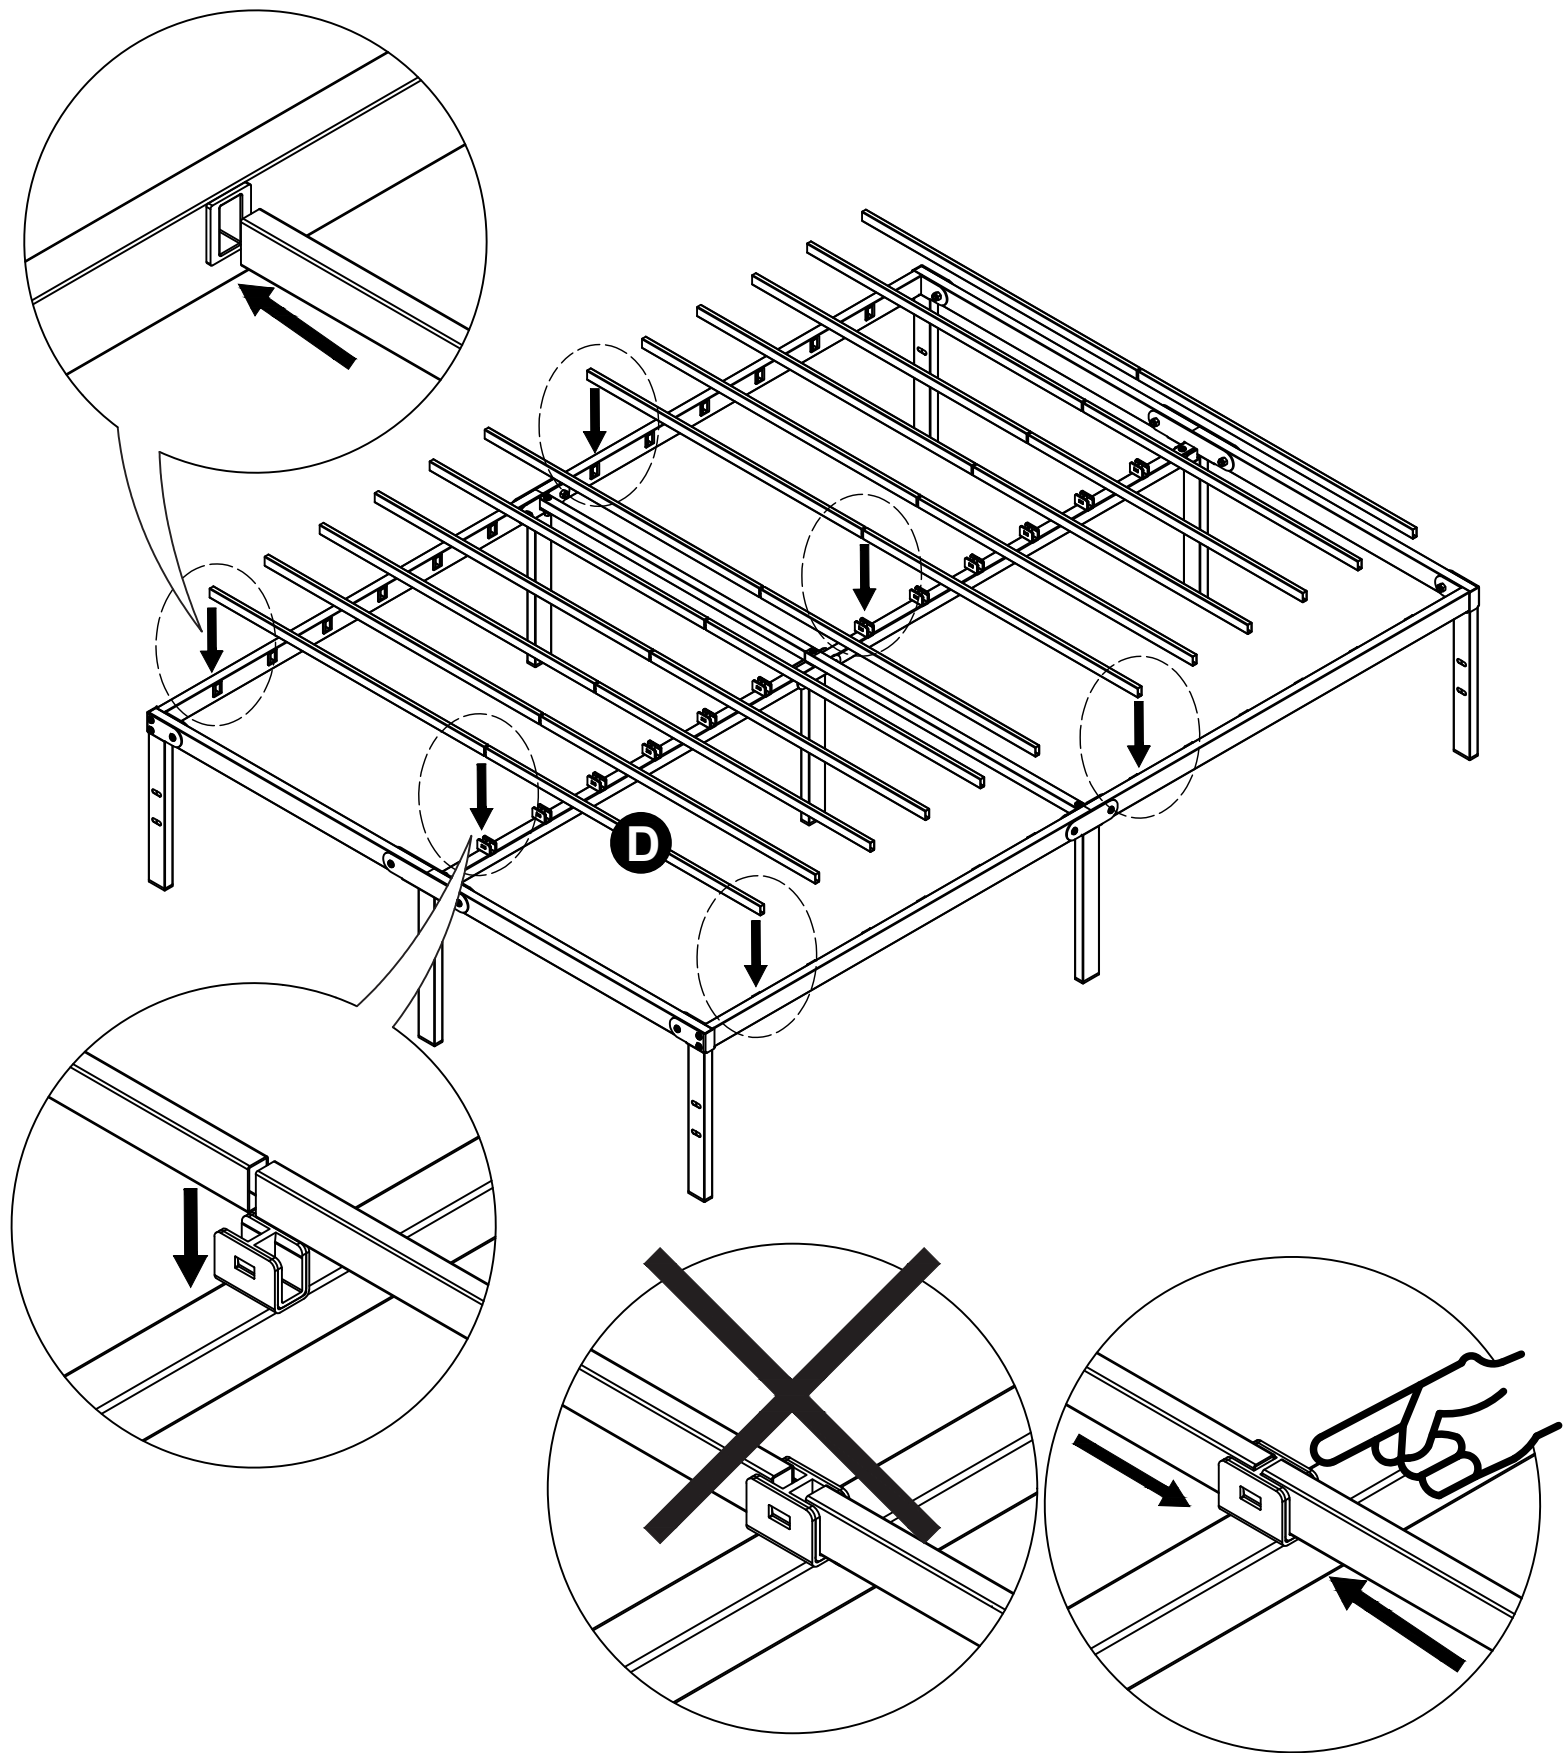

Insert Slats (D)*24 evenly onto each groove of the Frames (B&E)

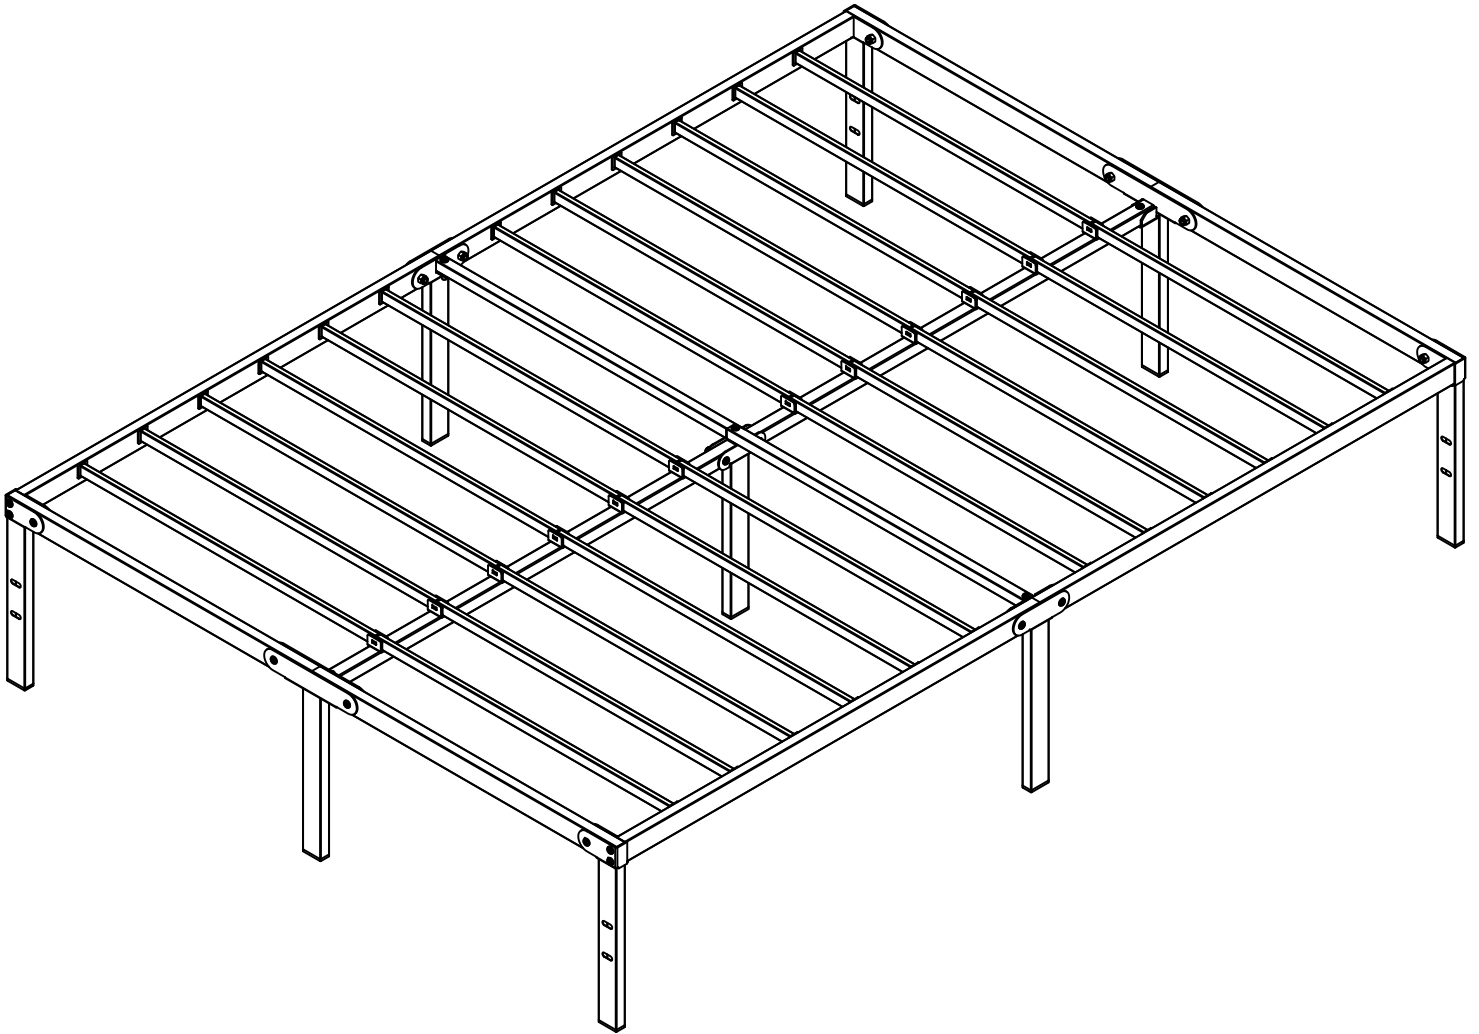

Technical Support

(909)637-7665 | (909)637-7593

Other Info

HJ-Customer-Service@outlook.com

Thank you for choosing this product. We strive to provide you with the best quality products and service in the industry. Should you have any issues, please don't hesitate to contact us.